



Instruction Book

使用說明手冊

사용 설명서

Sách Hướng Dẫn

 
Buku Petunjuk

คู่มือการใช้งาน







کتاب التعليمات





800 WET&DRY CORDLESS CLEANER


EW82U1DB / EFW81703

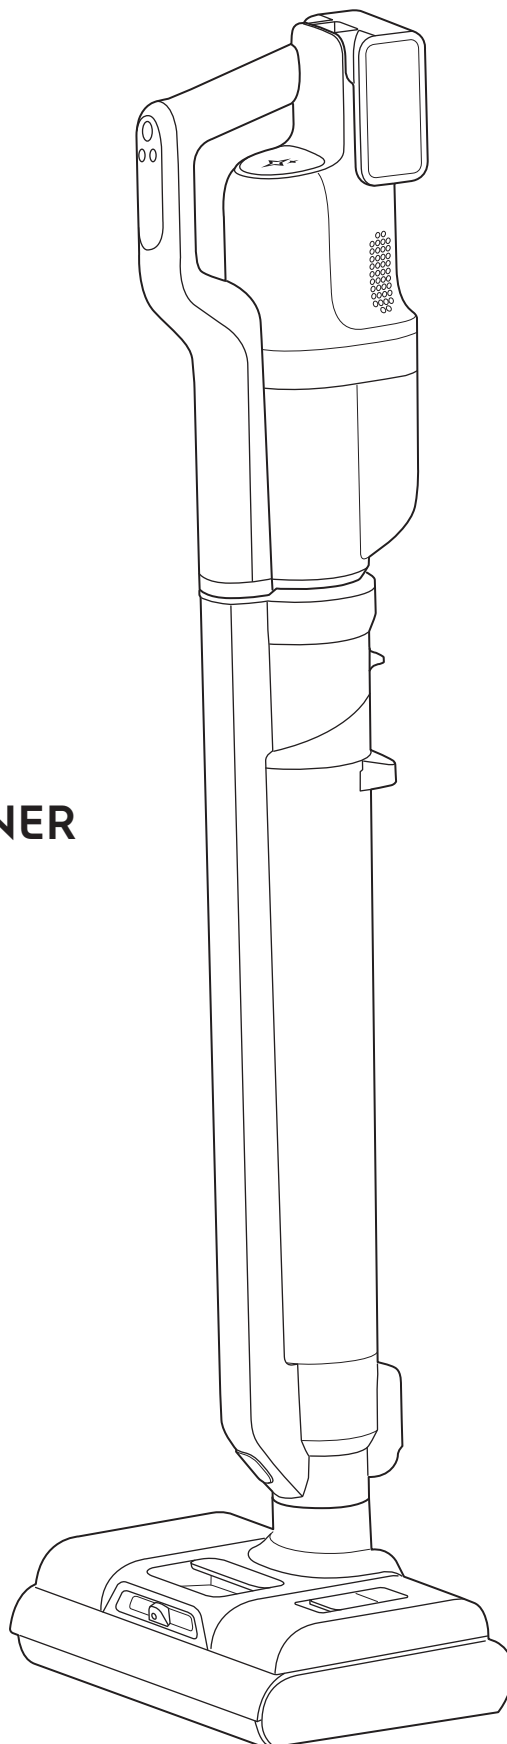

           *Actual product may differ from illustration.

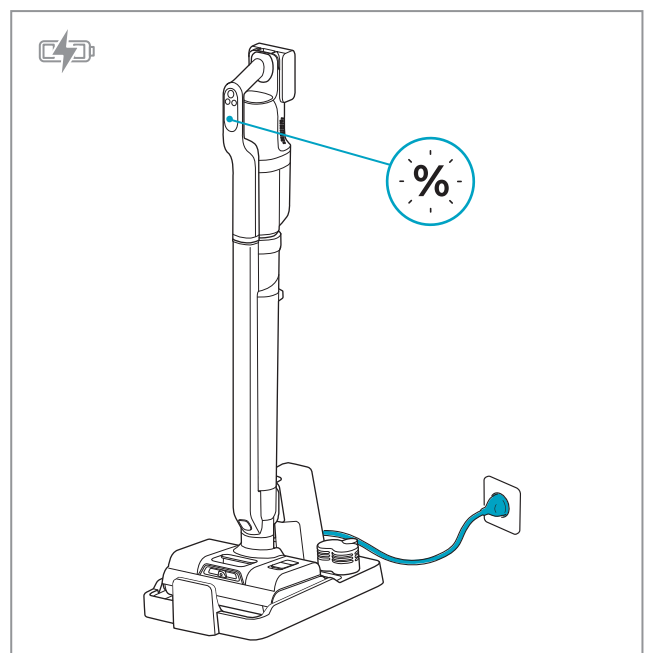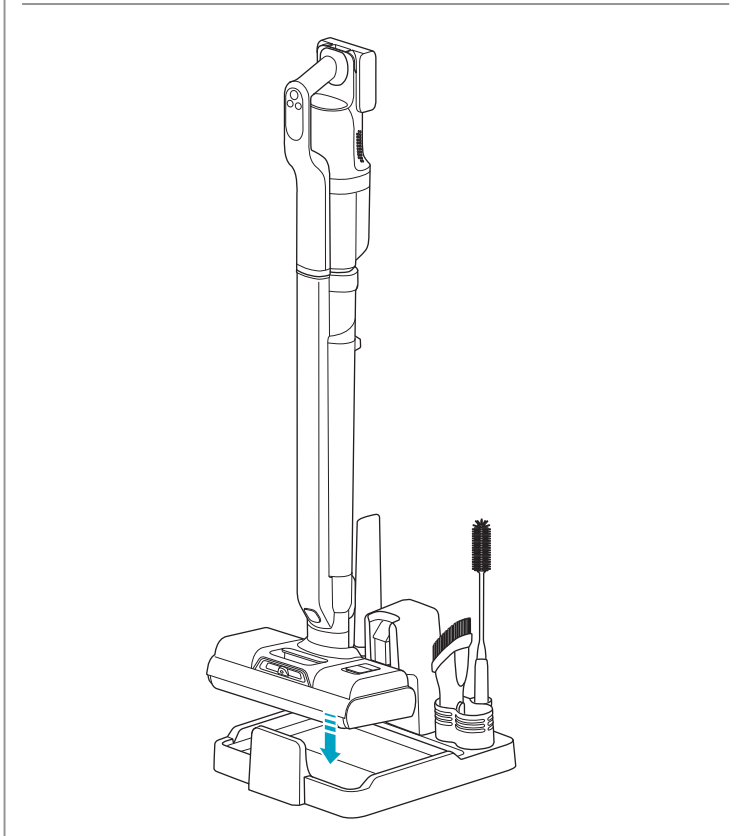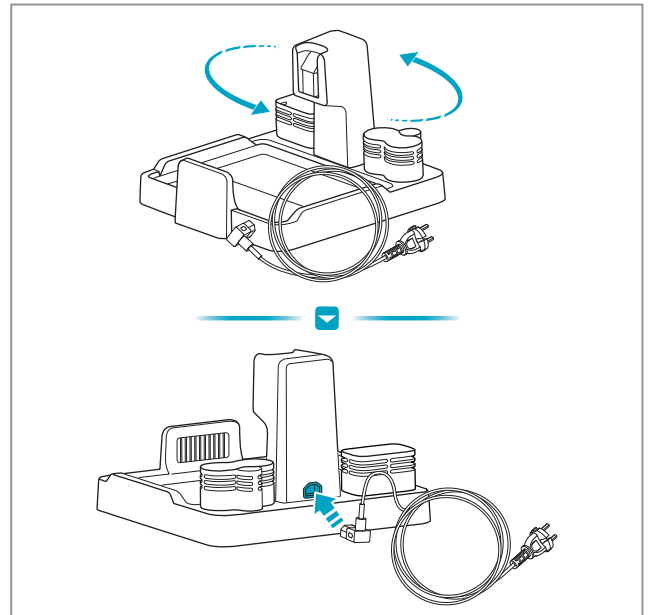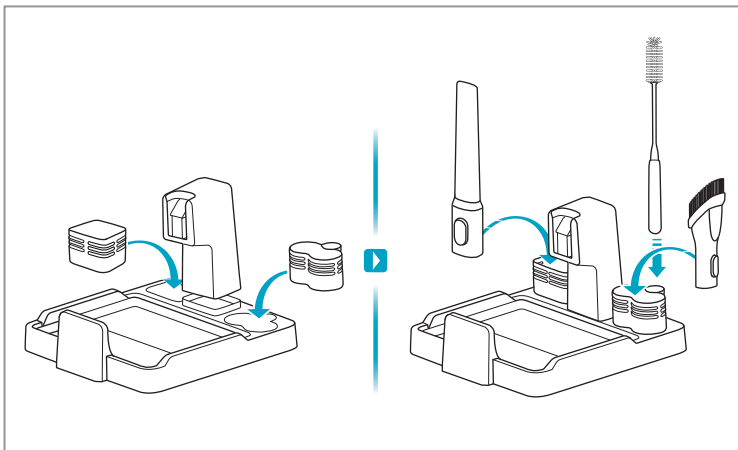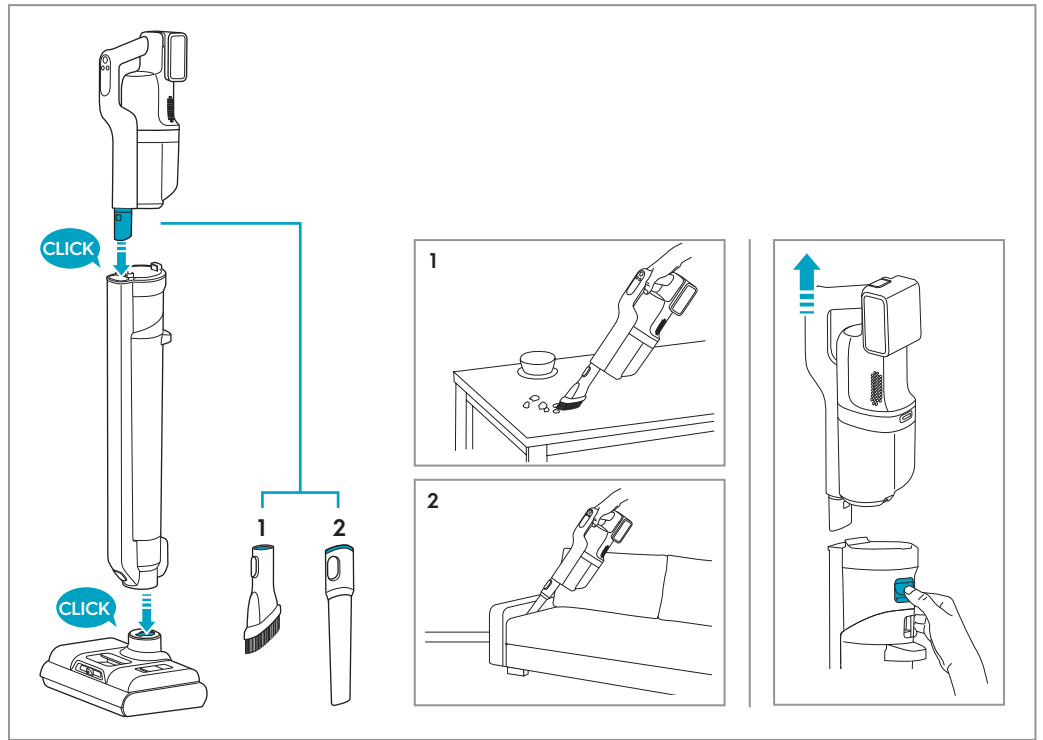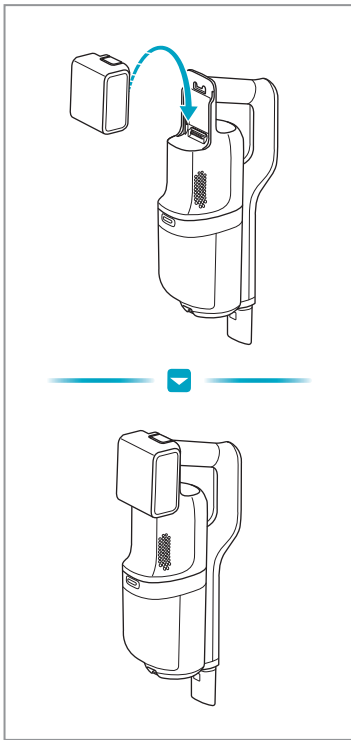

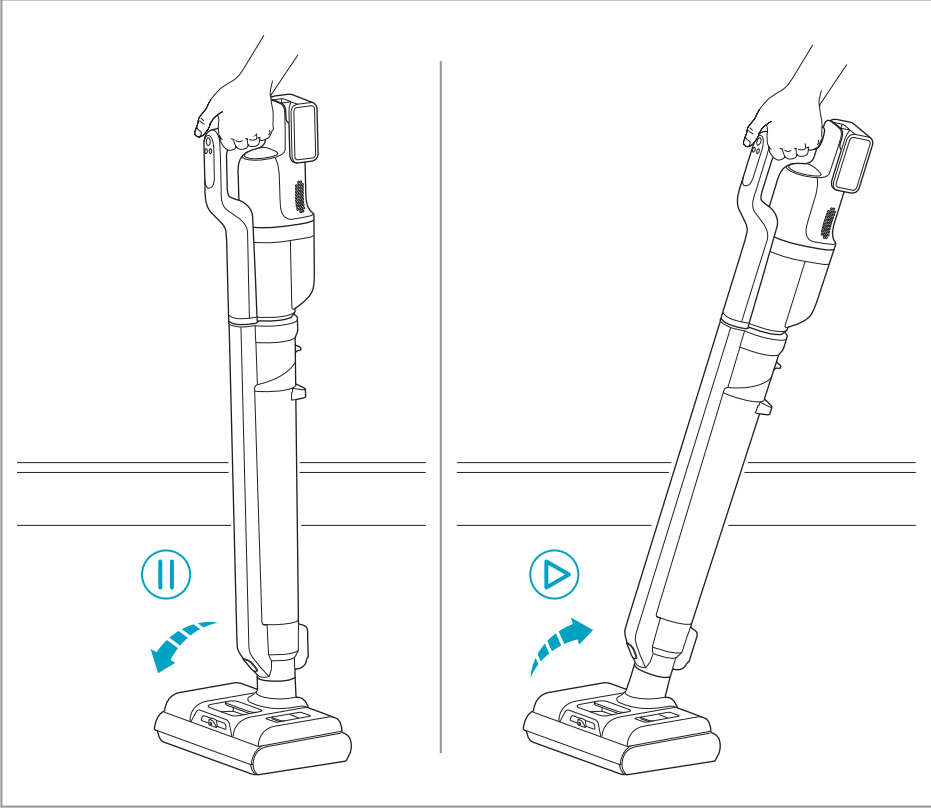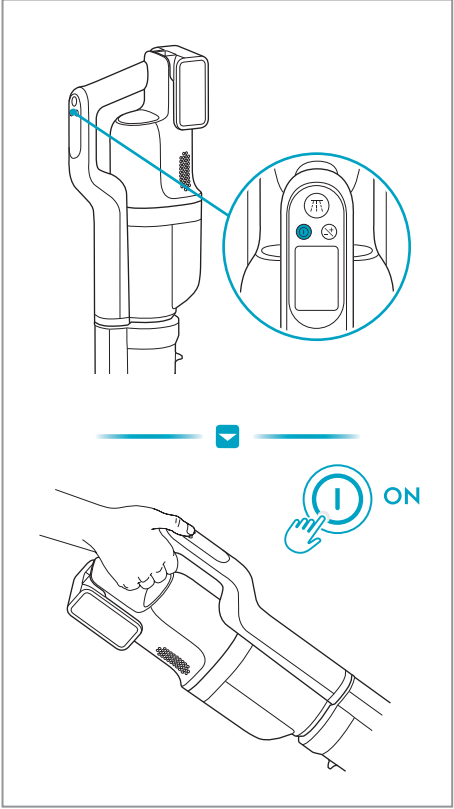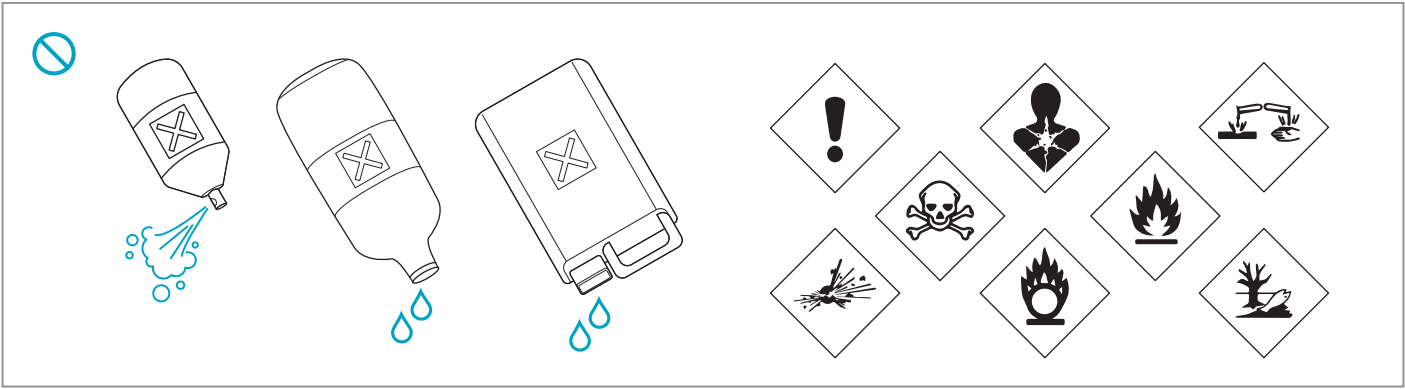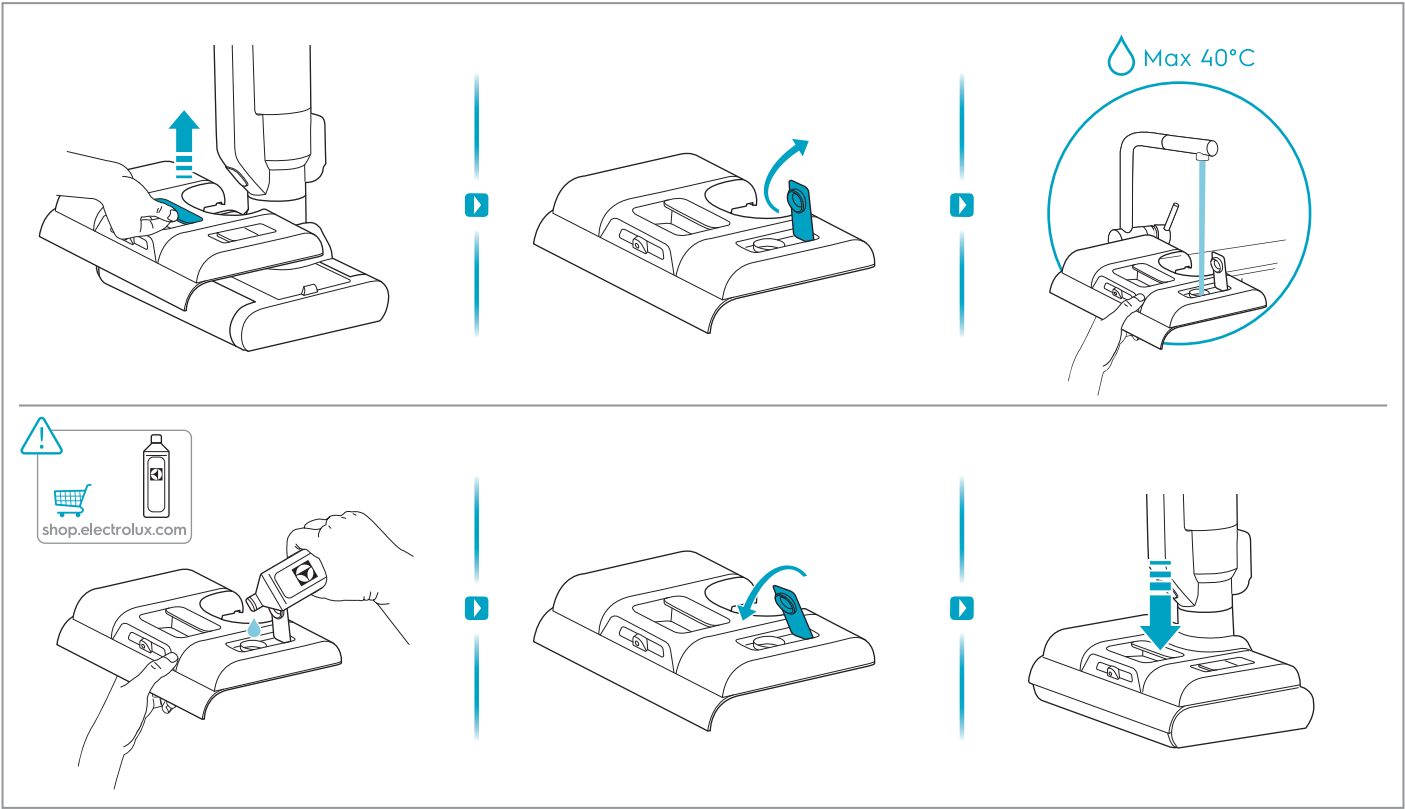

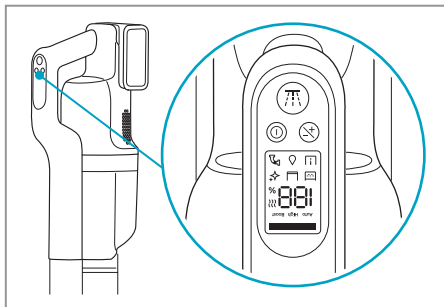

Auto	⚡ ⚡ ⚡	≤ 20%
High	⚡ ⚡	
Boost	⚡ ⚡ ⚡	
		Auto ✓ High ✗ Boost ✗

 
188

0-100%

MAX

!

!

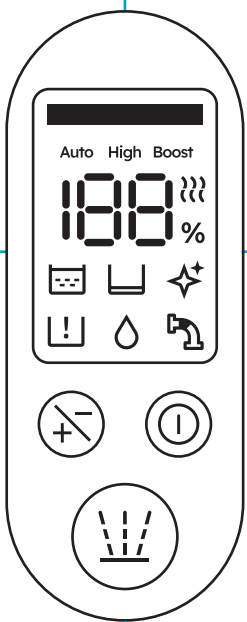

⚡ ⚡ ⚡

⏪ ⏩ ⏸

⌚ ≈ 3hrs

!

⏪

 
 
Δ ≈ 0%

⚡

⚡

MAX

ON OFF

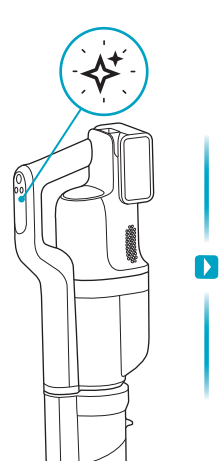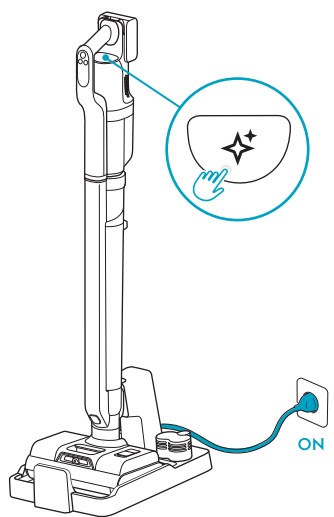

2mins

5mins

3hrs

 
 
 
⚡ ⚡ ⚡

 
 
 
 
 
 
 
 
 
 
 
 
⏪ ⏩ ⏸

✗

⚡ ⚡ ⚡ ≤ 20%


✗

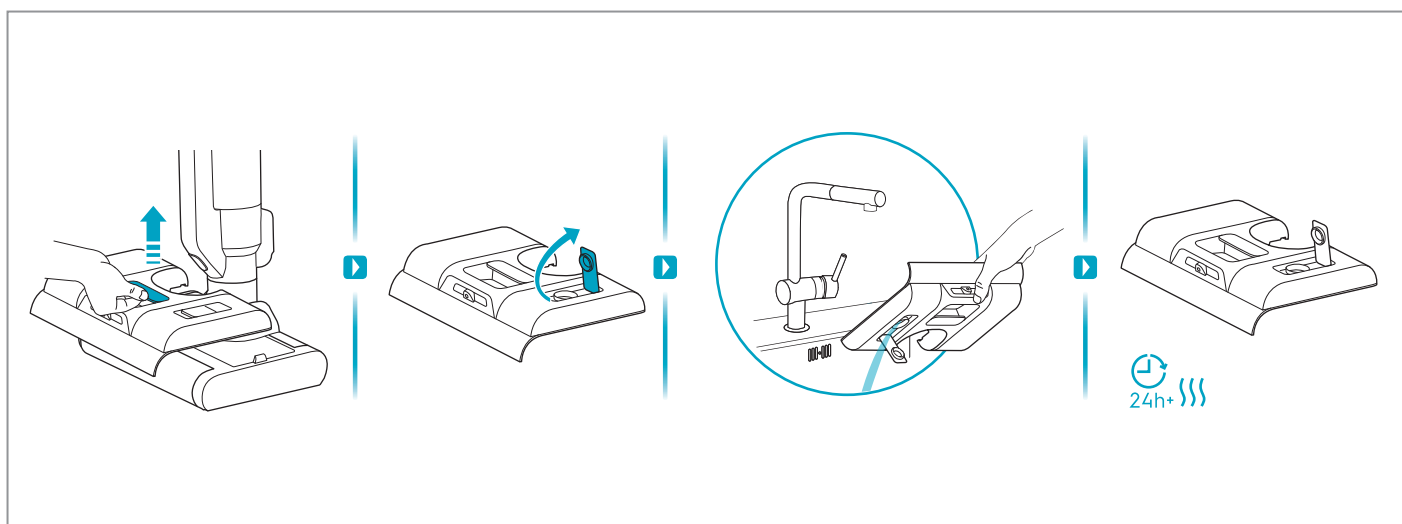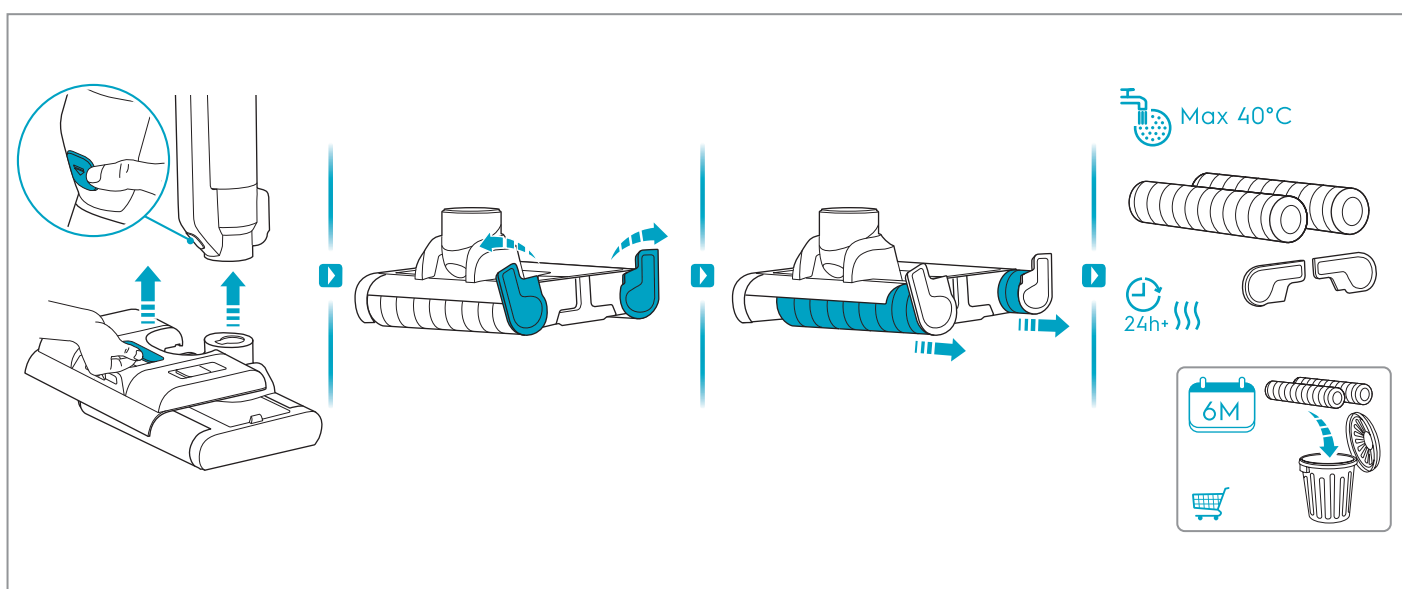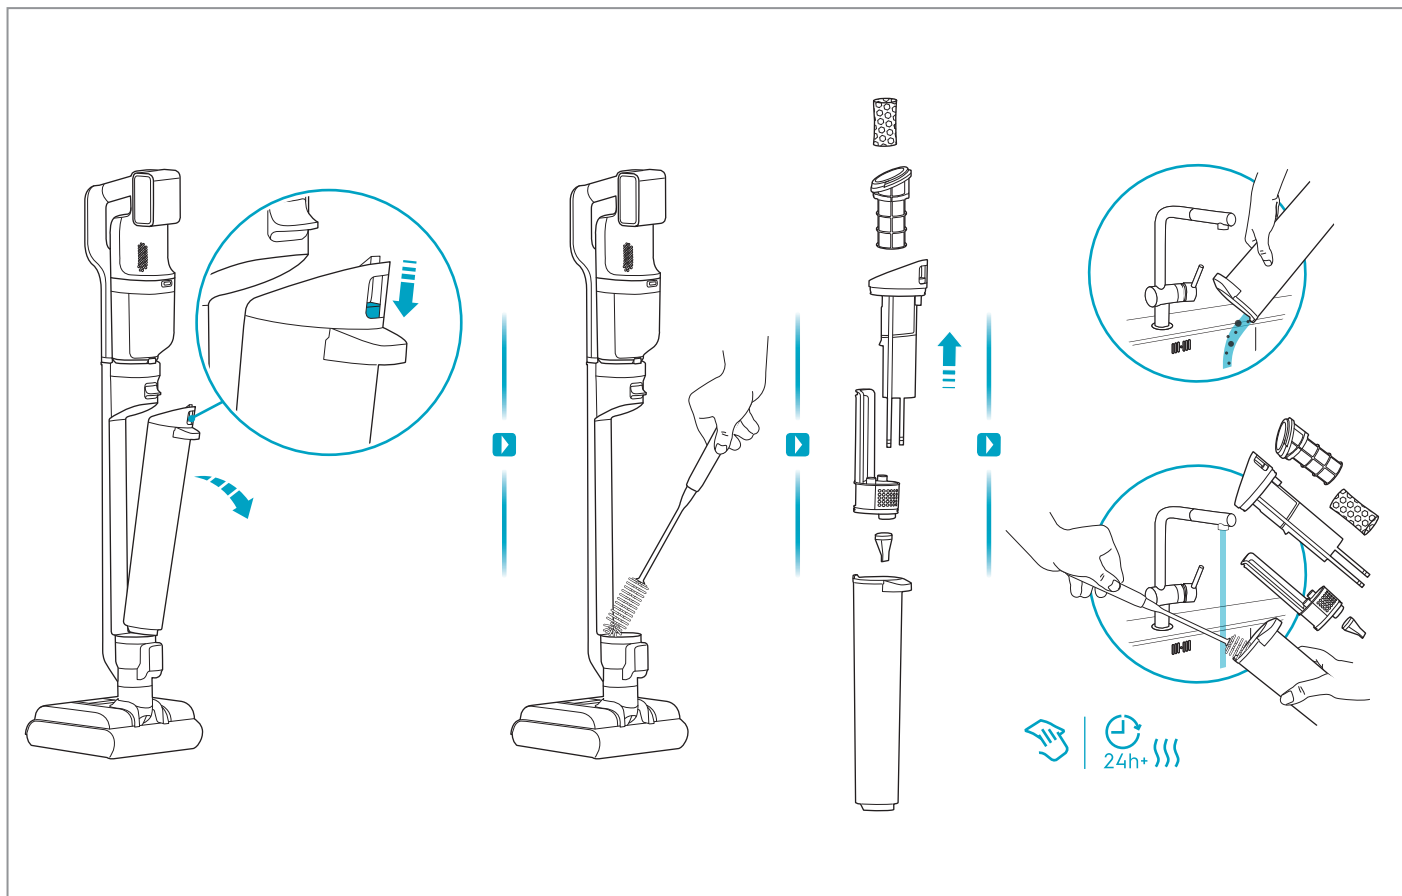

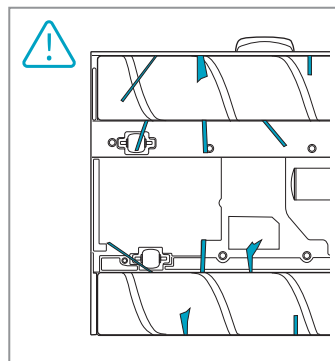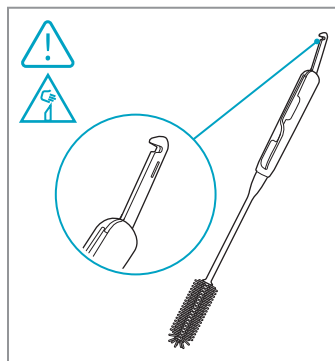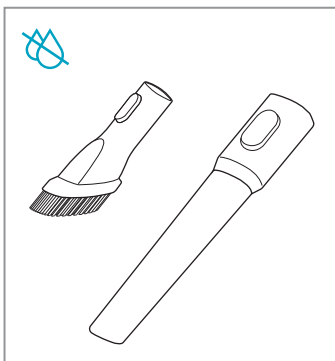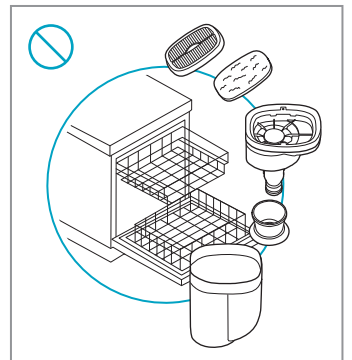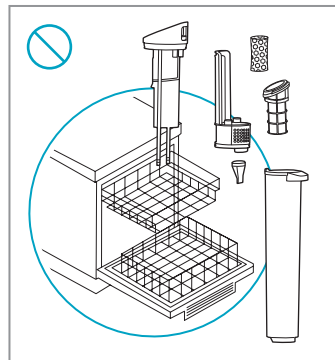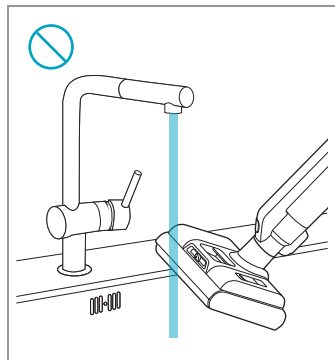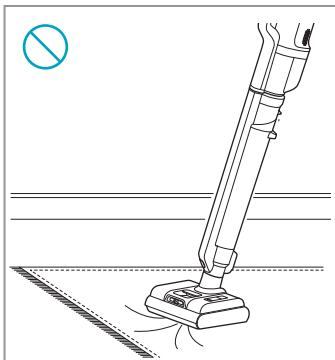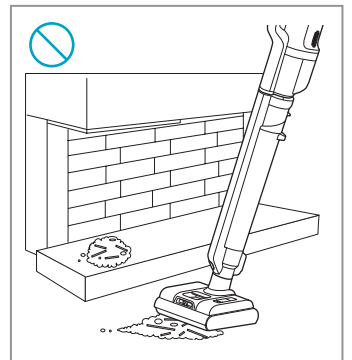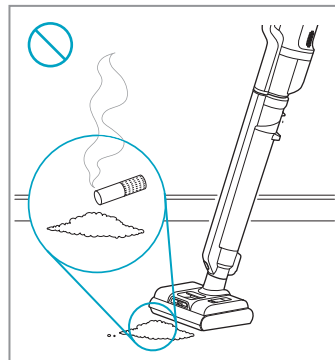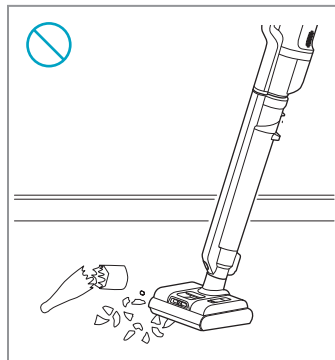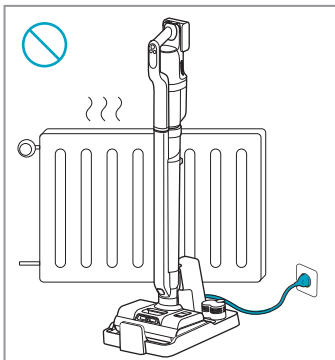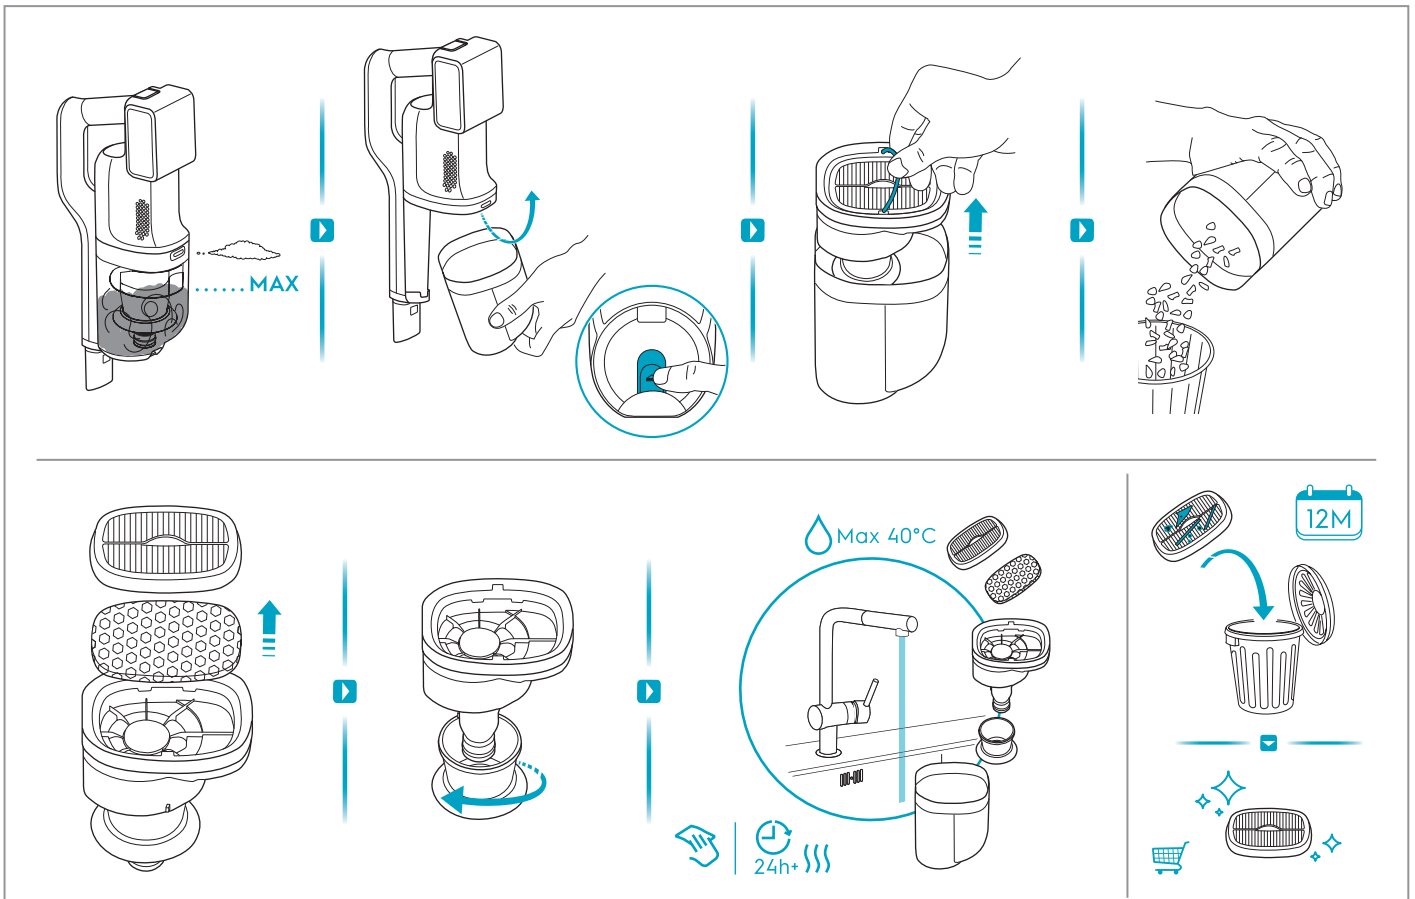




www.shop.electrolux.com

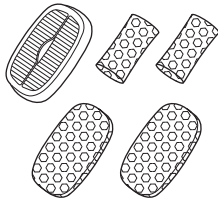 

Filter Kit

EF163

 
900 923 808



Brush Roll

ZE191

 
900 923 809



Detergent

EHFLC3 / FLD1

 900 923 819 / 900 923 782

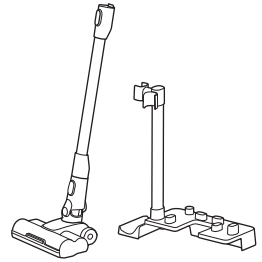

Multi-floor Nozzle Kit

KIT24

900 923 817

*Accessories may vary by market.



A28801011