



Electrolux

Instruction Book

UltimateTaste500

Air Fryer

E5AF1-500P



EN INSTRUCTION BOOK

TH คู่มือแนะนำการใช้งาน

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

Visit our website to:



Get usage advice, brochures, trouble shooter,
service information: www.electrolux.com



Register your product for better service:
www.electrolux.com/productregistration



Buy accessories and consumables for your appliance:
www.electrolux.com/shop

CUSTOMER CARE AND SERVICE

When contacting the service center, ensure that you have following data available. Model number, PNC, and serial number can be found on the rating plate.

Reference:

▼ Scan QR code to register www.electrolux.com

QR Code
15 x 15 mm



Electrolux

Model No.: E5AF1-500P
Product Desc.: Air Fryer
Product No.: 910 004 256
Type: AF-F4010
Volt, Freq.: 220-240V~50/60Hz
Power: 1350W

Serial No.: **YW00000**

Importer:
Electrolux Thailand Co.,Ltd.
Made in China



พณ. 1641-2552

Electrolux Thailand Co Ltd

14th Floor, 1910 New Petchburi Road, Bangkokpi, Huay Kwang, Bangkok, Thailand, 10310

Tel: +66 2 725 9100

Fax: +66 2 725 9299

Customer Care Services: +66 2 725 9000

Email: customercareshai@electrolux.com

Safety Advice

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are supervised or have received instruction concerning how to safely use the appliance and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be performed by children without supervision.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved by a person responsible for their safety. Children should be supervised to ensure that they don't not play with the appliance.

Please keep the air fryer and the power cord out of the reach of children less than 8 years.

This appliance is intended for normal household use only.

If the power cord is damaged or broken, it must be replaced by a service agent or similarly qualified persons to avoid safety hazards.

The accessible surfaces may become hot during use.

Do not cover the air inlet and the air outlet openings while the appliance is operating.

Always return the appliance to an authorized service center for examination or repair.

Do not attempt to repair the appliance yourself.

Do not place the appliance on or near a hot gas stove, any kind of electric stove, electric cooking plates or in a heated oven.

Always make sure that the plug is inserted into the socket properly.

Keep the mains cord away from hot surfaces or sharp objects to avoid damage.

Never put anything flammable, explosive or corrosive in the basket.

Do not excessively pinch, bend, twist or place heavy objects on the power cord to prevent from exposing or breaking its core.

Do not use the appliance if the plug, the main cord or the appliance itself is damaged.

Never start cooking without the basket being in place.

Do not fill up the basket above the "MAX" line in order to prevent food contact with the heating element. Do not touch the basket directly with your hands during or right after use to avoid getting scalded.

Do not use any plastic utensils or normal paper wrapping materials to wrap food for cooking.

Do not insert pins, wires or other objects into any of the openings of the air fryer to avoid an electrical shock or injury.


Please be sure to unplug the air fryer before cleaning or repairing it.

Do not move or shake the air fryer during use.

Do not insert any foreign objects into the safety switch to avoid any danger.


CAUTION: Hot surfaces. 

General Overview

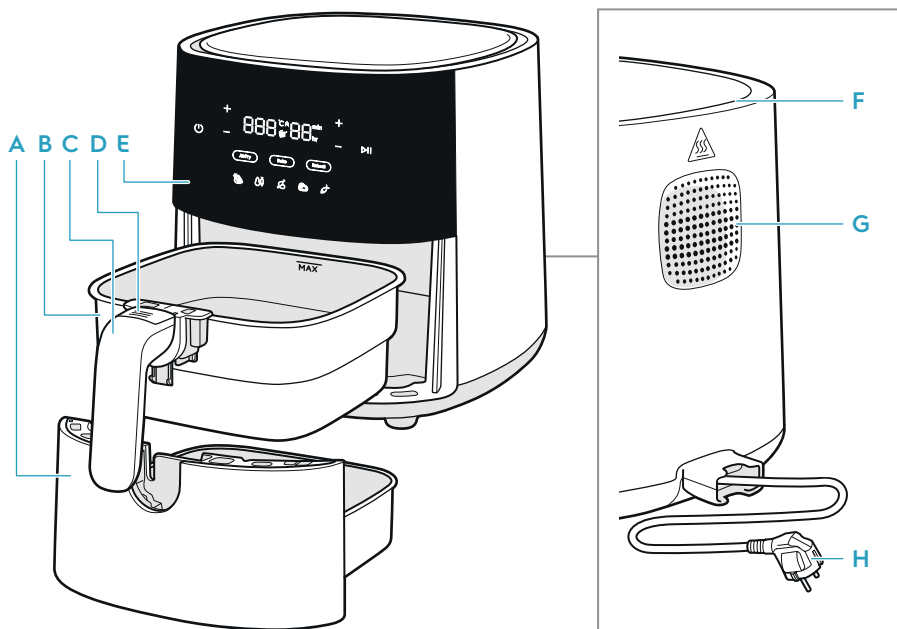


- | | | |
|------------------------|--------------------------------|---------------------|
| A Pan | D Basket release button | F Air inlet |
| B Basket | E Control panel | G Air outlet |
| C Basket handle | | H Main cord |


Accessories may vary from model to model

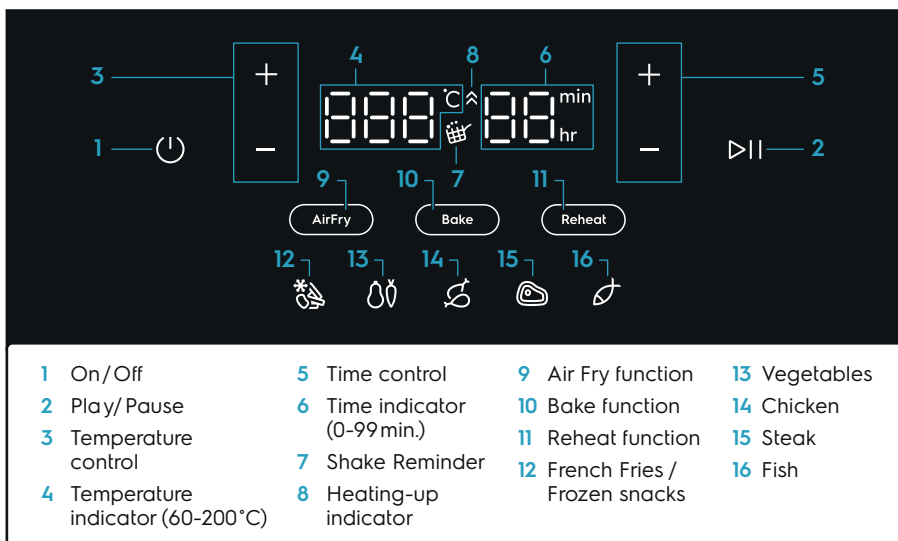

Before first use

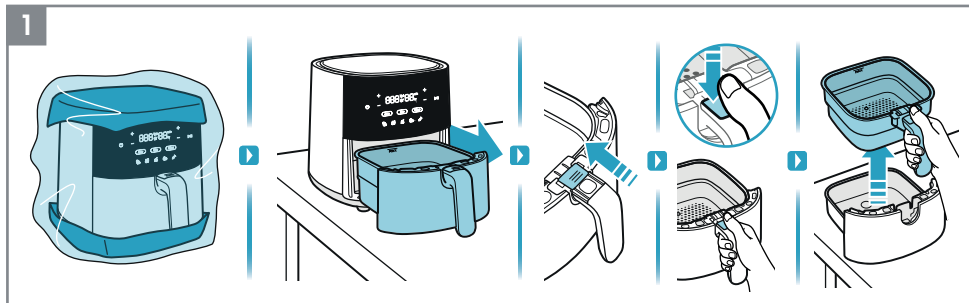


1. Remove all the packaging and protective material.

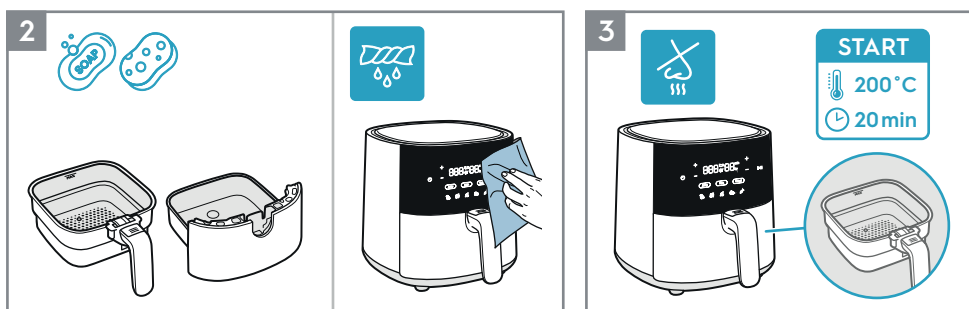


2. Clean the basket and pan with warm water and dish soap. Wipe inside and outside of the appliance with a soft cloth.
3. It is normal for a new unit to emit odors the first few times it is operated.
Run the empty air fryer at 200°C for 20 minutes before first use to avoid that.

How to use

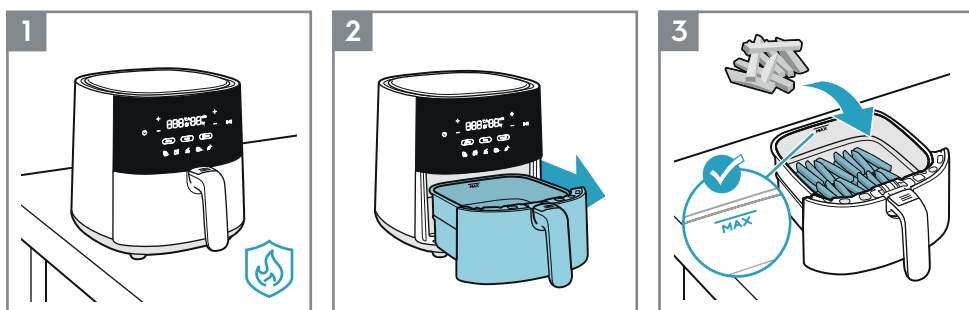


1. Place the appliance on a flat, stable and heat-resistance surface.
2. Pull out the pan and place it on a stable surface.
3. Put the food in the basket, observing the "MAX." capacity indication.

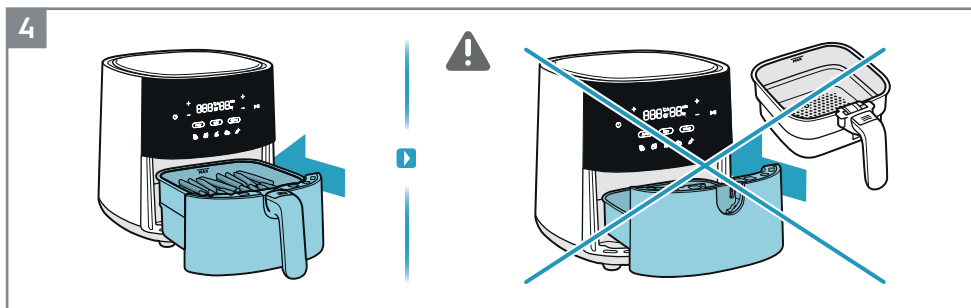

4. Push the pan with food completely back into the appliance.

CAUTION: Do not use the appliance without the basket.

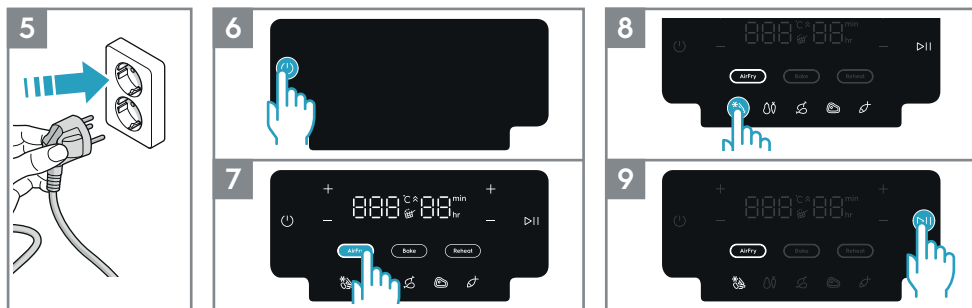


5. Plug in the appliance.

6. Press the On/Off button.

7. Select the desired cooking method. For example, Air Fry function.

8. Adjust the time and temperature to your taste or select one of the pre-set recipes. For example, French Fries.


9. Press the Play/Pause button.

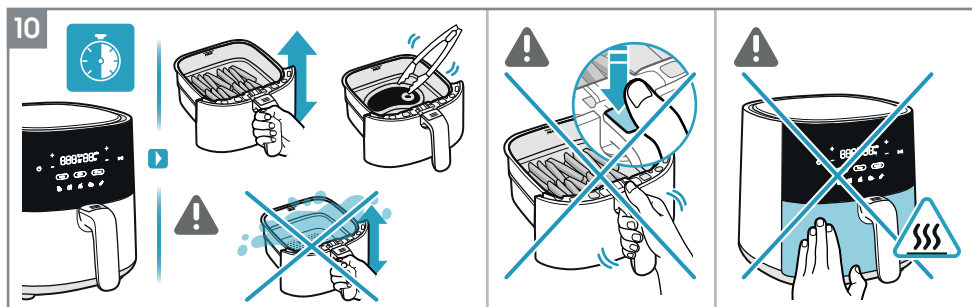

10. Depending on the type of ingredient, flip the food mid-cooking or every 7 minutes by using a heat-resistant tool or by just carefully shaking the food inside the basket. (see Cooking Guide).

⚠ CAUTION: Be careful not to press the "Basket Release Button" when shaking the food.

⚠ CAUTION: Be careful with hot surfaces when the appliance is in use.

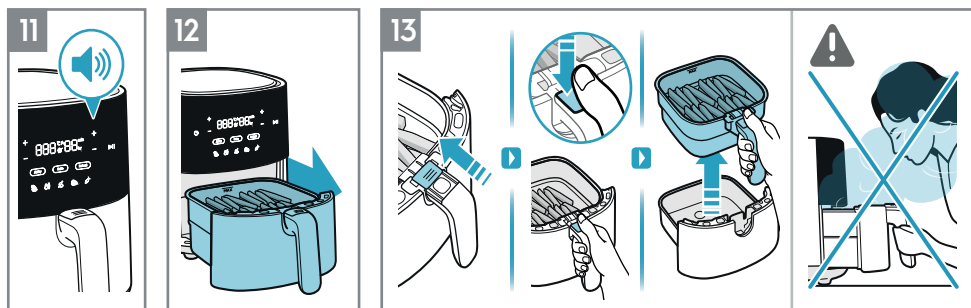


11. At the end of the cooking time, the appliance will issue a beep signal.

12. Carefully remove the pan and place it on a heat-resistant surface.

13. To remove the basket from the pan, follow these instructions:


- Slide the transparent button cover
- Press the "Basket Release Button"
- Lift the basket from the pan

⚠ CAUTION: Hot steam can come out of the basket when it is opened mid or at the end of cooking. Make sure your face, arms and hands are away from the steam when opening it.

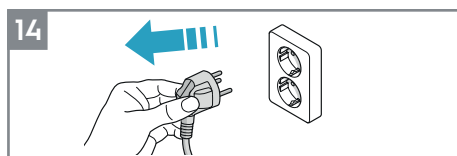

14. Unplug the appliance after using it.

Heating-up indicator

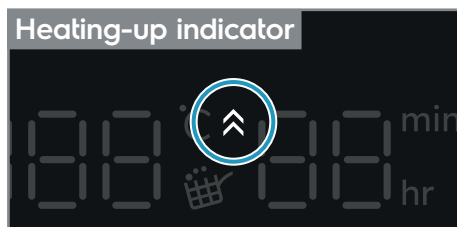


Heating-up indicator.

The "Heating-up indicator" is activated when the "Bake function" is selected, and it works as a pre-heat function so that the air fryer has the ideal temperature before cooking your favorite baked recipes. The timer only starts to count down once the pre-heating has finished.

If wished, you can skip the pre-heating step by tapping the "Play/Pause" button. The display will then show the target temperature, while the "Heating up indicator" icon will turn off and the timer will start to count down.

Shake Reminder

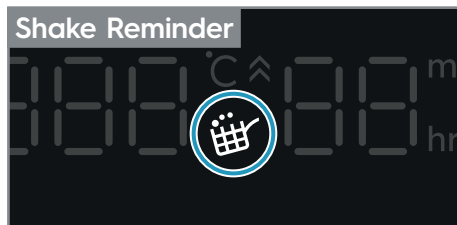


Shake Reminder

The "Shake Reminder" is activated during the pre-sets of some recipes, such as French Fries/Frozen Snacks, Vegetables and Chicken.

When it is time to shake or flip your food, the "Shake Reminder" icon will light up and blink for one minute, while a beep sound will repeat for three times.


The "Shake Reminder" is not mandatory, hence the cooking will continue as usual even if the food is not flipped or shaken.

Cooking Guide


						
	300-800g	15-30min	180°C	✓		
	300-800g	20-30min	180°C	✓		✓
	100-500g	10-20min	170°C	✓		✓
	100-400g	10 min	200°C		✓	
	100-200g	10 min	200°C		✓	
	100-500g	10-30 min	180°C		✓	
	100-500g	13-20 min	180°C		✓	
 Max 1.2kg	800-1200g	45-60 min	180°C		✓	
	100-500g	10-15 min	140°C		✓	
	100-500g	10 min	180°C		✓	
	25-50g each	10 min	170°C			

Cleaning

EN
TH

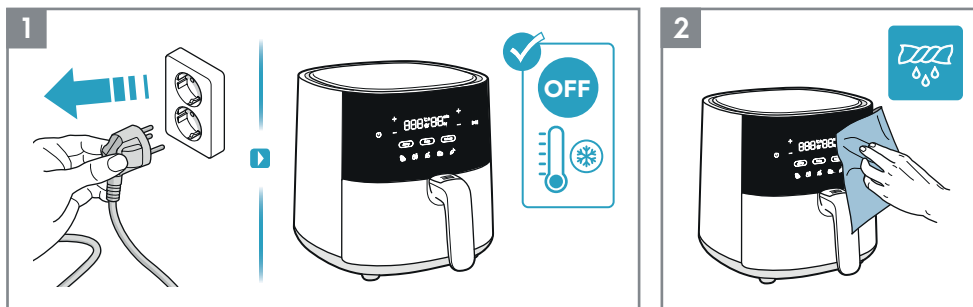


1. Always unplug the appliance and wait until it cools down before cleaning it.
2. Wipe the outside of the appliance with a soft cloth.

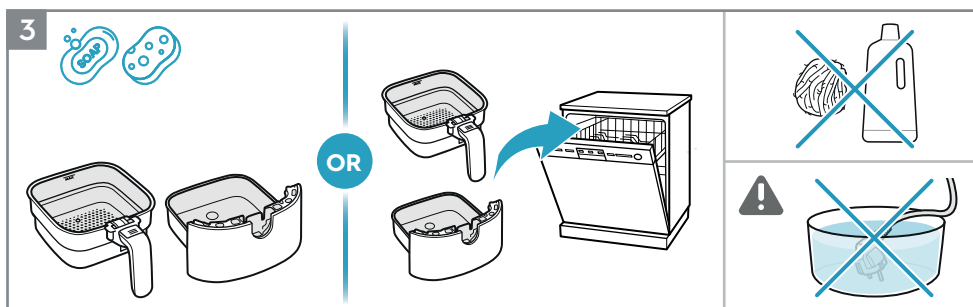

3. Clean the basket and pan with warm water and dish soap, or place them in the dishwasher.

NOTE: Avoid using abrasive cleaning products or metal tools in order to protect the non-stick coating.

CAUTION: Never submerge the product, its cord or plug in water or any other liquid.

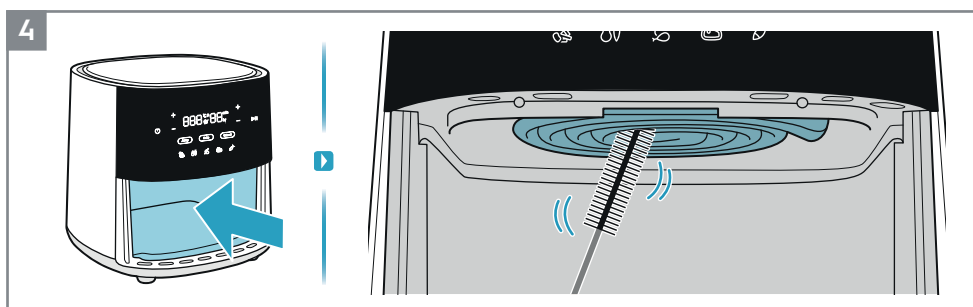

4. Clean the heating element with a cleaning brush.

NOTE: Ensure the appliance is completely cooled down before cleaning the heating element.

What to do if...

Problem	Check if...
You cannot activate or operate the appliance.	• The appliance is correctly connected to an electrical supply. • The basket and pan are in the correct position. Ensure they are completely pushed into the appliance to enable the electrical supply. • The cooking time is set.
You cannot slide the pan into the appliance.	• The basket is filled over its maximum capacity. • The basket is placed correctly. It has to click when you place it in the pan. • There's an object under the pan that is an obstacle to close it properly.
White smoke comes out of the appliance.	• The food you prepare is too greasy. • The pan and the basket are clean.
The display shows E1	• The temperature sensor is cutting out or disconnecting.
The display shows E2	• The temperature sensor has short-circuited.

* In case the display shows E1 or E2 error, the appliance must be repaired by a Service Center.

Disposal



This symbol on the product or on its packaging indicates that the product may not be treated as household waste. To recycle your product, please take it to an official collection point or to an Electrolux service center that can remove and recycle the battery and electric parts in a safe and professional way. Follow your country's rules for the separate collection of electrical products and rechargeable batteries.

Electrolux reserves the right to change products, information and specifications without notice.

เรากำลังคิดถึงคุณ

ขอขอบคุณที่เลือกซื้อเครื่องใช้ภายในบ้านของ Electrolux คุณได้เลือกผลิตภัณฑ์ที่มาพร้อมกับการรับประกันและนวัตกรรมอย่างมืออาชีพที่สั่งสมมานานนับสิบปี สร้างสรรค์และมีสไตล์ ออกแบบโดยคำนึงถึงคุณเป็นหลัก ดังนั้นเมื่อใดก็ตามที่คุณใช้ผลิตภัณฑ์ดังกล่าว คุณจะรู้สึกปลอดภัย เพราะรู้ว่าคุณจะได้ผลลัพธ์ที่ยอดเยี่ยมทุกครั้ง

ขอต้อนรับสู่ Electrolux

เยี่ยมชมเว็บไซต์ของเราที่:



รับคำแนะนำวิธีการใช้งาน โบรชัวร์ เครื่องมือแก้ปัญหา ข้อมูลบริการ:
www.electrolux.com



ลงทะเบียนผลิตภัณฑ์ของคุณเพื่อรับบริการที่ดีที่สุดขึ้น:
www.electrolux.com/productregistration



ซื้ออุปกรณ์เสริมสำหรับอุปกรณ์ของคุณ:
www.electrolux.com/shop

การดูแลและการให้บริการลูกค้า

เมื่อติดต่อศูนย์บริการ คุณต้องเตรียมข้อมูลต่อไปนี้ไว้ให้พร้อม:
หมายเลขรุ่น, PNC, และหมายเลขเครื่องที่อยู่บนแผ่นป้ายระบุ

การอ้างอิง:

▼ Scan QR code to register

www.electrolux.com

QR Code

15 x 15 mm



Electrolux

Model No.: E5AF1-500P

Product Desc.: Air Fryer

Product No.: 910 004 256

Type: AF-F4010

Volt, Freq.: 220-240V~50/60Hz

Power: 1350W

Serial No.: **YW00000**



Importer:
Electrolux Thailand Co.,Ltd.
Made in China

มอก. 1641-2552

Electrolux Thailand Co Ltd

14th Floor, 1910 New Petchburi Road, Bangkokpi, Huay Kwang, Bangkok, Thailand, 10310

Tel: +66 2 725 9100

Fax: +66 2 725 9299

Customer Care Services: +66 2 725 9000

Email: customercarethai@electrolux.com

คำแนะนำด้านความปลอดภัย

อุปกรณ์นี้สามารถใช้โดยเด็กอายุตั้งแต่ 8 ปีขึ้นไปและบุคคลที่มีความบกพร่องทางร่างกาย ทางประสาทรับรู้หรือทางจิตใจ รวมถึงผู้ที่ขาดประสบการณ์และความรู้ หากไม่มีผู้ดูแลหรือผู้ให้คำแนะนำในการใช้อุปกรณ์อย่างปลอดภัย และเข้าใจถึงอันตรายที่เกี่ยวข้อง ห้ามเด็กเล่นกับอุปกรณ์ ห้ามเด็กทำความสะอาดและบำรุงรักษาอุปกรณ์โดยไม่มีผู้ปกครองคอยดูแล

อุปกรณ์นี้ไม่ได้มีไว้สำหรับการใช้งานโดยบุคคล (รวมถึงเด็ก) ที่มีความบกพร่องทางร่างกาย ทางประสาทรับรู้หรือทางจิตใจ รวมถึงผู้ที่ขาดประสบการณ์และความรู้ หากไม่มีผู้ดูแลหรือผู้ให้คำแนะนำในการใช้อุปกรณ์อย่างปลอดภัย และหากไม่เข้าใจถึงอันตรายที่เกี่ยวข้อง เด็กควรมีคนคอยดูแล เพื่อรับประกันว่าเด็กจะไม่เล่นกับอุปกรณ์

เก็บหม้อกอดโร้มน้ำมันและสายไฟให้พ้นจากมือเด็กที่อายุไม่ถึง 8 ปี อุปกรณ์ผลิตขึ้นเพื่อใช้ภายในครัวเรือนเท่านั้น

หากสายไฟชำรุดเสียหาย ผู้ที่มีหน้าที่เปลี่ยนคือศูนย์บริการ หรือบุคลากรผู้เชี่ยวชาญเพื่อป้องกันอันตรายที่เกี่ยวข้องกับความปลอดภัย

พื้นผิวส่วนที่เข้าถึงได้อาจร้อนระหว่างการใช้งาน

ห้ามปิดกั้นช่องลมเข้าและออกในขณะที่กำลังใช้เครื่อง

นำเครื่องไปยังศูนย์บริการที่ได้รับอนุญาตเพื่อตรวจสอบหรือซ่อมแซมเสมอ อย่าพยายามซ่อมเครื่องด้วยตัวคุณเอง

ห้ามวางเครื่องไว้บนหรือใกล้กับเตาแก๊สร้อน เตาไฟฟ้าทุกชนิด เตาไฟฟ้า หรือในเตาอบที่อุ่น ต้องเสียบปลั๊กเข้ากับเต้ารับอย่างถูกต้อง

เก็บสายไฟให้ห่างจากพื้นผิวที่ร้อนหรือของมีคมเพื่อหลีกเลี่ยงความเสียหาย ห้ามวางวัตถุไวไฟ ระเบิด หรือวัตถุที่มีฤทธิ์กัดกร่อนลงในเตา

อย่าบับ จอ ปิด หรือวางของหนักบนสายไฟหากเกินไป เพื่อป้องกันไม่ให้แกนสายไฟปริหรือหัก

ห้ามใช้อุปกรณ์นี้หากปลั๊ก สายไฟหลัก หรือตัวเครื่องชำรุดเสียหาย ห้ามเริ่มทำอาหารหากยังไม่ใส่เตาถ้ำในตัวเครื่อง

อย่าเติมอาหารในเตาถ้ำเกินเส้น "MAX" เพื่อป้องกันไม่ให้อาหารสัมผัสกับส่วนประกอบที่ทำให้ความร้อน

อย่าให้มือแตะโดนเตาถ้ำในระหว่างหรือทันทีหลังการใช้งานเพราะเตาถ้ำที่ร้อนอาจทำให้มือพองได้

ห้ามใช้ภาชนะพลาสติกหรือวัสดุห่อที่ทำจากกระดาษธรรมดาเพื่อห่ออาหาร

อย่าเสียบหมุด สายไฟ หรือวัตถุอื่นๆ ในช่องเปิดใดๆ ของหม้อกอดโร้มน้ำมัน เพื่อป้องกันไฟฟ้าช็อตหรือการบาดเจ็บ

โปรดถอดปลั๊กหม้อกอดโร้มน้ำมันออกก่อนทำความสะอาดหรือซ่อมแซม


ห้ามเคลื่อนย้ายหรือเขย่าหม้อกอดโร้มน้ำมันขณะใช้งาน

อย่าใส่วัตถุแปลกปลอมเข้าไปในสวิตช์นิรภัยเพื่อหลีกเลี่ยงอันตรายที่อาจเกิดขึ้นได้

ข้อควรระวัง: พื้นผิวที่ร้อน



ภาพรวมทั่วไป

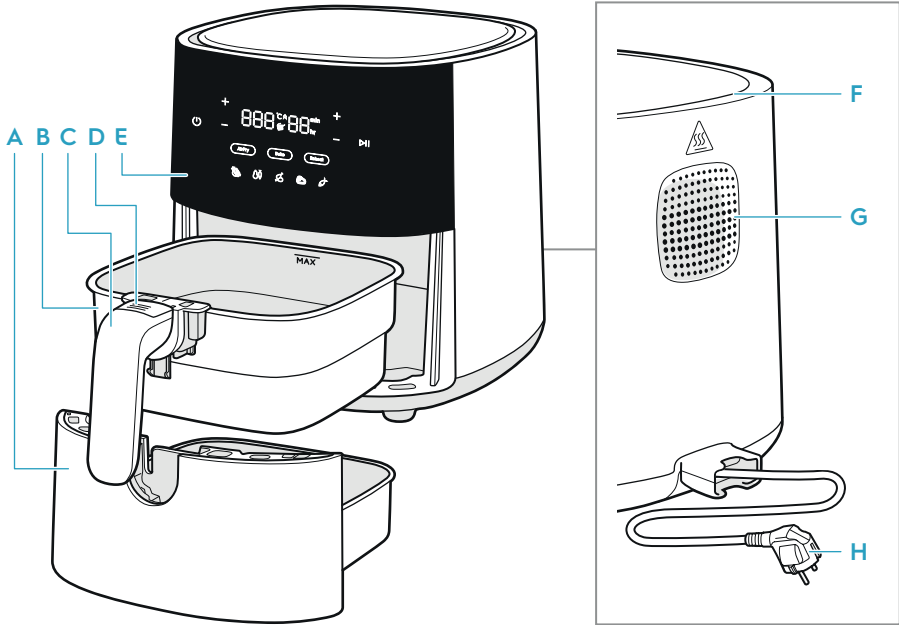

A กระตะ

B ตะกร้า

C มือจับตะกร้า

D ปุ่มปลดล็อกตะกร้า


E แผงควบคุม

F ช่องลมเข้า

G ช่องลมออก

H สายไฟ

อุปกรณ์เสริมอาจแตกต่างกันในแต่ละรุ่น

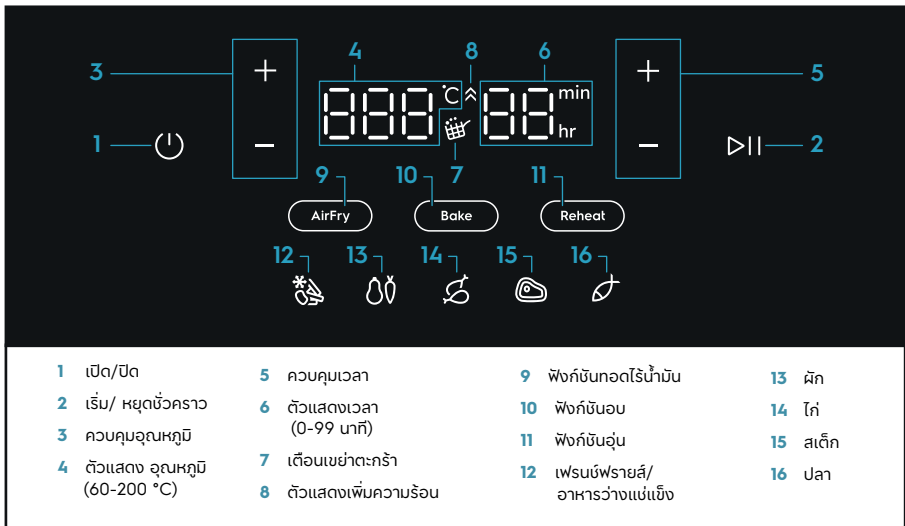

1 เปิด/ปิด

2 เริ่ม/หยุดชั่วคราว

3 ควบคุมอุณหภูมิ

4 ตัวแสดง อุณหภูมิ (60-200 °C)

5 ควบคุมเวลา

6 ตัวแสดงเวลา (0-99 นาที)

7 เติมน้ำมันตะกร้า

8 ตัวแสดงเพิ่มความร้อน

9 ฟังก์ชันทอดไร้น้ำมัน

10 ฟังก์ชันอบ

11 ฟังก์ชันอุ่น

12 เพรินต์ฟรายส์/อาหารว่างแช่แข็ง


13 ผัก

14 ไก่


15 สลัด

16 ปลา

ก่อนใช้งานครั้งแรก

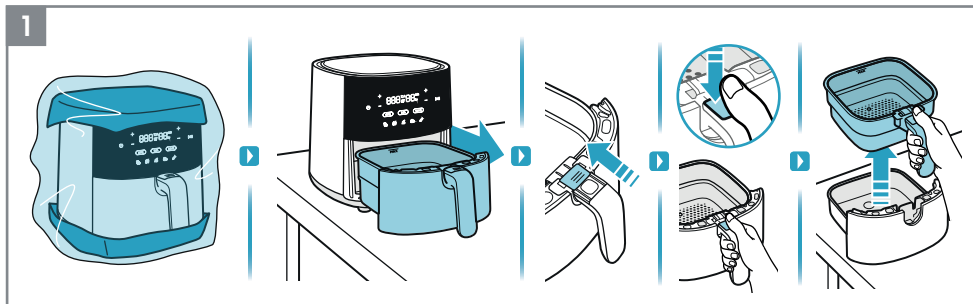


1. นำบรรจุภัณฑ์และวัสดุป้องกันออกทั้งหมด

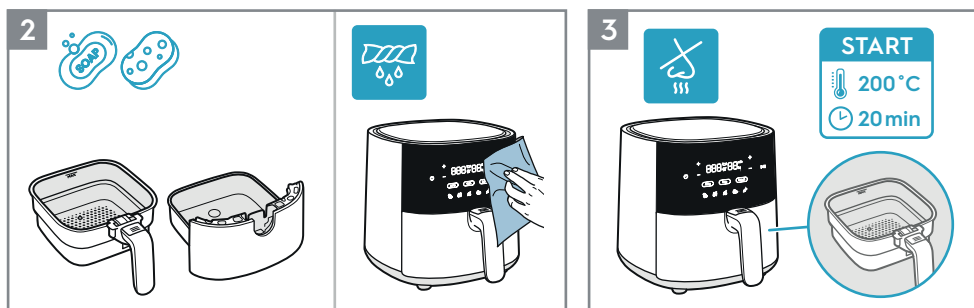

2. ทำความสะอาดตะกร้าและกระทะด้วยน้ำอุ่นและน้ำยาล้างจาน ก่อนใช้ปุ่มเปิดด้านในและด้านนอกของเครื่อง

3. เป็นเรื่องปกติที่เครื่องใหม่จะมีกลิ่นออกมาในสองสามครั้งแรกที่ใช้งาน ใช้หม้อทอดไร้น้ำมันขณะที่ยังไม่ใส่อาหารที่อุณหภูมิ 200 °C เป็นเวลา 20 นาทีก่อนใช้งานครั้งแรกเพื่อหลีกเลี่ยงปัญหาดังกล่าว


วิธีใช้งาน

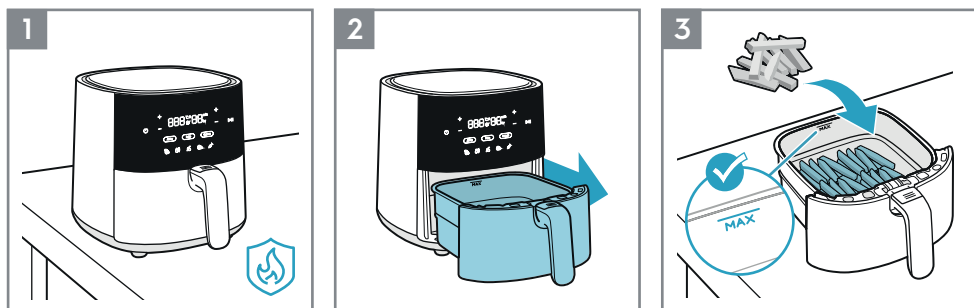

1. วางเครื่องบนพื้นผิวเรียบ มั่นคง และทนความร้อน


2. ดึงกระทะออกมาวางบนพื้นผิวที่มั่นคง

3. ใส่อาหารลงในตะกร้า โดยสังเกตที่ "MAX" ซึ่งบอกถึงระดับความจุสูงสุด

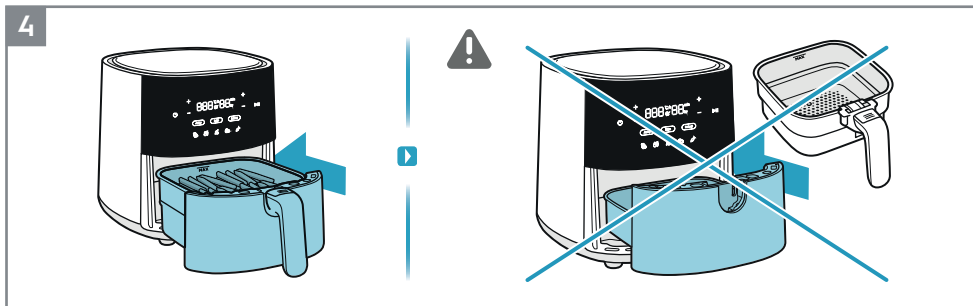

4. ตะกร้าที่มีอาหารกลับเข้าไปในเครื่องจนสุด

⚠ ข้อควรระวัง: ห้ามใช้เครื่องที่ยังไม่ได้ใส่ตะกร้า

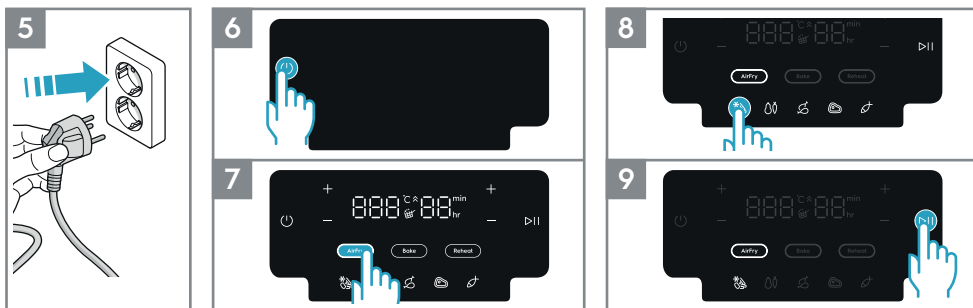


5. เสียบปลั๊กไฟของตัวเครื่อง

6. กดปุ่มเปิด/ปิด

7. เลือกวิธีการปรุงอาหารที่ต้องการ ตัวอย่างเช่น ฟังก์ชันทอดไอน้ำมัน

8. ปรับเวลาและอุณหภูมิตามที่คุณต้องการหรือเลือกสูตรในสูตรหนึ่งที่ตั้งไว้ล่วงหน้า ตัวอย่างเช่น เพรสชัฟรายส์


9. กดปุ่มเริ่ม/หยุดชั่วคราว

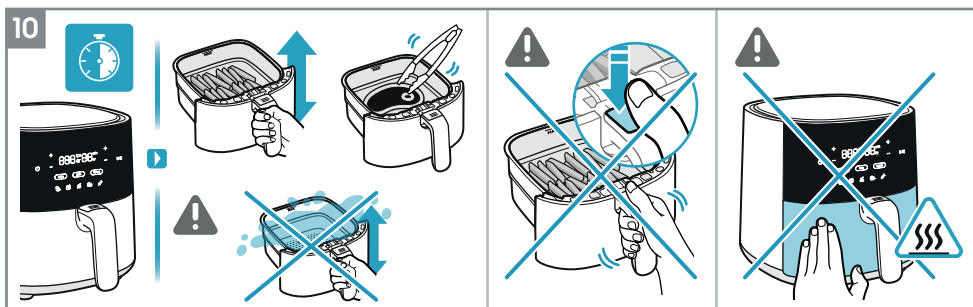

10. ใช้อุปกรณ์ที่ทนความร้อนเพื่อกลับด้านอาหารระหว่างปรุง หรือทุกๆ 7 นาที หรือเพียงแค่อยกๆ เขย่าอาหารในตะกร้า จะใช้วิธีการใดนั้นขึ้นอยู่กับประเภทและส่วนผสม (ดูคู่มือการปรุงอาหาร)

⚠ ข้อควรระวัง: ระวังอย่ากด "ปุ่มปลดล๊อคตะกร้า" ขณะเขย่าอาหาร

⚠ ข้อควรระวัง: ระวังพื้นผิวที่ร้อนขณะใช้งานเครื่อง

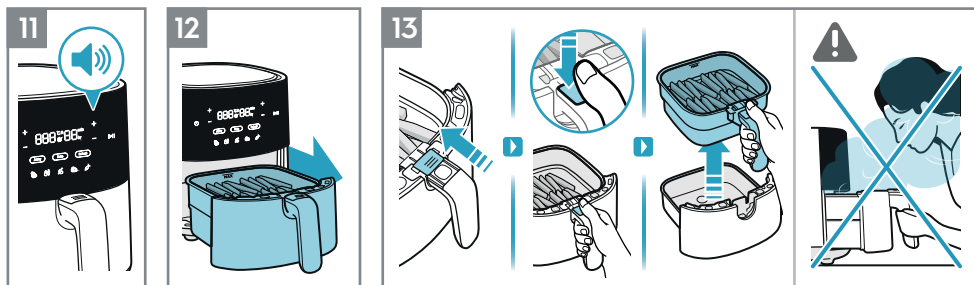


11. เมื่อปรุงอาหารครบตามเวลาที่กำหนด แล้ว เครื่องจะส่งสัญญาณเตือน

12. ค่อยๆ นำกระทะออกมา แล้ววางบนพื้นผิวที่ทนความร้อน

13. ในการถอดตะกร้าออกจากกระทะ ให้ทำตามขั้นตอนเหล่านี้


- เสือนฝาครอบปุ่มไปรงใส่
- กดปุ่มปลดล็อคตะกร้า
- ยกตะกร้าขึ้นจากกระทะ

⚠ **ข้อควรระวัง:** ไอร้อนอาจออกมาจากตะกร้าได้เมื่อเปิดตะกร้าขณะทำอาหารหรือเมื่อทำอาหารเสร็จแล้ว ต้องใช้ความระมัดระวัง ใบหน้า แขน และมือของคุณต้องอยู่ห่างจากไอน้ำเมื่อนำตะกร้าออกจากหม้อทอด

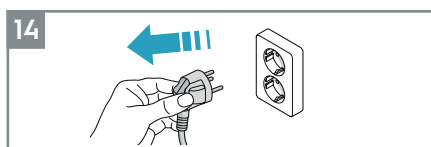

14. ถอดปลั๊กเครื่องหลังจากใช้งาน

Heating-up indicator

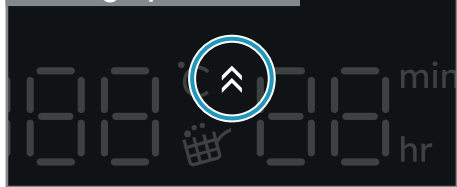


ตัวชี้วัดความร้อน

ตัวชี้วัดความร้อน จะถูกเปิดใช้งานเมื่อเลือก ฟังก์ชัน อบ และทำงานเป็นฟังก์ชันก่อนความร้อน เพื่อให้เครื่องทอดอากาศมีอุณหภูมิที่เหมาะสมก่อนที่จะทำสุรอบที่คุณ ตัวเวลาเริ่มนับลงเมื่อความร้อนล่วงหน้าสิ้นสุด

หากต้องการ คุณสามารถข้ามขั้นตอนการทำความร้อนล่วงหน้าได้โดยการแตะปุ่ม "เล่น/หยุด" จากนั้นจะแสดงอุณหภูมิเป้าหมาย ในขณะที่ไอคอน Heating up indicator จะปิดและไทมเมอร์จะเริ่มนับลง

Shake Reminder

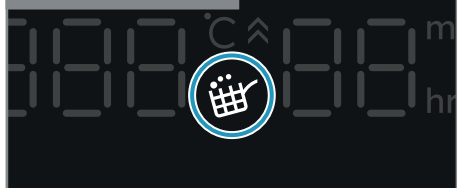

เตือนเขย่าตะกร้า

"เตือนเขย่าตะกร้า" จะทำงานระหว่างการตั้งค่าสูตรอาหารบางสูตรไว้ล่วงหน้า เช่น เฟรนช์ฟรายส์/อาหารว่างแช่แข็ง ผัก และไก่ เมื่อถึงเวลาเขย่าหรือกลับอาหารอีกด้านขึ้นมา ไอคอน "เตือนเขย่าตะกร้า" จะสว่างขึ้นและกะพริบหนึ่งนาที่ ขณะที่เสียงบีบจะดังซ้ำสามครั้ง


ไม่บังคับให้ต้องใช้ "เตือนเขย่าตะกร้า" ดังนั้น เครื่องจะปรุงอาหารต่อไปตาม ปกติ แม้ว่าจะไม่มีการกลับอาหารอีกด้านหรือเขย่าตะกร้า

คู่มือการปรุงอาหาร

EN
TH


						 น้ำมัน
 7 มบ./10 มบ.	300 - 800 ก.	15 - 30 นาที	180 °C			
 7 มบ.	300- 800 ก.	20 - 30 นาที	180 °C			
	100- 500 ก.	10 - 20 นาที	170 °C			
	100- 400 ก.	10 นาที	200 °C			
	100- 200 ก.	10 นาที	200 °C			
	100- 500 ก.	10 - 30 นาที	180 °C			
	100- 500 ก.	13 - 20 นาที	180 °C			
 ไม่เกิน 1.2กก.	800- 1200 ก.	45 - 60 นาที	180 °C			
	100- 500 ก.	10 - 15 นาที	140 °C			
	100- 500 ก.	10 นาที	180 °C			
	25- 50 ก. ต่อ ชั้น	10 นาที	170 °C			

การทำความสะอาด

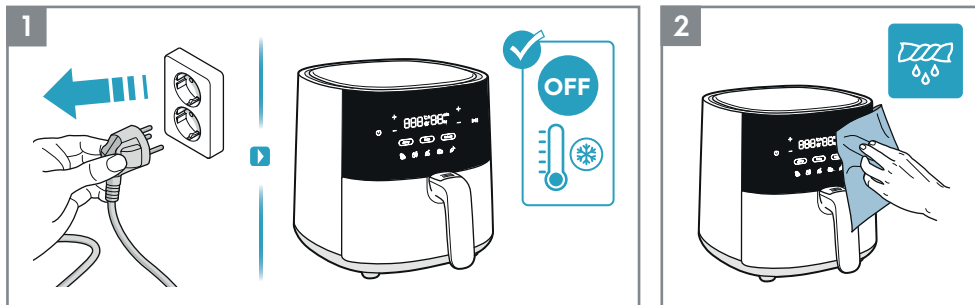

1. ถอดปลั๊กเครื่องออกทุกครั้ง และรอให้เครื่องเย็นลงก่อนทำความสะอาด


2. ใช้ผ้าชุบน้ำเช็ดด้านนอกตัวเครื่อง

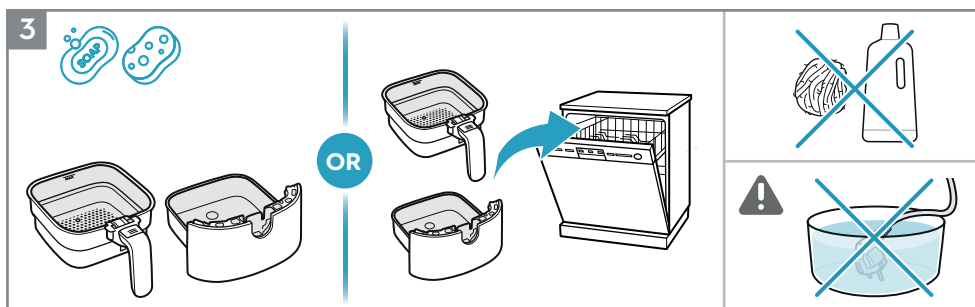

3. ทำความสะอาดตะแกรงและกระถางด้วยน้ำอุ่นและน้ำยาล้างจาน หรือใช้เครื่องล้างจาน

หมายเหตุ: หลีกเลี่ยงการใช้ผลิตภัณฑ์ทำความสะอาดที่มีฤทธิ์กัดกร่อนหรือเครื่องมือที่เป็นโลหะเพื่อรักษาสารเคลือบกันติด

⚠ ข้อควรระวัง: ห้ามจุ่มตัวเครื่อง สายไฟหรือปลั๊กไฟลงในน้ำหรือของเหลวอื่น

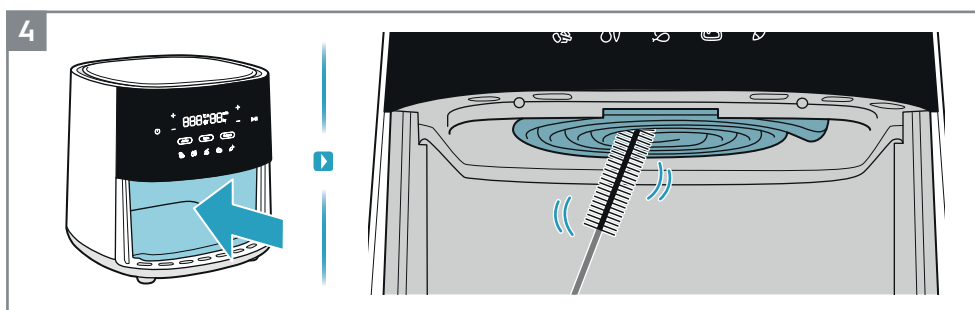

4. ใช้แปรงทำความสะอาดเพื่อทำความสะอาดส่วนประกอบที่ให้ความร้อน

หมายเหตุ: เครื่องต้องเย็นสนิทก่อนทำความสะอาดส่วนประกอบที่ให้ความร้อน

จะต้องทำอย่างไรถ้า...

ปัญหา	ตรวจสอบว่า...
คุณไม่สามารถเปิดหรือใช้เครื่อง	• เสียบปลั๊กเครื่องไม่ถูกต้อง • ตะกร้าและกระถางอยู่ในตำแหน่งที่ถูกต้อง ได้ติดตั้งตะกร้าและกระถางเข้าไปจนสุดเพื่อเปิดการทำงานของแหล่งจ่ายไฟ • ตั้งเวลาปรุงอาหารไว้เรียบร้อยแล้ว
คุณไม่สามารถเลื่อนกระถางเข้าไปในเครื่องได้	• มีอาหารอยู่ในตะกร้าเกินความจุสูงสุด • วางตะกร้าได้ถูกต้อง ตะกร้าจะต้องล็อกลงในกระถาง • อาจมีเศษอะไรบางอย่างติดอยู่ที่ใต้กระถาง ทำให้ปิดได้ไม่สนิท
มีควันสีขาวออกมาจากเครื่อง	• อาหารที่คุณเตรียมมันเย็นเกินไป • กระถางและตะกร้าต้องสะอาด
หน้าจอแสดง E1	• เช็ชเซอร์วัดอุณหภูมิติดการทำงานหรือติดการเชื่อมต่อ
หน้าจอแสดง E2	• เช็ชเซอร์วัดอุณหภูมิเกิดการลัดวงจร

* ในกรณีที่หน้าจอแสดงข้อผิดพลาด E1 หรือ E2 ต้องนำอุปกรณ์ส่งซ่อมที่ศูนย์บริการ

ข้อมูลเพื่อการรักษาสิ่งแวดล้อม

รีไซเคิลวัสดุที่มีสัญลักษณ์  ใส่บรรจุภัณฑ์ลงใน ทางขยะบรรจุที่เหมาะสมเพื่อนำไปรีไซเคิล ช่วย ปกป้องสิ่งแวดล้อมและสุขภาพของมนุษย์ และเพื่อ รีไซเคิลขยะอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์

อย่า ทิ้งอุปกรณ์ที่มีเครื่องหมายสัญลักษณ์  ร่วมกับ ขยะในครัวเรือน ส่งคืนผลิตภัณฑ์ไปยังโรงงาน รีไซเคิลในท้องถิ่น หรือติดต่อสำนักงานเทศบาลของคุณ

การดูแลและการให้บริการลูกค้า

เมื่อติดต่อฝ่ายบริการ คุณต้องเตรียมข้อมูลต่อไปนี้ไว้ให้พร้อม: **รุ่น, PNC, หมายเลขเครื่อง** โดยดูข้อมูลเหล่านี้ได้จากแผ่นป้ายระบุ

เนื่องจาก Electrolux มุ่งนโยบายที่จะพัฒนาผลิตภัณฑ์อย่างต่อเนื่อง ส่วนของข้อมูลจำเพาะ สีและรายละเอียดของผลิตภัณฑ์และที่ปรากฏในคู่มือนี้อาจเปลี่ยนแปลงได้โดยไม่ต้องแจ้งให้ทราบ

中国

伊莱克斯 (中国) 电器有限公司
上海市虹口区公平路168号
北外滩来福士广场办公楼30层
售后服务: +86 9510 5801
网站: www.electrolux.com.cn

台灣

新加坡商伊萊克斯股份有限公司 台灣分公司
105408 台北市松山區敦化南路一段3號4樓
免付費客服專線: 0800-888-259
電子信箱: service.tw@electrolux.com
網站: www.electrolux.com.tw

KOREA

Electrolux Korea limited
22F, Youngpoong Building, 41,
Cheonggyecheon-ro, Jongno-gu,
Seoul, Republic of Korea (03188)
Tel : +82 2 6020-2200
Fax: +82 2 6020-2271-3
Customer Care Services : +82 1566-1238
Email : homecare.krh@electrolux.com
Website: www.electrolux.co.kr

INDONESIA

PT. Electrolux Indonesia
Jalan Tanah Abang II No. 42,
Petojo Selatan, Gambir,
Jakarta Pusat 10160,
Indonesia
Tel: +62 21 5081 7303
Fax: +62 21 5081 8069
SMS/WA : 0811-8339-777
Customer Care Services: 0804111 9999
Email: customer-care@electrolux.co.id
Website: www.electrolux.co.id

PHILIPPINES

Electrolux Philippines, Inc.
12th Floor, Cyber Sigma Building
Lawton Avenue, McKinley West, Fort Bonifacio
Taguig City, Philippines 1634
Domestic Toll Free: 1-800-10-845-CARE (2273)
Customer Care Services: (02) 845-CARE (2273) /
(02)-8845-4663
Email: wecare@electrolux.com
Website: www.electrolux.com.ph

THAILAND

Electrolux Thailand Co Ltd
Electrolux Building
1910 New Petchburi Road
Bangkapi, Huay Kwang
Bangkok 10310
Thailand
Tel: +66 2 725 9100
Fax: +66 2 725 9299
Customer Care Services: +66 2 725 9000
Email: customer-care-thai@electrolux.com
Website: www.electrolux.co.th

VIETNAM

Electrolux Vietnam Ltd
Floor 10, Sofic Tower, 10 Mai Chi Tho,
Thu Thiem Ward,
Thu Duc City
Ho Chi Minh City
Vietnam
Tel: +84 8 3910 5465
Fax: +84 8 3910 5470
Customer Care Services: 1800-58-8899
Email: vn-care@electrolux.com
Website: www.electrolux.vn

MALAYSIA

Electrolux Home Appliances Sdn Bhd
Lot C6, No. 28, Jalan 15/22,
Taman Perindustrian Tiong Nam,
40200 Shah Alam, Selangor
Malaysia
Customer Careline: 1300-88-1122
Email: malaysia.customer-care@electrolux.com
Website: www.electrolux.com.my

SINGAPORE

Electrolux SEA Pte Ltd
351 Braddell Road #01-04
Singapore 579713
Customer Care Services: +65 6727 3699
Email: customer-care.sin@electrolux.com
Website: www.electrolux.com.sg

UAE

ELECTROLUX APPLIANCES
MIDDLE EAST DMCC,
P.O.BOX 336148, Unit No. 4001,
MAZAYA BUSINESS AVENUE B01,
JUMEIRAH LAKE TOWERS, Dubai,
United Arab Emirates