
Instruction Book

500 Fully Automatic
Espresso Machine


E5FC1-500W

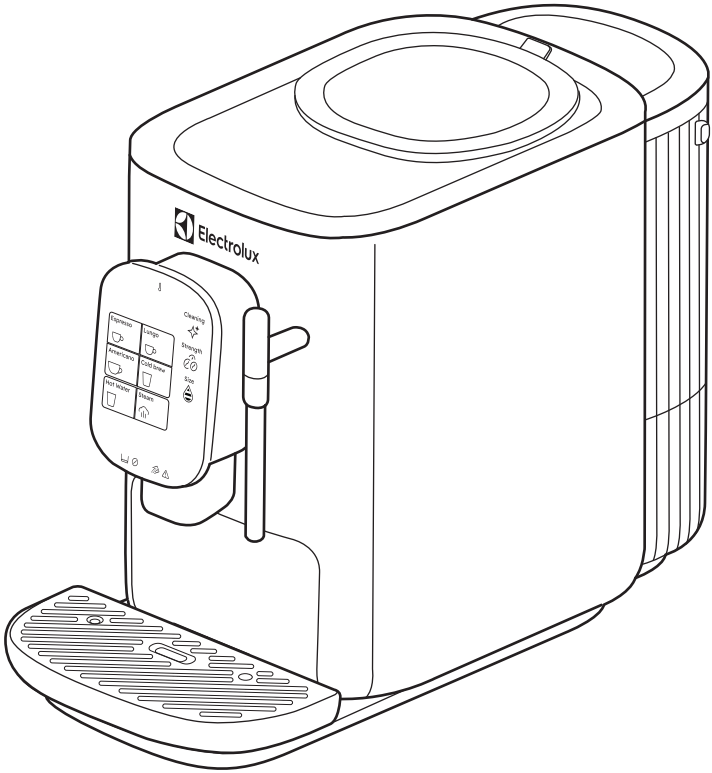


EN Instruction Book

TH คู่มือแนะนำการใช้งาน


*Actual product may differ from illustration.

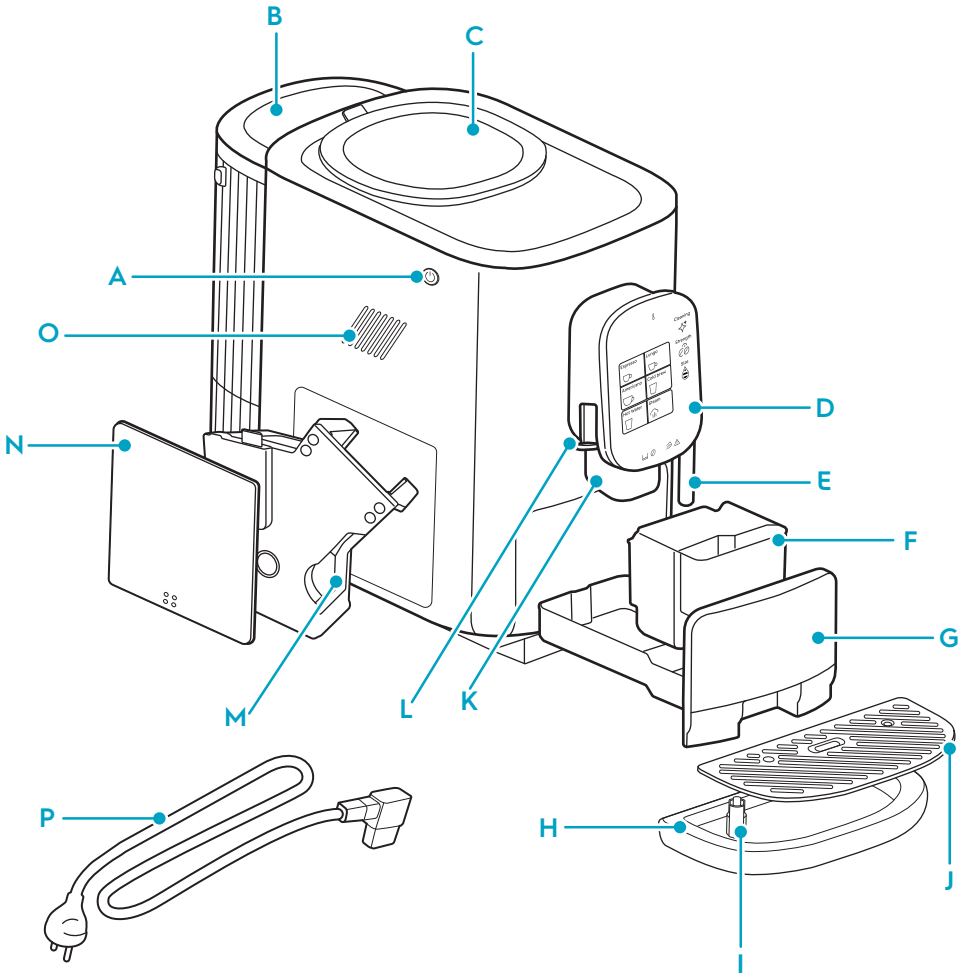
B
C
A
O
N
D
E
F
G
M
L
K
P
H
J
I


1-1

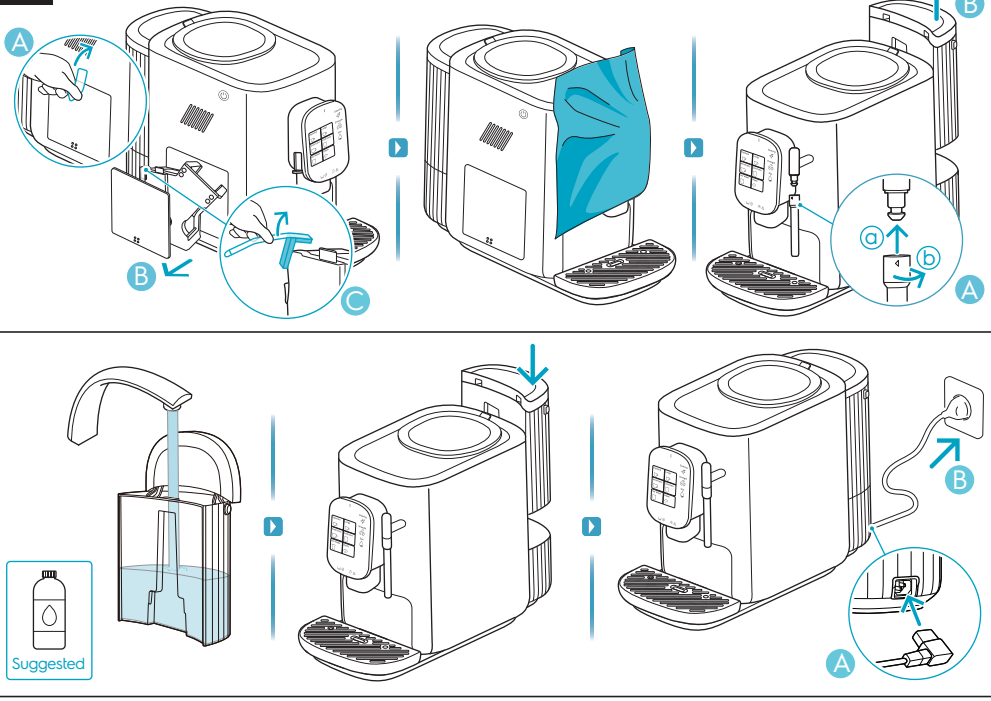
A
B
C
a
b
Suggested


1-2

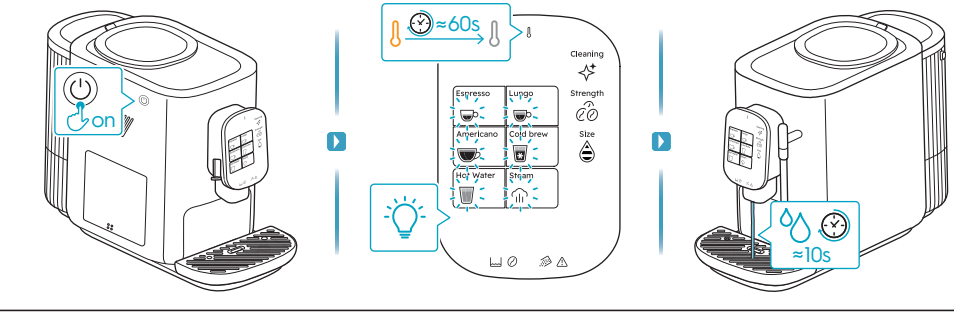
on
≈60s
Cleaning
Espresso
Lungo
Strength
Americano
Cold brew
Size
Hot Water
Steam
≈10s


2-1

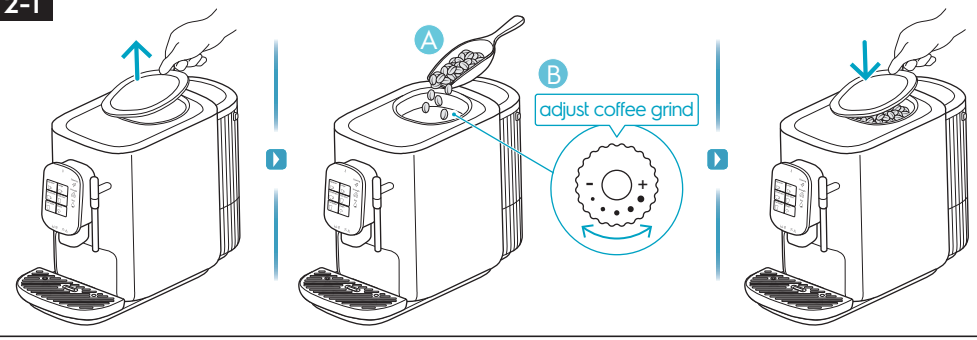
A
B
adjust coffee grind

2-2

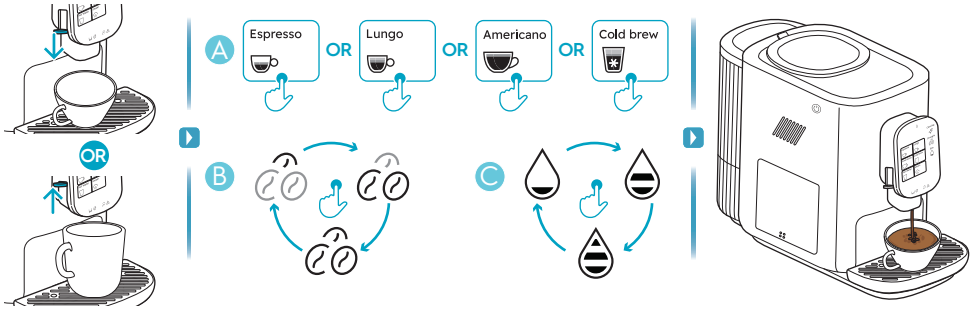


3-1

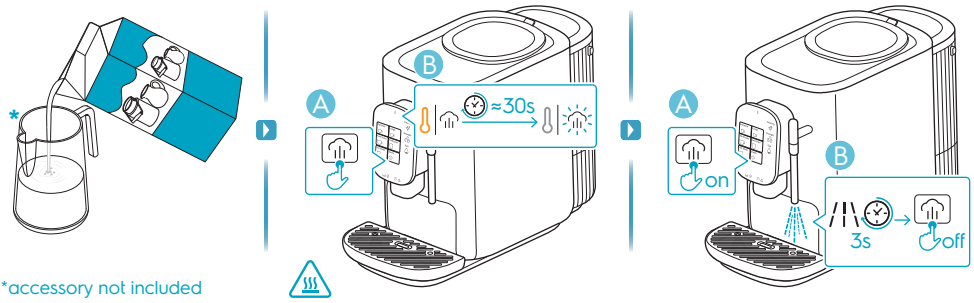


*accessory not included


3-2

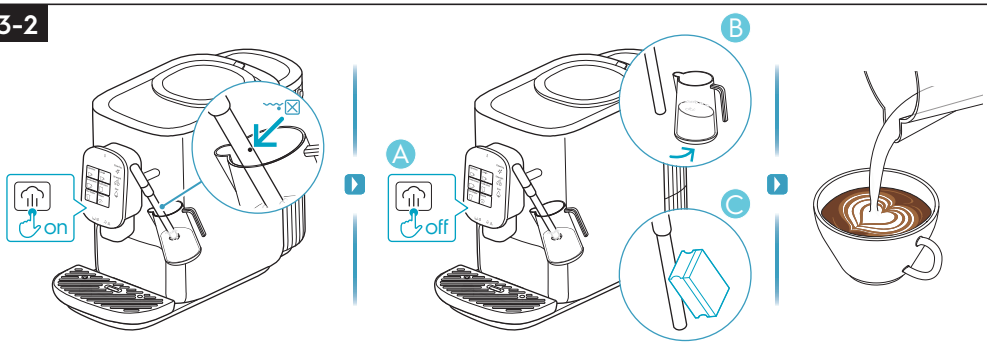


4

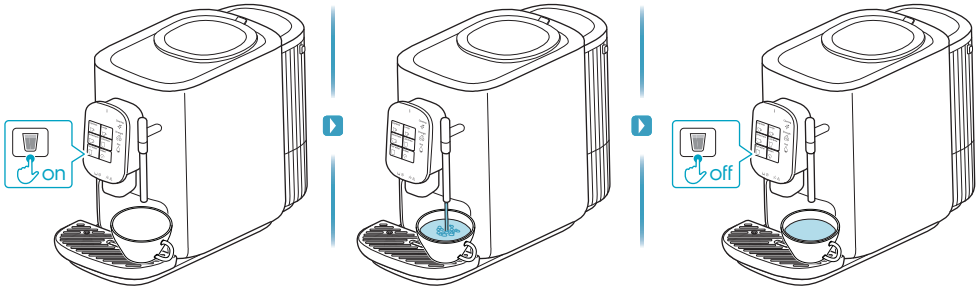


5-1

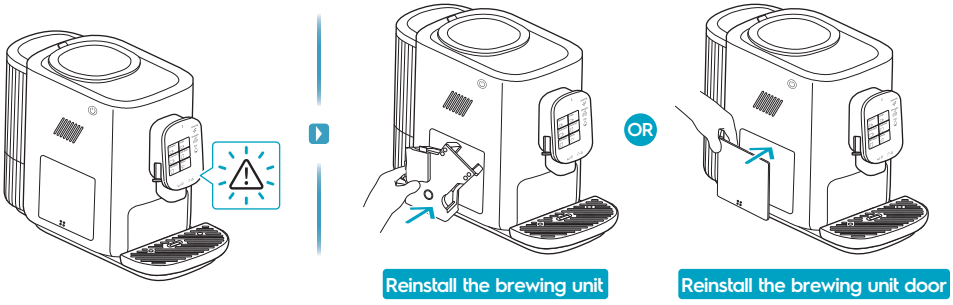

OR
Reinstall the brewing unit
Reinstall the brewing unit door

5-2

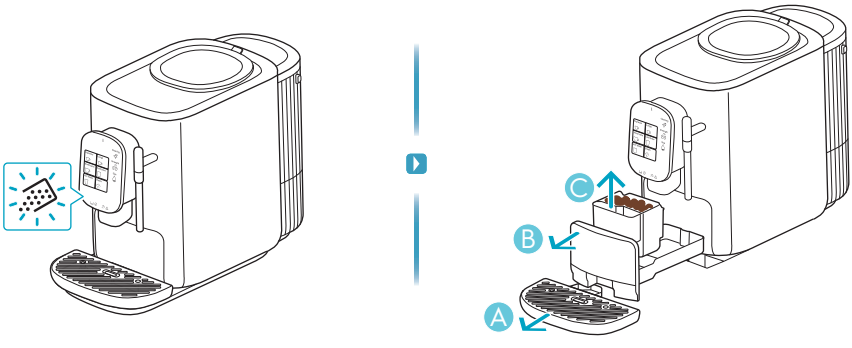

C
B
A

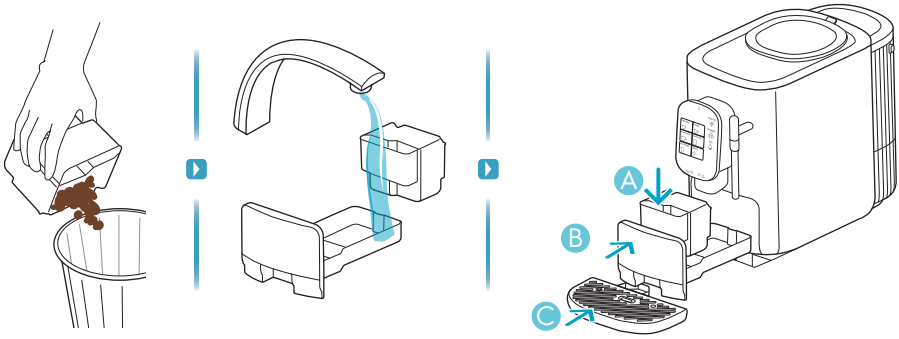
A
B
C


5-3

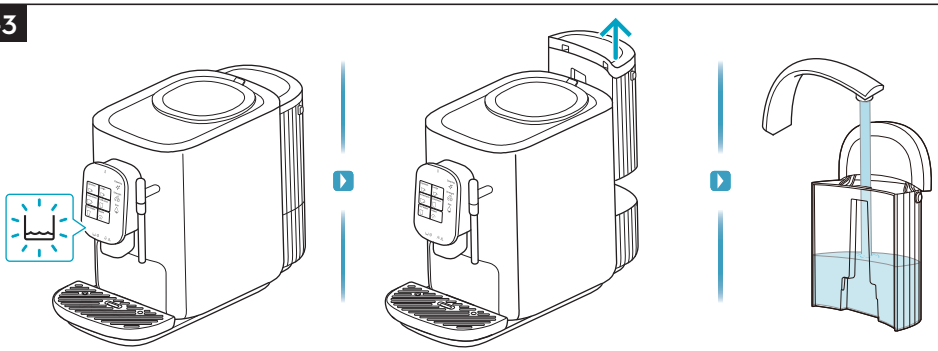


5-4

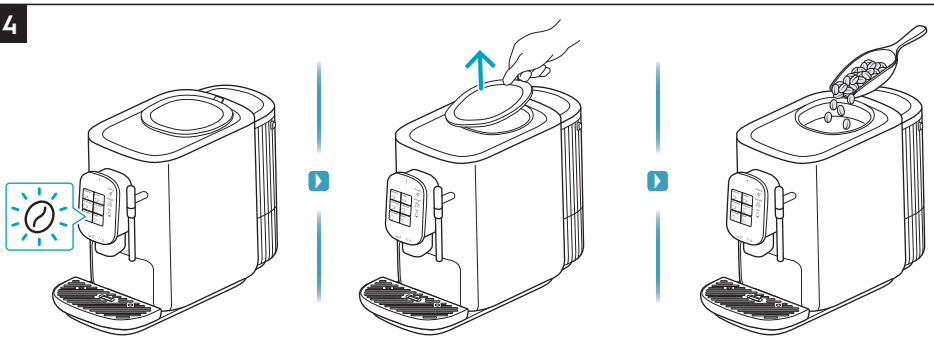


6-1

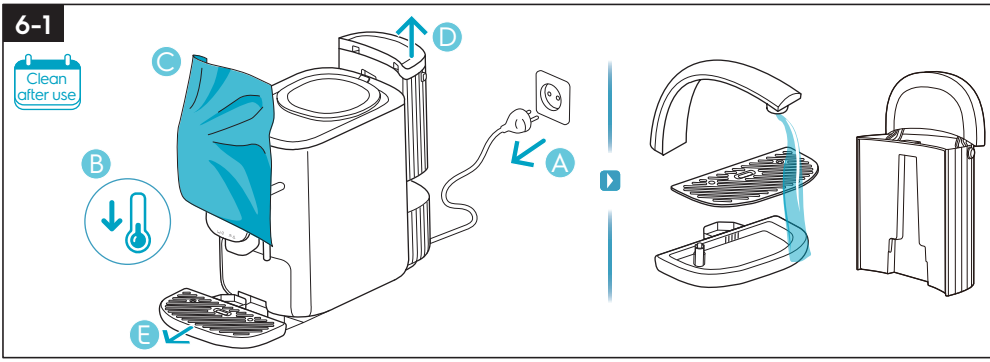


6-2

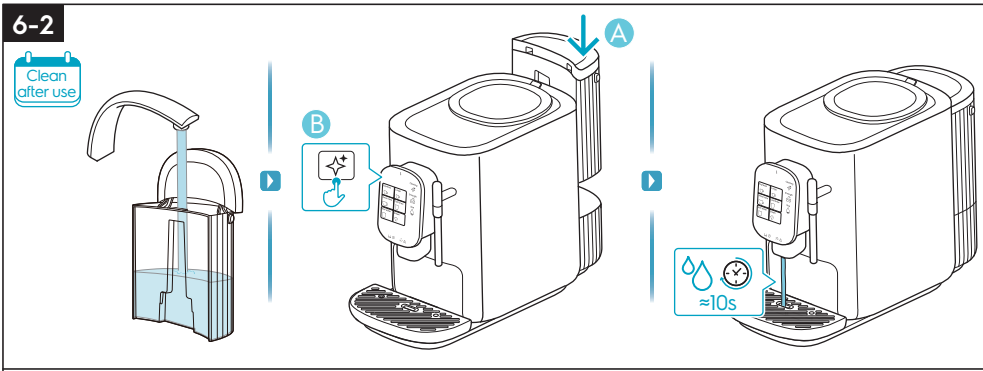

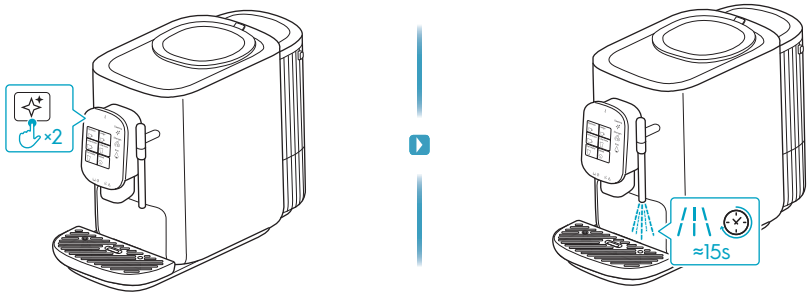


6-3

Daily

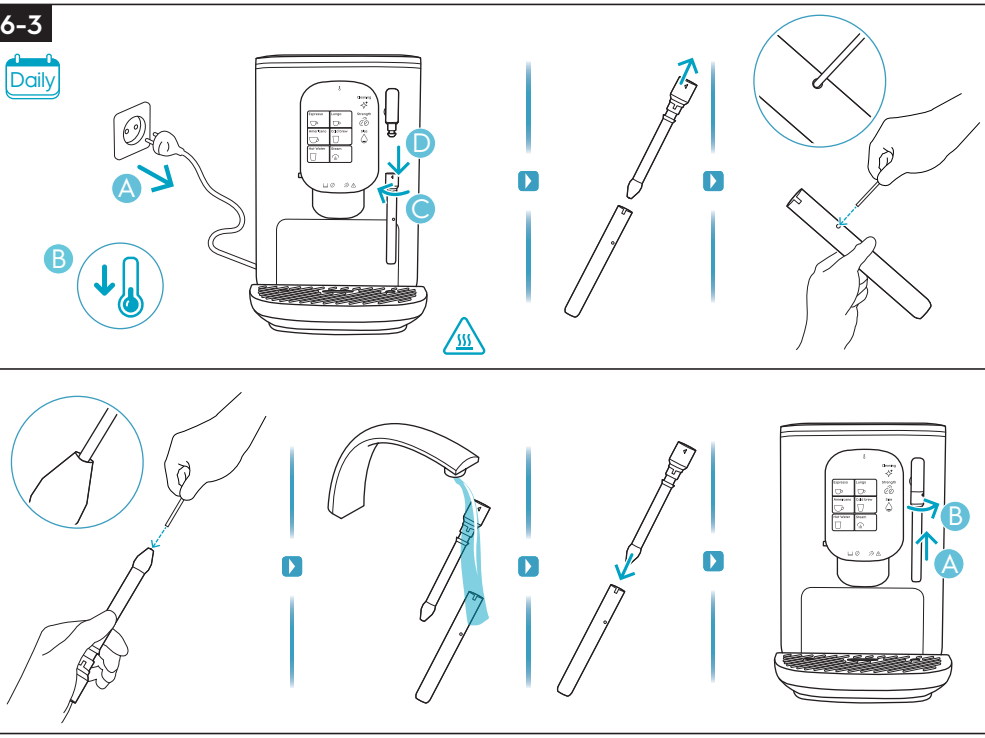


6-4


Daily

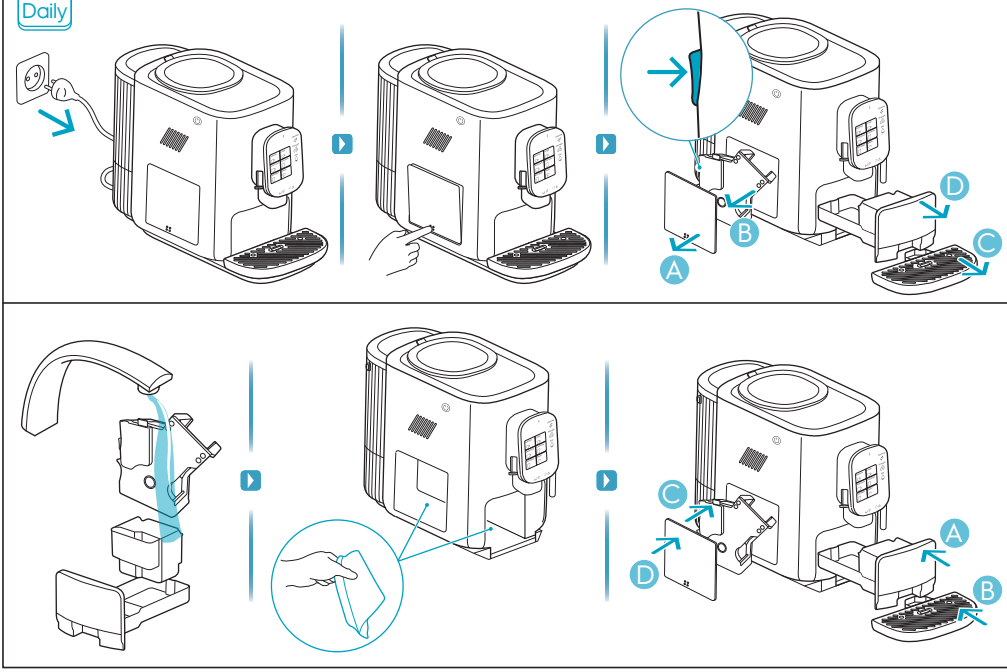



6-5

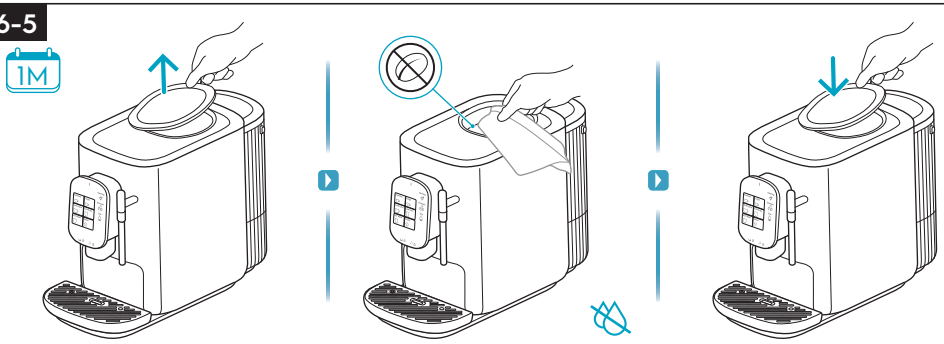

1M

7

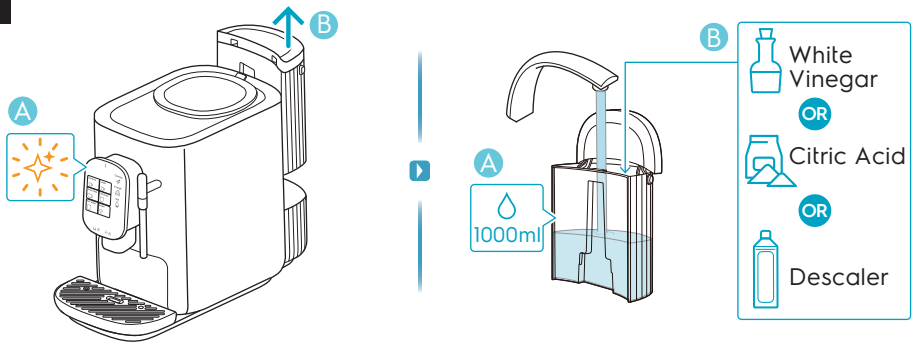
A
B
A
1000ml
B
White Vinegar
OR
Citric Acid
OR
Descaler

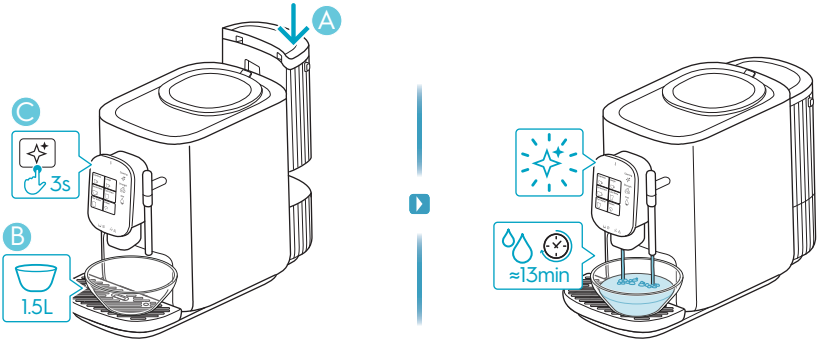
A
C
3s
B
1.5L
≈13min

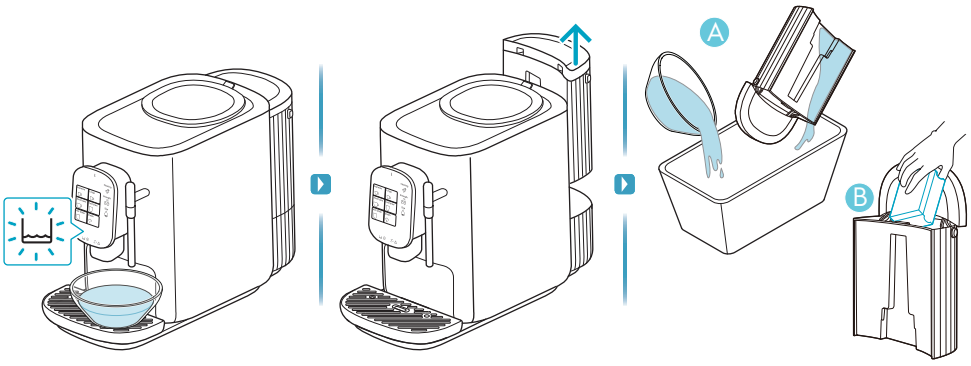
A
B

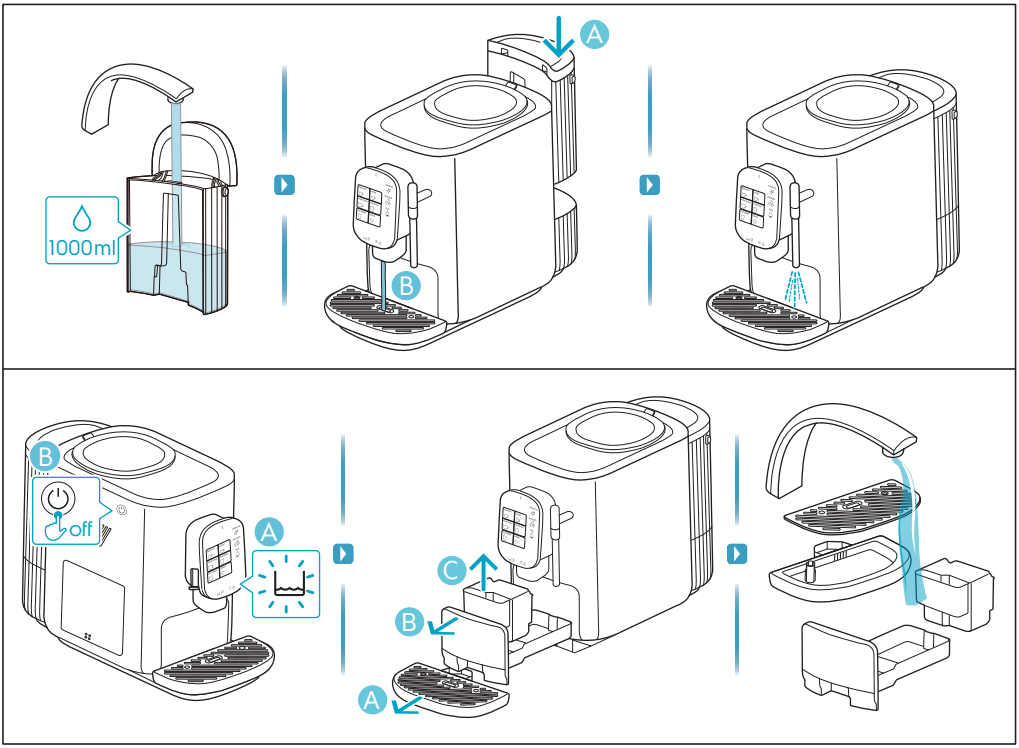

electrolux.com/shop



EFD2

900 923 820/6
Premium Coffee Descaler

*Accessories may vary by market.

EN

USER MANUAL

Graphics and drawings in this manual are solely for illustration purposes and are subject to variations from actual product.

Read all instructions carefully before using the appliance for the first time.

Keep this manual for future reference.

SAFETY ADVICE

Read the following instruction carefully before using the appliance for the first time.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 years old and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years old.
- The appliance may only be connected to a power supply whose voltage and frequency comply with the specifications on the rating plate!
- Never use or pick up the appliance if
  – the supply cord is damaged,
  – the housing is damaged.
- The appliance must only be connected to an earthed socket. If necessary, an extension cable suitable for 10A can be used.
- If the appliance or the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person, in order to avoid hazard.
- Always place the appliance on a flat, level surface.
- The appliance must be switched off and the mains plug withdrawn each time after use, before cleaning and maintenance.
- The appliance and accessories become hot during operation. Use only designated handles and knobs. Allow to cool down before cleaning or storage.
- The mains cable must not come into contact with any hot parts of the appliance.
- Do not remove the water tank during the brewing process.
- **WARNING: Avoid steam burn.**
- When the steam function is used there can be some hot water dripping from the brewing head. **DANGER! The water is hot, there is a risk for scalding.**
- The milk container(optional) is intended for contact with milk and dairy products only.
- Do not leave milk in the milk container(optional) at room temperature for prolonged periods.
- Do not immerse the appliance in water or any other liquid.
- Do not exceed the maximum filling volume as indicated on the appliances.
- Fill the water tank only with purified water, never with milk or other liquids.
- Always use fresh drinking water when brewing to achieve the best flavor.
- Do not use the appliance if the water tank has not been filled.

- Do not use the appliance without the drip tray or drip grid, unless a higher cup/mug is in use.
- Do not use or place the appliance on a hot surface or near source of heat.
- **WARNING: Avoid spillage on the connector.**
- **WARNING: Potential injury can be caused by misuse.**
- **WARNING: Do not place the appliance in a cabinet when in use.**
- This appliance is intended for domestic use only. The manufacturer cannot accept any liability for possible damage caused by improper or incorrect use.
- **CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.**

This appliance is intended to be used in household and similar applications such as:
– staff kitchen areas in shops, offices and other working environments;
– farm houses;
– by clients in hotels, motels and other residential type environments;
– bed and breakfast type environments.

ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances.

Do not dispose appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office.

EN

COMPONENTS

A. Power On/Off Button
B. Water Tank
C. Coffee Bean Hopper
D. Control Panel
E. Steam/Hot water Nozzle
F. Coffee Grounds Collector
G. Coffee Grounds Collector Bracket
H. Drip Tray
I. Drip tray float/water level indicator
J. Drip Grid
K. Coffee Nozzle
L. Coffee Nozzle Lever
M. Brewing Unit
N. Brewing Unit Door
O. Ventilation Window
P. Power Cord

GETTING STARTED

1. Start the machine for the first time

1-1 Place the machine on a flat surface. Remove the safety tape strips from the brewing unit and the machine surface. Clean the machine surface with a damp cloth. Install the steam/hot water nozzle to the machine. Then fill the water tank with ambient purified water. Plug in the machine to turn on its stand-by mode.
Note: Water quality varies by region, and it is recommended to use purified water.

1-2 Press the power on/off button, with lights turn fully on all beverage buttons. When temperature indicator turns to white from amber, pre-heating is done.

During machine setup, an auto-rinse cycle is performed, with water dispensing for 10 seconds. Once dispensing is complete, the cleaning button indicator stops blinking. Your machine is ready to use.

2. Make espresso-based coffee

2-1 Fill freshly roasted coffee beans in the bean hopper and install the lid. Then turn the grinding knob to adjust the coffee grind level.
Note:
- Do not fill too much coffee beans. Coffee beans that stay in the bean hopper for a long time may become moist which affects the grinding and the taste.
- Only coffee beans allowed to be inserted into the bean hopper.

2-2 Place a cup beneath the coffee nozzle. To select a coffee recipe, press or or or button. Press button to select the strength. Press button to select the volume. After selection, the machine will start brewing if no further operation is performed within 3 seconds.
Note:
- The machine will automatically turn off after 20 minutes of inactivity.
- Use the coffee nozzle lever to adjust nozzle height for different cup sizes.
- You may press any beverage button to stop the ongoing extraction once brewing starts.
- The final setting is automatically saved and applied the next time this beverage is selected.
- Americano features two separate liquid dispensing phases during its full brewing cycle.
-Cold brew requires an extended extraction time and a larger water volume. And please empty the drip tray before using the cold brew function.

2-3 **Specific cold brew (cold espresso, cold Lungo or cold Americano)**
Long press the button. When the , and blink, select the desire type of cold brew drink by pressing one of the blinking options. The chosen beverage button and the button turns white-on while all other beverage buttons are light-off, then press button to select the strength and press button to select the volume. After selection, the machine will start brewing if no further operation is performed within 3 seconds.

3. Froth milk and make cappuccino/latte

3-1 Fill the jug with an appropriate amount of fresh milk.

Press button, the machine initiates heating for steam, with the temperature indicator turns amber-on and the steam indicator illuminated. Once preheating completes, the temperature indicator turns white-on and the steam indicator begins blinking.

For preparing the steam/hot water nozzle, make sure the steam/hot water nozzle above the drip tray, press button and let the steam release for 3 seconds. Press button again to turn it off.

3-2 Put the steam/hot water nozzle in the milk jug. Press button and let the steam release and the milk frothing starts. Make sure that the steam/hot water nozzle is in a position that makes the milk rotate in one direction from the top to the bottom.
Note: make sure not to immerse the hole on the steam/hot water nozzle.

The steam will be turned off automatically after 90 seconds. Or when the desired level of foam is reached, press button to turn the steam off. When the frothing is finished, pour the frothed milk over the coffee.
Note: Clean the steam/hot water nozzle with a damp sponge once steaming finishes. For daily cleaning of the steam/hot water nozzle, refer to section 6-3. Be careful the risk of scalding!

4. Make hot water

Press button to release hot water from steam/hot water nozzle, when the desired amount of hot water is reached, press button again to turn the hot water off.

Note: The final setting is automatically saved and applied the next time this beverage is selected.

5. When the indicator illuminates

5-1 **Brewing unit and brewing unit door alert**
When the indicator illuminates, it means:
- the brewing unit is not properly installed. Check its installation.
- or the brewing unit door is open. Close the brewing unit door to continue.

5-2 **Coffee grounds collector alert**
When the indicator illuminates, it means:
- the coffee grounds collector is full. Empty the coffee grounds collector, then rinse it and its bracket.
- or the coffee grounds collector is absent. Refit the coffee grounds collector.

5-3 **Water tank alert**
When the indicator illuminates, it means:
- the water tank is absent. Refit the water tank.
- or refill the water tank with ambient purified water.
- when button and indicator blink simultaneously, this indicates the water tank is incorrectly positioned and air is trapped within the system. Refill and reinstall the water tank, then long-press the button to release air from the system until the machine returns to standby mode.

5-4 **Coffee bean hopper alert**
When the indicator illuminates, it means the coffee bean hopper is empty. Refill the hopper with freshly roasted coffee beans, then start the brewing process again.

6. Cleaning and care

Check the product regularly for signs of deterioration that may make it unsuitable for food contact, such as cracks, blisters, delamination, shrinkage, stickiness, corrosion, or other visible changes in texture or appearance. Follow cleaning and care instructions to prevent deterioration.

6-1 **Routine cleaning after every use**
Turn the machine off and unplug the power cord. Let the machine cool down completely before cleaning. Wipe all outer surfaces with a damp cloth. Clean water tank, drip tray and drip grid regularly. Never use caustic or abrasive cleaners, and never immerse the machine in liquid!

6-2 **Rinse coffee machine**
Fill the water tank with ambient purified water. Press the button and wait approximately 15 seconds. Water will then dispense from the coffee nozzle for around 10 seconds. Then double-press the button, water will spray out of the steam/hot water nozzle for around 15 seconds. The cleaning is then complete. This cleaning procedure is recommended after every use.

6-3 **Steam/hot water nozzle cleaning**
Turn off the machine and let the machine cool down completely before detaching the steam/hot water nozzle. Clean the steam output hole with the a thin pointed tool. Then rinse the steam/hot water nozzle with clean water. Reinstall the steam/hot water nozzle. Daily cleaning is recommended.

6-4 **Brewing unit cleaning**

Turn the machine off and unplug the power cord. Open the brewing unit door and release the brewing unit by pressing its button, while remove the coffee grounds collector bracket with coffee grounds collector. Rinse the brewing unit as well as the coffee grounds collector and its bracket with clean water, then clean the interior of the coffee machine with a damp cloth. Daily cleaning is recommended.

6-5 **Coffee bean hopper cleaning**

Regular cleaning of the coffee bean hopper ensures consistent grinding performance. Monthly cleaning is recommended.

Lift the coffee bean hopper lid. Grind any residual coffee beans to empty the hopper, wipe the interior with a dry cloth, then reinstall the lid.

Note: Do not clean the brewing unit, brewing unit door, drip tray, coffee grounds collector, coffee grounds collector bracket in a dishwasher.

7. Descaling

Note: When descaling is required, the ✧ will turn amber-on. However, it is not necessary to wait for this alert, the descaling process can be started at any time.

Fill the water tank with 1000ml of purified water, then add the descaling agent (or fill in water and vinegar 1:1). Use only an environmentally friendly descaling agent and always follow the manufacturer's instructions.

Reinstall the water tank and place a 1.5L container under both nozzle, then long press ✧ for 3 seconds to start descaling process, during which water will turn out of both nozzles and the ✧ will turn blue-on. The descaling will run until the indicator illuminates.

Drain all water from the container and water tank. Clean the water tank and fill it with 1000ml of purified water, then reinstall the water tank to the machine. Water will automatically dispense from the coffee nozzle, then spray out of the steam/hot water nozzle until the indicator illuminates.

Turn the machine off. Then clean the drip tray, coffee grounds collector and bracket.

Note:

- Pause Descaling: During the descaling, the user can pause the descaling by short pressing the ✧ button. The ✧ button will be blue-blinking.

- Cancel Descaling: The user can cancel the descaling process by pressing any beverage button. Alternatively, toggling the power button achieves the same result.

8. Setting

8-1 **Factory reset**

Reset the individual beverage settings and other settings to their defaults.

Long press the and button. The current and will turn white-on. And a BEEP will sound when the long press is confirmed. All beverages and other settings are reverted to the factory defaults.

The current and change to the default value and blink three times with a double BEEP.

8-2 **Water hardness**

Set the descale reminder frequency based on the water hardness.

Long press the ✧ and button until a BEEP sounds. All button and indicators are off, except the ✧ button is blue-on.

Then the button will turn white-on, and indicate the current water hardness level. To set a new hardness level, press the button and it will cycle the 3 hardness levels (Hard; Medium; Soft).

Wait a few seconds for the setting to be confirmed automatically, or press any button except the button. The water hardness setting will be saved, confirmed by a double BEEP.

Enjoy your new Electrolux product!

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The machine takes a long time to power on or power off.	To maintain system cleanliness, the machine performs an auto-rinsing cycle before powering on or powering off in most cases.	No action is necessary.
The machine fails to power on.	The power plug is not connected.	Connect the power plug to the power supply.
	The power button not pressed.	Press the power button.
	The power button is damaged.	Contact the authorized service center.
Machine has crack noise during operation.	The brewing unit is in operation.	No action is necessary.
The drip tray fills rapidly after preparing cold brew.	Cold brew requires a larger water volume.	Empty drip tray timely after performing cold brew.
Coffee grounds are present on the brewing unit and brewing unit chamber.	Coffee grounds drop out at maximum strength.	Clean the brewing unit and brewing unit chamber timely.
Hot water droplets splash out during hot water dispensing.	A specific pressure is required to deliver the correct volume of hot water within the set time.	Use a taller cup when operating the hot water function to prevent splashing.
The machine alerts for insufficient water despite water remaining in the water tank.	The residual water is retained for equipment-protection purposes.	Fill the water tank when the alert illuminates.
The Americano function first brews coffee, pauses mid-cycle, then commences hot water dispensing.	This programme setting is designed to deliver an optimal Americano flavour.	No action is necessary. Just wait the program finishing until the machine back to stand-by mode. Do not remove the coffee cup in half way.
The indicator ⓘ remains illuminated after coffee beans are added to the bean hopper.	The bean alert detects the presence of beans after grinding and compacting the coffee grounds.	Add coffee beans to the bean hopper and initiate brewing. The indicator will then switch off.
Insufficient coffee temperature	The cup was not preheated.	Rinse the cup with hot water to preheat. (**Note:** The hot water function may be used for this purpose.)
Weak coffee or minimal crema.	The coffee grounds are too coarse.	Adjust the coffee grind setting.
	Insufficient coffee beans remaining.	Refill the hopper with coffee beans and brew again.
No espresso dispenses of the coffee nozzle or the dispensing of espresso is not smooth.	The coffee grounds are too fine.	Adjust the coffee grind setting.
	The brewing unit is clogged.	Clean the brewing unit. Refer to the section “Brewing unit cleaning”.

The machine remains inoperable after completing one descaling cycle.	A full cycle has not been completed.	Ensure the full descaling cycle and subsequent rinse cycle are finished. The machine will prompt a rinse cycle following the initial descaling cycle. Refer to the section "Descaling".
	Insufficient water was added to the water tank during the descaling cycle or the subsequent rinse cycle.	Fill the water tank with an adequate volume of water.
The machine cannot be switched off.	The water tank is low on water.	Fill the water tank with water to allow the machine to complete the final rinse cycle.
No steam is produced by the machine.	The function has not been activated correctly.	Refer to the section "Froth milk and make cappuccino/latte" to operate the steam dispensing.
	The machine has not reached the correct steam temperature.	Wait until the machine reaches the required temperature. The button indicator will illuminate steadily once ready.
Poor foam quality.	The steam nozzle is contaminated with residue.	Refer to the section "Steam/hot water nozzle cleaning" to clean the steam/hot water nozzle or refer to the section "Descaling" to run the descaling cycle. (**Note:** Foam quality also depends on the type of milk used.)

Electrolux reserves the right to change products, information and specifications without notice.

คู่มือการใช้งาน

ภาพกราฟิกและภาพร่างในคู่มือนี้มีไว้เพื่อคำอธิบายเท่านั้น และอาจจะแตกต่างจากผลิตภัณฑ์จริง
กรุณาอ่านคำแนะนำทั้งหมดให้ละเอียดก่อนใช้เครื่องเป็นครั้งแรก เก็บคู่มือนี้ไว้สำหรับอ้างอิงในอนาคต

คำแนะนำด้านความปลอดภัย

อ่านคำแนะนำต่อไปนี้ให้ละเอียดก่อนใช้เครื่องเป็นครั้งแรก

- อุปกรณ์นี้สามารถใช้โดยเด็กอายุตั้งแต่ 8 ปีขึ้นไปและบุคคลที่มีความบกพร่องทางร่างกาย ทางประสาทรับรู้หรือทางจิตใจ รวมถึงผู้ที่ขาดประสบการณ์และความรู้ หากมีผู้ดูแลหรือผู้ให้คำแนะนำในการใช้อุปกรณ์อย่างปลอดภัย และเข้าใจถึงอันตรายที่เกี่ยวข้อง
- ห้ามเด็กเล่นกับอุปกรณ์
- ห้ามเด็กทำความสะอาดและบำรุงรักษาอุปกรณ์ เว้นแต่เด็กอายุตั้งแต่ 8 ปีขึ้นไปและมีผู้ปกครองคอยดูแล
- เก็บอุปกรณ์และสายไฟให้พ้นจากมือเด็กที่อายุไม่ถึง 8 ปี
- ต้องเชื่อมต่ออุปกรณ์เข้ากับแหล่งจ่ายไฟที่แรงดันไฟฟ้าและความถี่ของไฟฟ้าตรงกับข้อมูลจำเพาะที่อยู่บนแผ่นป้ายระบุเท่านั้น!
- ห้ามใช้หรือหยิบจับอุปกรณ์หาก
  - สายไฟชำรุดเสียหาย
  - ตัวเครื่องชำรุดเสียหาย
- ต้องเชื่อมต่ออุปกรณ์เข้ากับช่องรับไฟที่ต่อสายดินไว้แล้วเท่านั้น หากจำเป็น อาจใช้สายพ่วงไฟขนาด 10 A ได้
- หากอุปกรณ์หรือสายไฟชำรุดเสียหาย กรุณาส่งให้ศูนย์บริการ Electrolux หรือช่างซ่อมบำรุงเป็นผู้ซ่อมแซมเพื่อป้องกันอันตรายที่อาจเกิดขึ้น
- วางอุปกรณ์ไว้บนพื้นผิวที่เรียบเสมอกันทุกครั้ง
- ปิดเครื่องและดึงปลั๊กออกทุกครั้งหลังใช้งาน ก่อนทำความสะอาดและดูแลรักษา
- เครื่องและอุปกรณ์เสริมจะร้อนในขณะที่ใช้งาน ใช้มือจับและปุ่มที่กำหนดไว้เป็นการเฉพาะเท่านั้น ปล่อยให้เครื่องเย็นก่อนทำความสะอาดหรือจัดเก็บ
- ต้องระวังอย่าให้สายไฟแตะกับชิ้นส่วนที่ร้อนของเครื่อง
- ห้ามถอดถังเก็บน้ำขณะทำการชงเครื่องดื่ม
- **คำเตือน: หลีกเลี่ยงการได้รับบาดเจ็บจากไอน้ำ**
- เมื่อใช้ฟังก์ชันไอน้ำ อาจมีน้ำร้อนหยดออกจากหัวชงเครื่องดื่ม **อันตราย! น้ำมีอุณหภูมิสูง มีความเสี่ยงต่อการได้รับบาดเจ็บจากความร้อน**
- ภาชนะใส่นม (อุปกรณ์เสริม) ใช้สำหรับสัมผัสกับนมและผลิตภัณฑ์จากนมเท่านั้น
- ห้ามทิ้งนมไว้ในภาชนะใส่นม (อุปกรณ์เสริม) ที่อุณหภูมิห้องเป็นเวลานาน
- ห้ามจุ่มเครื่องลงในน้ำหรือของเหลว
- ห้ามเติมน้ำเกินปริมาตรสูงสุดที่ระบุไว้บนอุปกรณ์
- เติมน้ำลงในถังเก็บน้ำเฉพาะน้ำบริสุทธิ์เท่านั้น ห้ามเติมนมหรือของเหลวอื่นๆ เด็ดขาด
- ใช้น้ำสะอาดใหม่เพื่อให้ได้รสชาติที่ดีที่สุด
- ห้ามใช้อุปกรณ์หากยังไม่ได้เติมน้ำลงในถังเก็บน้ำ
- ห้ามใช้อุปกรณ์โดยไม่มีถาดรองน้ำหรือตะแกรงรองถาดรองน้ำ เว้นแต่จะใช้ถ้วยหรือแก้วที่มีความสูงมากขึ้น
- ห้ามใช้หรือวางเครื่องไว้บนพื้นผิวที่ร้อนหรือใกล้กับแหล่งความร้อน

TH

- **คำเตือน: ระวังของเหลวหกเลอะเทอะบริเวณขั้วต่อ**
- **คำเตือน: การใช้งานไม่ถูกต้องอาจก่อให้เกิดการบาดเจ็บได้**
- **คำเตือน: ห้ามวางอุปกรณ์ไว้ภายในตู้ขณะใช้งาน**
- อุปกรณ์ผลิตขึ้นเพื่อใช้ภายในบ้านเท่านั้น บริษัทจะไม่รับผิดชอบใด ๆ ต่อความเสียหายที่อาจเกิดขึ้นเนื่องจากการใช้งานอย่างไม่เหมาะสมหรือไม่ถูกต้อง ห้ามเติมน้ำเกินระดับสูงสุดที่ระบุบนอุปกรณ์ เนื่องจากอาจมีความเสี่ยงที่น้ำในถังจะล้นออกทางช่องด้านหลัง
- **ข้อควรระวัง: เพื่อหลีกเลี่ยงอันตรายจากการรีเซ็ตของตัวตัดความร้อนโดยไม่ตั้งใจ อุปกรณ์นี้ต้องไม่ถูกเชื่อมต่อผ่านอุปกรณ์สวิตช์ภายนอก เช่นตัวจับเวลา หรือเชื่อมต่อกับวงจรที่มีการเปิด-ปิดเป็นประจำโดยผู้ให้บริการไฟฟ้า**

อุปกรณ์นี้ได้รับการออกแบบมาสำหรับใช้งานในครัวเรือนและสถานที่ที่มีลักษณะการใช้งานใกล้เคียง เช่น:
- พื้นที่ครัวของพนักงานในร้านค้า สำนักงาน และสภาพแวดล้อมในการทำงานอื่น ๆ
- บ้านไร่
- โดยผู้เข้าพักในโรงแรม โมเต็ล และสถานที่พักอาศัยประเภทอื่น ๆ
- รวมถึงสถานที่พักพร้อมอาหารเช้า

ข้อมูลเพื่อการรักษาสิ่งแวดล้อม

รีไซเคิลวัสดุที่มีสัญลักษณ์ ใส่บรรจุภัณฑ์ลงใน ภาชนะบรรจุที่เหมาะสมเพื่อนำไปรีไซเคิล ช่วย ปกป้องสิ่งแวดล้อมและสุขภาพของมนุษย์ และเพื่อ รีไซเคิลขยะอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์

อย่า ทิ้งอุปกรณ์ที่มีเครื่องหมายสัญลักษณ์  รวมกับ ขยะในครัวเรือน ส่งคืนผลิตภัณฑ์ไปยังโรงงาน รีไซเคิลในท้องถิ่น หรือติดต่อสำนักงานเทศบาลของคุณ

ส่วนประกอบ

A. ปุ่มเปิด/ปิด
B. แท็งค์น้ำ
C. โถใส่เมล็ดกาแฟ
D. แผงควบคุม
E. หัวฉีดไอน้ำ/น้ำร้อน
F. ภาชนะรองกากกาแฟ
G. ฐานยึดภาชนะรองกากกาแฟ
H. ถาดรอง
I. ลูกลอยถาดรอง/ไฟแสดงระดับน้ำ
J. ตะแกรงรอง
K. หัวจ่ายกาแฟ
L. คันโยกหัวจ่ายกาแฟ
M. ชุดชงกาแฟ
N. ฝาชุดชงกาแฟ
O. ช่องระบายอากาศ
P. สายไฟ

เริ่มต้นใช้งาน

1. เริ่มใช้เครื่องชงกาแฟเป็นครั้งแรก

1-1 วางเครื่องไว้บนพื้นผิวที่เรียบ นำแถบเทปนิรภัยออกจากชุดชงกาแฟและพื้นผิวของอุปกรณ์ ทำความสะอาดพื้นผิวของเครื่องด้วยผ้าชุบน้ำหมาด ๆ ติดตั้งหัวฉีดไอน้ำ/น้ำร้อนเข้ากับเครื่อง จากนั้นเติมน้ำบริสุทธิ์อุณหภูมิห้องลงในแท็งค์น้ำ เสียบปลั๊กเครื่องเพื่อเปิดเข้าสู่โหมดเตรียมพร้อม
หมายเหตุ: คุณภาพน้ำจะแตกต่างกันไปในแต่ละพื้นที่ และขอแนะนำให้ใช้น้ำบริสุทธิ์

1-2 กดปุ่มเปิด/ปิดเครื่อง โดยไฟของปุ่มเครื่องดื่มทั้งหมดจะสว่างขึ้นเต็มที่ เมื่อไฟแสดงอุณหภูมิเปลี่ยนจากสีเหลืองอำพันเป็นสีขาว แสดงว่าการอุ่นเครื่องเสร็จแล้ว

ระหว่างการตั้งค่าเครื่อง ระบบจะทำการล้างอัตโนมัติ โดยจ่ายน้ำเป็นเวลา 10 วินาที เมื่อการจ่ายเสร็จสิ้น ไฟแสดงสถานะของปุ่มทำความสะอาด จะหยุดกะพริบ เครื่องของคุณพร้อมใช้งานแล้ว

2. วิธีชงกาแฟที่มีเอสเพรสโซเป็นส่วนประกอบ

2-1 เติมเมล็ดกาแฟคั่วสดลงในโถใส่เมล็ดกาแฟ และใส่ฝาปิดให้เรียบร้อย จากนั้นหมุนแป้นปรับระดับการบดเพื่อปรับระดับความละเอียดของกาแฟบด
หมายเหตุ:
- อย่าเติมเมล็ดกาแฟมากเกินไป เมล็ดกาแฟที่ค้างอยู่ในโถใส่เมล็ดกาแฟเป็นเวลานานอาจเกิดความชื้นซึ่งส่งผลต่อการบดและรสชาติ
- ใส่เฉพาะเมล็ดกาแฟลงในโถใส่เมล็ดกาแฟเท่านั้น

2-2 วางถ้วยไว้ใต้หัวจ่ายกาแฟ หากต้องการเลือกเมนูกาแฟ ให้กดปุ่ม หรือ หรือ หรือ ให้กดปุ่ม เพื่อเลือกระดับความเข้มข้น ให้กดปุ่ม เพื่อเลือกระดับปริมาณ หลังจากเลือกแล้ว เครื่องจะเริ่มชงกาแฟหากไม่มีการดำเนินการใด ๆ เพิ่มเติมภายใน 3 วินาที
หมายเหตุ:
- เครื่องจะปิดโดยอัตโนมัติหลังจากไม่มีการใช้งานเป็นเวลา 20 นาที
- ใช้คันโยกหัวจ่ายกาแฟเพื่อปรับความสูงของหัวจ่ายสำหรับขนาดถ้วยที่แตกต่างกัน
- คุณสามารถกดปุ่มเครื่องดื่มใดก็ได้เพื่อหยุดการจ่ายกาแฟที่กำลังดำเนินอยู่เมื่อเริ่มการชงกาแฟแล้ว
- การตั้งค่าล่าสุดจะถูกบันทึกโดยอัตโนมัติและนำไปใช้ในครั้งถัดไปที่เลือกเมนูเครื่องดื่มนี้
- อเมริกาโนประกอบด้วยขั้นตอนการจ่ายของเหลว 2 ขั้นตอนแยกจากกันตลอดรอบการชงกาแฟ
- กาแฟสกัดเย็นต้องใช้ระยะเวลาในการสกัดนานขึ้นและใช้น้ำในปริมาณมากขึ้น และโปรดเทน้ำออกจากถาดรองก่อนใช้ฟังก์ชันกาแฟสกัดเย็น

2-3 **กาแฟสกัดเย็นแบบเฉพาะ (เอสเพรสโซเย็น ลุงโกเย็น หรืออเมริกาโนเย็น)**
กดปุ่ม ค้างไว้ เมื่อ และ กะพริบ ให้เลือกประเภทเครื่องดื่มกาแฟสกัดเย็นที่ต้องการโดยการกดหนึ่งในตัวเลือกที่กำลังกะพริบ ปุ่มเครื่องดื่มที่เลือกและปุ่ม จะสว่างเป็นสีขาวขณะที่ปุ่มเครื่องดื่มอื่น ๆ จะดับ จากนั้นกดปุ่ม เพื่อเลือกระดับความเข้มข้น และกดปุ่ม เพื่อเลือกระดับปริมาณ หลังจากเลือกแล้ว เครื่องจะเริ่มชงกาแฟหากไม่มีการดำเนินการใด ๆ เพิ่มเติมภายใน 3 วินาที

3. ตีฟองนมและทำคาปูชิโน่/ลาเต้

3-1 เติมนมสดในปริมาณที่เหมาะสมลงในเหยือก

กดปุ่ม เครื่องจะเริ่มทำความร้อนเพื่อผลิตไอน้ำ โดยไฟแสดงอุณหภูมิ จะสว่างเป็นสีเหลืองอำพันและไฟแสดงสถานะไอน้ำ จะสว่างขึ้น เมื่อการอุ่นเครื่องเสร็จสิ้นแล้ว ไฟแสดงอุณหภูมิ จะสว่างเป็นสีขาวและไฟแสดงสถานะไอน้ำ จะเริ่มกะพริบ

สำหรับการเตรียมหัวฉีดไอน้ำ/น้ำร้อน ตรวจสอบให้แน่ใจว่าหัวฉีดไอน้ำ/น้ำร้อนอยู่เหนือถาดรอง กดปุ่ม และปล่อยไอน้ำเป็นเวลา 3 วินาที กดปุ่ม อีกครั้งเพื่อปิดการทำงาน

3-2 ใส่หัวฉีดไอน้ำ/น้ำร้อนลงในเหยือกนม กดปุ่ม และปล่อยไอน้ำออกและเริ่มการตีฟองนม ตรวจสอบให้แน่ใจว่าหัวฉีดไอน้ำ/น้ำร้อนอยู่ในตำแหน่งที่ทำให้นมหมุนวนในทิศทางเดียวจากด้านบนลงด้านล่าง
หมายเหตุ: ตรวจสอบให้แน่ใจว่าไม่ได้จุ่มรูบนหัวฉีดไอน้ำ/น้ำร้อน

ไอน้ำจะหยุดทำงานโดยอัตโนมัติหลังจาก 90 วินาที หรือเมื่อได้ระดับฟองนมที่ต้องการแล้ว ให้กดปุ่ม เพื่อปิดการทำงานของไอน้ำ เมื่อการตีฟองนมเสร็จสิ้น ให้เทนมที่ตีเป็นฟองลงบนกาแฟ
หมายเหตุ: ทำความสะอาดหัวฉีดไอน้ำ/น้ำร้อนด้วยฟองน้ำหมาดทันทีหลังจากเสร็จสิ้นการทำไอน้ำ สำหรับการทำความสะอาดหัวฉีดไอน้ำ/น้ำร้อนประจำวัน โปรดดูที่มาตรา 6-3
ให้ระวังอาจทำให้ถูกน้ำร้อนลวกได้

4. การต้มน้ำร้อน

กดปุ่ม เพื่อจ่ายน้ำร้อนออกจากหัวฉีดไอน้ำ/น้ำร้อน เมื่อได้น้ำร้อนในปริมาณที่ต้องการแล้ว ให้กดปุ่ม อีกครั้งเพื่อปิดการจ่ายน้ำร้อน
หมายเหตุ: การตั้งค่าล่าสุดจะถูกบันทึกโดยอัตโนมัติและนำไปใช้ในครั้งถัดไปที่เลือกเมนูเครื่องดื่มนี้

5. เมื่อไฟแสดงสถานะสว่างขึ้น

5-1 **การแจ้งเตือนชุดชงกาแฟและฝาชุดชงกาแฟ**
เมื่อไฟแสดงสถานะ สว่างขึ้น หมายความว่า:
- ชุดชงกาแฟติดตั้งไม่ถูกต้อง ตรวจสอบการติดตั้ง
- หรือฝาชุดชงกาแฟเปิดอยู่ ปิดฝาชุดชงกาแฟเพื่อดำเนินการต่อ

5-2 **การแจ้งเตือนภาชนะรองกากกาแฟ**
เมื่อไฟแสดงสถานะ สว่างขึ้น หมายความว่า:
- ภาชนะรองกากกาแฟเต็ม เทกากกาแฟออกจากภาชนะรองกากกาแฟ จากนั้นล้างภาชนะรองกากกาแฟและฐานยึดภาชนะรองกากกาแฟ
- หรือไม่มีภาชนะรองกากกาแฟอยู่ ใส่ภาชนะรองกากกาแฟกลับเข้าที่

5-3 **การแจ้งเตือนแท็งค์น้ำ**
เมื่อไฟแสดงสถานะ สว่างขึ้น หมายความว่า:
- ไม่มีแท็งค์น้ำอยู่ ใส่แท็งค์น้ำกลับเข้าที่
- หรือเติมน้ำบริสุทธิ์อุณหภูมิห้องลงในแท็งค์น้ำ
- เมื่อปุ่ม และไฟแสดงสถานะ กะพริบพร้อมกัน แสดงว่าแท็งค์น้ำอยู่ในตำแหน่งที่ไม่ถูกต้องและมีอากาศค้างอยู่ภายในระบบ เติมน้ำและติดตั้งแท็งค์น้ำกลับเข้าที่ จากนั้นกดปุ่ม ค้างไว้เพื่อไล่อากาศออกจากระบบจนกว่าเครื่องจะกลับเข้าสู่โหมดเตรียมพร้อม

5-4 **การแจ้งเตือนโถใส่เมล็ดกาแฟ**
เมื่อไฟแสดงสถานะ สว่างขึ้น หมายความว่าโถใส่เมล็ดกาแฟว่างเปล่า เติมเมล็ดกาแฟคั่วสดลงในโถใส่เมล็ดกาแฟ จากนั้นเริ่มกระบวนการชงกาแฟอีกครั้ง

6. การทำความสะอาดและการดูแลรักษา

ตรวจสอบผลิตภัณฑ์เป็นประจำว่ามีสัญญาณการเสื่อมสภาพที่อาจทำให้ไม่เหมาะสำหรับการสัมผัสกับอาหารหรือไม่ เช่น รอยแตกร้าว รอยพอง การแยกชั้น การหดตัว ความเหนียว การกัดกร่อน หรือการเปลี่ยนแปลงของเนื้อสัมผัสหรือลักษณะภายนอกที่มองเห็นได้อื่น ๆ ปฏิบัติตามคำแนะนำในการทำความสะอาดและการดูแลรักษาเพื่อป้องกันการเสื่อมสภาพ

6-1 **การทำความสะอาดเป็นกิจวัตรหลังการใช้งานทุกครั้ง**
ปิดเครื่องและถอดปลั๊กสายไฟ ปล่อยให้เครื่องเย็นลงจนสนิทก่อนทำความสะอาด เช็ดพื้นผิวภายนอกทั้งหมดด้วยผ้าชุบน้ำหมาด ๆ ทำความสะอาดแท็งค์น้ำ ถาดรองและตะแกรงรองเป็นประจำ ห้ามใช้น้ำยาทำความสะอาดที่มีฤทธิ์กัดกร่อนหรือมีฤทธิ์แรง และห้ามจุ่มเครื่องลงในของเหลวโดยเด็ดขาด!

6-2 **ล้างเครื่องชงกาแฟ**
เติมน้ำบริสุทธิ์อุณหภูมิห้องลงในแท็งค์น้ำ กดปุ่ม และรอประมาณ 15 วินาที จากนั้นน้ำจะถูกจ่ายออกจากหัวจ่ายกาแฟเป็นเวลาประมาณ 10 วินาที จากนั้นกดปุ่ม สองครั้ง น้ำจะถูกพ่นออกจากหัวฉีดไอน้ำ/น้ำร้อนเป็นเวลาประมาณ 15 วินาที จากนั้นการทำความสะอาดจะเสร็จสิ้น แนะนำให้ทำความสะอาดตามขั้นตอนนี้หลังการใช้งานทุกครั้ง

6-3 **การทำความสะอาดหัวฉีดไอน้ำ/น้ำร้อน**
ปิดเครื่องและปล่อยให้เครื่องเย็นลงจนสนิทก่อนถอดหัวฉีดไอน้ำ/น้ำร้อน ทำความสะอาดรูจ่ายไอน้ำด้วยอุปกรณ์ปลายแหลมขนาดเล็ก จากนั้นล้างหัวฉีดไอน้ำ/น้ำร้อนด้วยน้ำสะอาด ติดตั้งหัวฉีดไอน้ำ/น้ำร้อนกลับเข้าที่ แนะนำให้ทำความสะอาดทุกวัน

6-4 **การทำความสะอาดชุดชงกาแฟ**

ปิดเครื่องและถอดปลั๊กสายไฟ เปิดฝาชุดชงกาแฟและปลดชุดชงกาแฟโดยการกดปุ่ม ในขณะถอดฐานยึดภาชนะรองกากกาแฟ พร้อมภาชนะรองกากกาแฟออก ล้างชุดชงกาแฟรวมถึงภาชนะรองกากกาแฟและฐานยึดด้วยน้ำสะอาด จากนั้นทำความสะอาดด้านในเครื่องชงกาแฟด้วยผ้าชุบน้ำหมาด ๆ แนะนำให้ทำความสะอาดทุกวัน

6-5 **การทำความสะอาดโถใส่เมล็ดกาแฟ**

การทำความสะอาดโถใส่เมล็ดกาแฟเป็นประจำช่วยให้ประสิทธิภาพการบดสม่ำเสมอ แนะนำให้ทำความสะอาดทุกเดือน ยกฝาโถใส่เมล็ดกาแฟ บดเมล็ดกาแฟที่เหลืออยู่จนโถใส่เมล็ดกาแฟว่างเปล่า เช็ดด้านในด้วยผ้าแห้ง จากนั้นใส่ฝาปิดกลับเข้าที่

หมายเหตุ: ห้ามทำความสะอาดชุดชงกาแฟ ฝาชุดชงกาแฟ ถาดรอง ภาชนะรองกากกาแฟ ฐานยึดภาชนะรองกากกาแฟในเครื่องล้างจาน

7. การขจัดคราบตะกรัน

หมายเหตุ: เมื่อจำเป็นต้องขจัดคราบตะกรัน ไฟแสดงสถานะ ✧ จะสว่างเป็นสีเหลืองอำพัน อย่างไรก็ตาม ไม่จำเป็นต้องรอให้มีการแจ้งเตือน สามารถเริ่มกระบวนการขจัดคราบตะกรันได้ทุกเมื่อ

เติมน้ำบริสุทธิ์ลงในแท็งค์น้ำ 1,000 มล. และค่อยเติมน้ำยาขจัดคราบตะกรัน (หรือเติมน้ำและน้ำส้มสายชูในอัตราส่วน 1:1) ใช้น้ำยาขจัดคราบตะกรันที่เป็นมิตรกับสิ่งแวดล้อมเท่านั้น และปฏิบัติตามคำแนะนำของบริษัทเสมอ

ติดตั้งแท็งค์น้ำกลับเข้าที่และวางภาชนะขนาด 1.5 ลิตรไว้ใต้หัวฉีดทั้งสองหัว จากนั้นกดปุ่ม ✧ ค้างไว้ 3 วินาทีเพื่อเริ่มกระบวนการขจัดคราบตะกรัน ในระหว่างนั้นน้ำจะถูกจ่ายออกจากหัวฉีดทั้งสองหัวและ ✧ จะสว่างเป็นสีน้ำเงิน กระบวนการขจัดคราบตะกรันจะดำเนินต่อไปจนกว่าไฟแสดงสถานะ ▁ จะสว่างขึ้น

เทน้ำทิ้งหมดออกจากภาชนะและแท็งค์น้ำ ทำความสะอาดแท็งค์น้ำและเติมน้ำบริสุทธิ์ปริมาณ 1,000 มล. จากนั้นติดตั้งแท็งค์น้ำกลับเข้ากับเครื่อง น้ำจะถูกจ่ายออกจากหัวจ่ายกาแฟโดยอัตโนมัติ จากนั้นจะถูกพ่นออกจากหัวฉีดไอน้ำ/น้ำร้อนจนกว่าไฟแสดงสถานะ ▁ จะสว่างขึ้น

ปิดเครื่อง จากนั้นทำความสะอาดถาดรอง ภาชนะรองกากกาแฟและฐานยึด

หมายเหตุ:

- **หยุดการขจัดคราบตะกรันชั่วคราว: ระหว่างการขจัดคราบตะกรัน ผู้ใช้สามารถหยุดการขจัดคราบตะกรันชั่วคราวได้โดยการกดปุ่ม ✧ สั้น ๆ ปุ่ม ✧ จะกะพริบเป็นสีน้ำเงิน**
- **ยกเลิกการขจัดคราบตะกรัน: ผู้ใช้สามารถยกเลิกกระบวนการขจัดคราบตะกรันได้โดยการกดปุ่มเครื่องดื่มใดก็ได้ หรืออีกวิธีหนึ่ง กดปุ่มเปิด/ปิดเครื่องเพื่อให้ได้ผลลัพธ์เช่นเดียวกัน**

8. การตั้งค่า

8-1 **รีเซ็ตเป็นการตั้งค่าจากโรงงาน**

รีเซ็ตการตั้งค่าเครื่องดื่มแต่ละรายการและการตั้งค่าอื่น ๆ กลับเป็นค่าเริ่มต้น

กดปุ่ม ☕ และ ☕ ค้างไว้ ปุ่ม ☕ และ ☕ ที่กำลังใช้งานอยู่จะสว่างเป็นสีขาว และจะมีเสียงบี๊บดังขึ้นเมื่อยืนยันการกดปุ่มค้างไว้แล้ว การตั้งค่าเครื่องดื่มทั้งหมดและการตั้งค่าอื่น ๆ จะถูกคืนค่าเป็นการตั้งค่าเริ่มต้นจากโรงงาน ปุ่ม ☕ และ ☕ ที่กำลังใช้งานอยู่จะเปลี่ยนเป็นค่าเริ่มต้นและกะพริบ 3 ครั้งพร้อมเสียงบี๊บ 2 ครั้ง

8-2 **ความกระด้างของน้ำ**

ตั้งค่าความถี่ในการแจ้งเตือนการขจัดคราบตะกรันตามระดับความกระด้างของน้ำ

กดปุ่ม ✧ และ ☕ ค้างไว้จนกว่าจะมีเสียงบี๊บดังขึ้น ปุ่มและไฟแสดงสถานะทั้งหมดจะดับลง ✧ ยกเว้นปุ่มที่สว่างเป็นสีน้ำเงิน จากนั้นปุ่ม ☕ จะสว่างเป็นสีขาว และแสดงระดับความกระด้างของน้ำในปัจจุบัน หากต้องการตั้งค่าระดับความกระด้างใหม่ ให้กดปุ่ม ☕ และปุ่มจะวนเปลี่ยนระดับความกระด้างทั้ง 3 ระดับ (☕ กระด้างมาก ☕ ปานกลาง ☕ อ่อน)

รอสักครู่เพื่อให้การตั้งค่าได้รับการยืนยันโดยอัตโนมัติ หรือกดปุ่มใดก็ได้ ยกเว้นปุ่ม ☕ การตั้งค่าความกระด้างของน้ำจะถูกบันทึก โดยมีเสียงบี๊บ 2 ครั้งเป็นการยืนยัน

ขอให้เพลิดเพลินกับผลิตภัณฑ์ใหม่ของ Electrolux!

ปัญหาและวิธีการแก้ไข

ปัญหา	สาเหตุที่อาจเป็นไปได้	วิธีแก้ไขปัญหา
เครื่องใช้เวลานานในการเปิดเครื่องหรือปิดเครื่อง	เพื่อรักษาความสะอาดของระบบ โดยส่วนใหญ่เครื่องจะทำการล้างอัตโนมัติก่อนเปิดเครื่องหรือก่อนปิดเครื่อง	ไม่จำเป็นต้องดำเนินการใด ๆ
ไม่สามารถเปิดเครื่องได้	ไม่ได้เสียบปลั๊กไฟเข้ากับเต้ารับ	เชื่อมต่อปลั๊กไฟเข้ากับแหล่งจ่ายไฟ
	ไม่ได้กดปุ่มเปิด/ปิดเครื่อง	กดปุ่มเปิด/ปิด
	ปุ่มเปิด/ปิดเครื่องชำรุด	ติดต่อศูนย์บริการที่ได้รับอนุญาต
เครื่องมีเสียงแตกร้าวระหว่างการทำงาน	ชุดชงกาแฟกำลังทำงาน	ไม่จำเป็นต้องดำเนินการใด ๆ
ถาดรองเต็มอย่างรวดเร็วหลังจากเตรียมกาแฟสกัดเย็น	กาแฟสกัดเย็นต้องใช้น้ำในปริมาณมากกว่า	เทน้ำออกจากถาดรองทันทีหลังจากเตรียมกาแฟสกัดเย็น
มีกากกาแฟอยู่บนชุดชงกาแฟและภายในช่องชุดชงกาแฟ	กากกาแฟจะตกออกมาเมื่อเลือกความเข้มข้นสูงสุด	ทำความสะอาดชุดชงกาแฟและช่องชุดชงกาแฟเป็นระยะ ๆ
มีหยดน้ำร้อนกระเด็นออกมาระหว่างการจ่ายน้ำร้อน	ต้องใช้แรงดันที่เหมาะสมเพื่อจ่ายน้ำร้อนในปริมาณที่ถูกต้องภายในเวลาที่กำหนด	ใช้ถ้วยที่สูงกว่าเมื่อใช้งานฟังก์ชันน้ำร้อนเพื่อป้องกันน้ำกระเด็น
เครื่องแจ้งเตือนว่าน้ำไม่เพียงพอทั้งที่ยังมีน้ำเหลืออยู่ในแท็งค์น้ำ	น้ำที่เหลืออยู่จะถูกเก็บไว้เพื่อป้องกันอุปกรณ์	เติมน้ำในแท็งค์น้ำเมื่อไฟแจ้งเตือนสว่างขึ้น
ฟังก์ชันอเมริกาโนจะเริ่มชงกาแฟก่อนจะหยุดชั่วคราวระหว่างกระบวนการ จากนั้นจึงเริ่มการจ่ายน้ำร้อน	การตั้งค่าโปรแกรมนี้ออกแบบมาเพื่อให้ได้รสชาติอเมริกาโนที่เหมาะสมที่สุด	ไม่จำเป็นต้องดำเนินการใด ๆ รอให้โปรแกรมทำงานจนเสร็จสิ้นจนกว่าเครื่องจะกลับเข้าสู่โหมดเตรียมพร้อม ห้ามนำถ้วยกาแฟออกระหว่างที่กระบวนการกำลังดำเนินอยู่
ไฟแสดงสถานะ ⊘ ยังคงสว่างอยู่หลังจากเติมเมล็ดกาแฟลงในโถใส่เมล็ดกาแฟแล้ว	การแจ้งเตือนเมล็ดกาแฟจะตรวจจับว่ามีเมล็ดกาแฟอยู่หรือไม่หลังจากบดและอัดกากกาแฟแล้ว	เติมเมล็ดกาแฟลงในโถใส่เมล็ดกาแฟและเริ่มกระบวนการชงกาแฟ จากนั้นไฟแสดงสถานะจะดับลง
อุณหภูมิกาแฟไม่เพียงพอ	ไม่ได้อุ่นถ้วยไว้ล่วงหน้า	ล้างถ้วยด้วยน้ำร้อนเพื่ออุ่นถ้วยล่วงหน้า (**หมายเหตุ:** สามารถใช้ฟังก์ชันน้ำร้อนเพื่อวัตถุประสงค์นี้ได้)
กาแฟเจือจางหรือมีครีมาน้อย	กากกาแฟหยาบเกินไป	ปรับการตั้งค่าความละเอียดของการบดกาแฟ
	มีเมล็ดกาแฟเหลืออยู่ไม่เพียงพอ	เติมเมล็ดกาแฟลงในโถใส่เมล็ดกาแฟแล้วชงอีกครั้ง
ไม่มีเอสเพรสโซจ่ายออกจากหัวจ่ายกาแฟหรือเอสเพรสโซที่จ่ายออกมาไม่ต่อเนื่อง	กากกาแฟละเอียดเกินไป	ปรับการตั้งค่าความละเอียดของการบดกาแฟ
	ชุดชงกาแฟอุดตัน	ทำความสะอาดชุดชงกาแฟ โปรดดูหัวข้อ “การทำความสะอาดชุดชงกาแฟ”
เครื่องยังคงไม่สามารถใช้งานได้หลังจากเสร็จสิ้นกระบวนการขจัดคราบตะกรันหนึ่งรอบ	ยังดำเนินการไม่ครบหนึ่งรอบกระบวนการ	ตรวจสอบให้แน่ใจว่ากระบวนการขจัดคราบตะกรันและกระบวนการล้างหลังจากนั้นเสร็จสิ้นครบถ้วนแล้ว เครื่องจะแจ้งให้ดำเนินการล้างหลังจากกระบวนการขจัดคราบตะกรันรอบแรกเสร็จสิ้น โปรดดูหัวข้อ “การขจัดคราบตะกรัน”
	เติมน้ำในแท็งค์น้ำไม่เพียงพอระหว่างกระบวนการขจัดคราบตะกรันหรือกระบวนการล้างหลังจากนั้น	เติมน้ำในแท็งค์น้ำให้มีปริมาณเพียงพอ

ไม่สามารถปิดเครื่องได้	ระดับน้ำในแท็งค์น้ำต่ำ	เติมน้ำในแท็งค์น้ำเพื่อให้เครื่องสามารถดำเนินกระบวนการล้างขั้นสุดท้ายจนเสร็จสิ้น
เครื่องไม่ผลิตไอน้ำ	ฟังก์ชันไม่ได้ถูกเปิดใช้งานอย่างถูกต้อง	โปรดดูหัวข้อ “ตีฟองนมและทำคาปูชิโน่/ลาเต้” เพื่อใช้งานการจ่ายไอน้ำ
	เครื่องยังไม่ถึงอุณหภูมิไอน้ำที่ถูกต้อง	รอจนกว่าเครื่องจะถึงอุณหภูมิที่กำหนดไว้ ไฟแสดงสถานะปุ่ม จะสว่างค้างเมื่อพร้อมใช้งาน
คุณภาพฟองนมไม่ดี	หัวฉีดไอน้ำมีคราบตกค้างอุดตัน	โปรดดูหัวข้อ “การทำความสะอาดหัวฉีดไอน้ำ/น้ำร้อน” เพื่อทำความสะอาดหัวฉีดไอน้ำ/น้ำร้อน หรือโปรดดูหัวข้อ “การขจัดคราบตะกรัน” เพื่อดำเนินกระบวนการขจัดคราบตะกรัน (**หมายเหตุ:** คุณภาพของฟองนมยังขึ้นอยู่กับประเภทของนมที่ใช้ด้วย)

อีเลคโทรลักซ์ขอสงวนสิทธิ์ในการเปลี่ยนแปลงผลิตภัณฑ์ ข้อมูลและข้อมูลจำเพาะโดยไม่ต้องแจ้งให้ทราบล่วงหน้า

中国
伊莱克斯（中国）电器有限公司
上海市虹口区公平路168号
北外滩来福士西塔30楼
售后服务: +86 9510 5801
网站: www.electrolux.com.cn

台灣
新加坡商伊萊克斯股份有限公司 台灣分公司
105408 台北市松山區敦化南路一段3號4樓
免付費客服專線: 0800-888-259
電子信箱: service.tw@electrolux.com
網站: www.electrolux.com.tw

KOREA
Electrolux Korea limited
22F, Youngpoong Building, 41,
Cheonggyecheon-ro, Jongno-gu,
Seoul, Republic of Korea (03188)
Tel : +82 2 6020-2200
Fax: +82 2 6020-2271-3
Customer Care Services : +82 1566-1238
Email : homecare.krh@electrolux.com
Website: www.electrolux.co.kr

INDONESIA
PT. Electrolux Indonesia
Jalan Tanah Abang II No. 42,
Petojo Selatan, Gambir,
Jakarta Pusat 10160,
Indonesia
Tel: +62 21 5081 7303
Fax: +62 21 5081 8069
SMS/WA : 0811-8339-777
Customer Care Services: 0804111 9999
Email: customercare@electrolux.co.id
Website: www.electrolux.co.id

PHILIPPINES
Electrolux Philippines, Inc.
12th Floor, Cyber Sigma Building
Lawton Avenue, Mckinley West, Fort Bonifacio
Taguig City, Philippines 1634
Domestic Toll Free: 1-800-10-845-CARE (2273)
Customer Care Services: (02) 845-CARE (2273) /
(02)-8845-4663
Email: wecare@electrolux.com
Website: www.electrolux.com.ph

THAILAND
Electrolux Thailand Co Ltd
Electrolux Building
1910 New Petchburi Road
Bangkapi, Huay Kwang
Bangkok 10310
Thailand
Tel: +66 2 725 9100
Fax: +66 2 725 9299
Customer Care Services: +66 2 725 9000
Email: customercarethai@electrolux.com
Website: www.electrolux.co.th

VIETNAM
Electrolux Vietnam Ltd
Floor 10, Sofic Tower, 10 Mai Chi Tho,
An Khanh Ward,
Ho Chi Minh City,
Vietnam
Tel: +84 8 3910 5465
Fax: +84 8 3910 5470
Customer Care Services: 1800-58-8899
Email: vncare@electrolux.com
Website: www.electrolux.vn

MALAYSIA
Electrolux Home Appliances Sdn Bhd
Lot C6, No. 28, Jalan 15/22,
Taman Perindustrian Tiong Nam,
40200 Shah Alam, Selangor
Malaysia
Customer Careline: 1300-88-1122
Email: malaysia.customercare@electrolux.com
Website: www.electrolux.com.my

SINGAPORE
Electrolux SEA Pte Ltd
351 Braddell Road #01-04
Singapore 579713
Customer Care Services: +65 6727 3699
Email: customer-care.sin@electrolux.com
Website: www.electrolux.com.sg

UAE
ELECTROLUX APPLIANCES
MIDDLE EAST DMCC,
P.O.BOX 336148, Unit No. 4001,
MAZAYA BUSINESS AVENUE BB1,
JUMEIRAH LAKE TOWERS, Dubai,
United Arab Emirates