




Instruction Book


Nordic Timeless Collection
Espresso Machine

E6EC1-700W

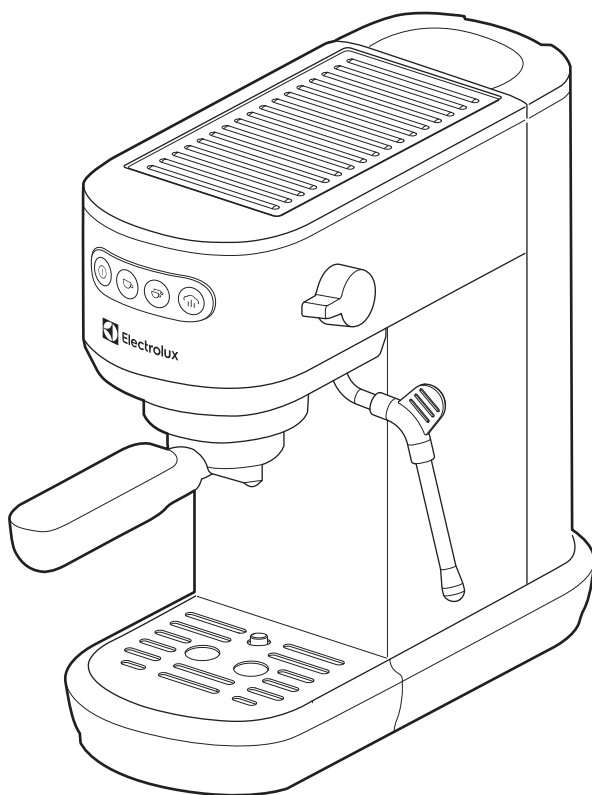


EN INSTRUCTION BOOK





TH คู่มือแนะนำการใช้งาน

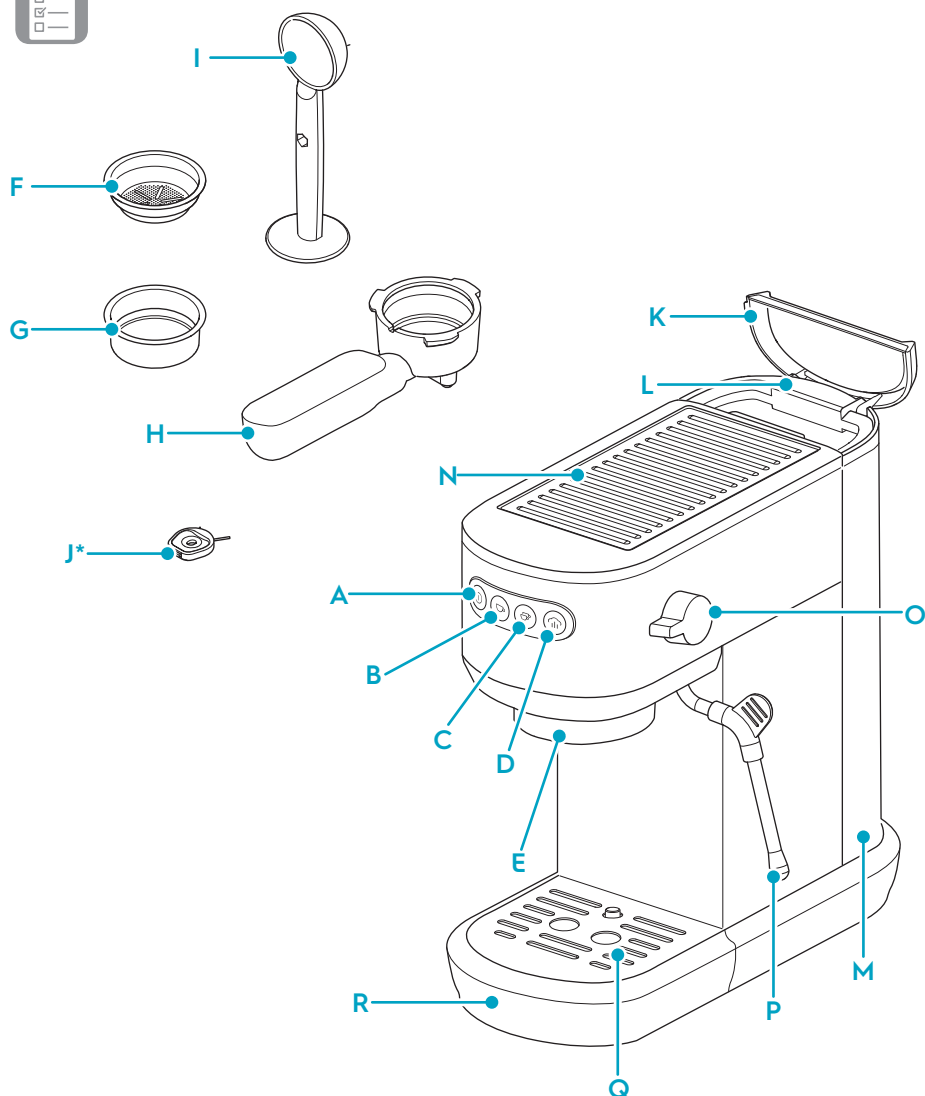

- | | | |
|---------------------------------|-----------------------------------|--|
| A. Power indicator button | G. Two-cup filter cup | M. Water tank |
| B. One-cup indicator/button | H. Filter holder | N. Cup warmer |
| C. Two-cup indicator/button | I. Tamper/dispenser measure spoon | O. Steam knob |
| D. Steam indicator/button | J. Cleaning pin* | P. Hot water/steam nozzle (milk frother) |
| E. Brewing head | K. Water tank lid | Q. Drip grid |
| F. One-cup/E.S.E pod filter cup | L. Water tank handle | R. Drip tray |

* available in certain models only

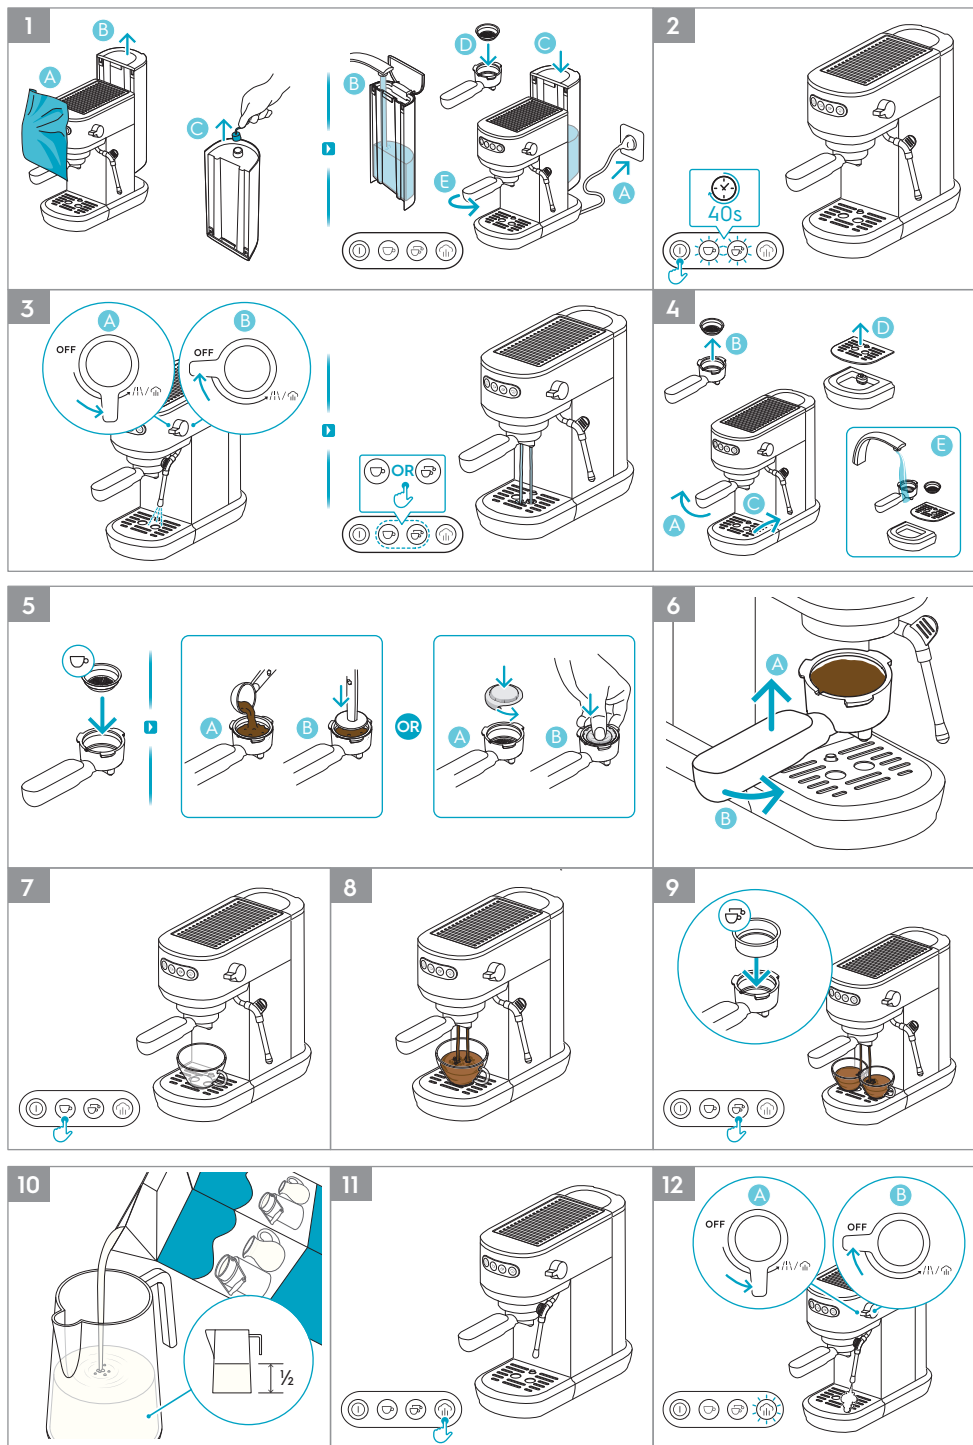

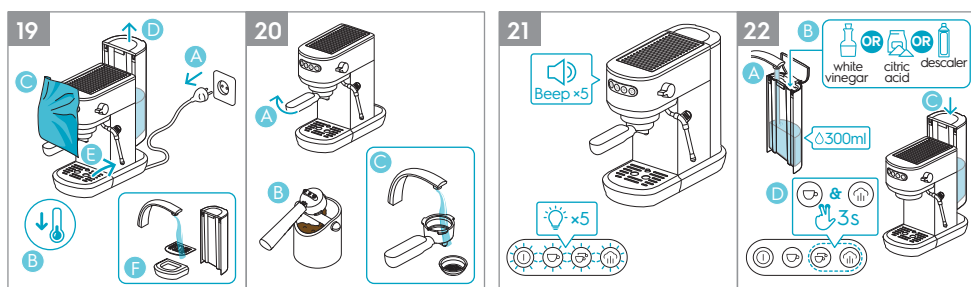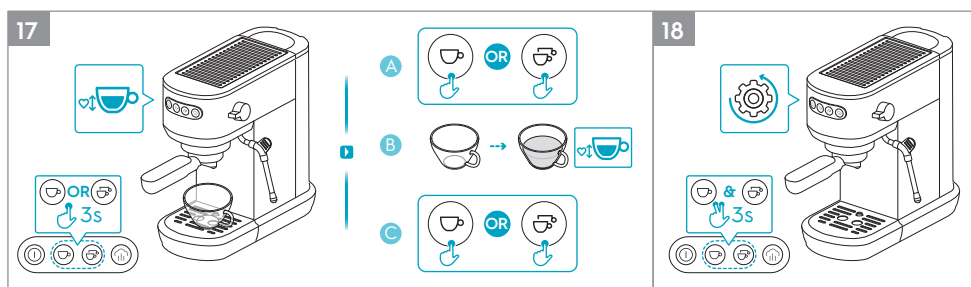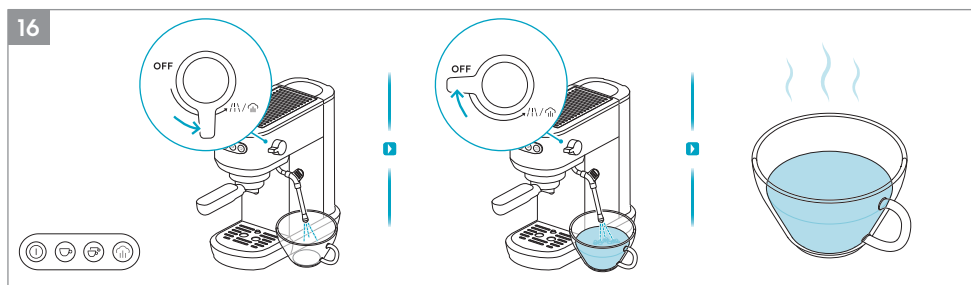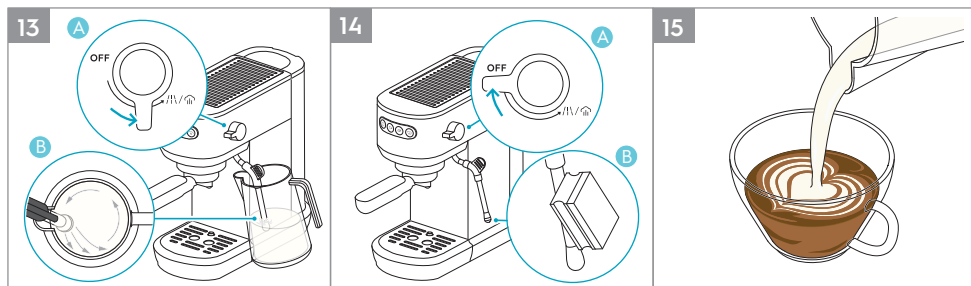

 electrolux.com/shop



**Premium Coffee
Descaler**
Ref : EPD1
PNC : 900923302

USER MANUAL

Graphics and drawings in this manual are solely for illustration purposes and are subject to variations from actual product.

Read all instructions carefully before using the appliance for the first time.

Keep this manual for future reference.

SAFETY ADVICE

Read the following instruction carefully before using the appliance for the first time.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 years old and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years old.
- The appliance may only be connected to a power supply with voltage and frequency comply with the specifications on the rating plate.
- Never use or pick up the appliance if
 - the supply cord is damaged,
 - the housing is damaged.
- The appliance must only be connected to an earthed socket. If necessary, an extension cable suitable for 10 A can be used.
- If the appliance or the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person to avoid hazard.
- Always place the appliance on a flat, level surface.
- The appliance must be switched off and unplugged after use, before cleaning and maintenance.
- The appliance and accessories become hot during operation. Use only designated handles and knobs. Allow to cool down before cleaning or storage.
- The mains cable must not come into contact with any hot parts of the appliance.
- Do not remove the filter holder during the brewing process as the appliance is pressurized.
The risk of burns exists.
- Do not remove the water tank during the brewing process.
- Do not remove the filter holder during the brewing process or when there's steam / hot water flowing from the filter holder. Ensure to release the pressure into water tank before removing the filter holder. **DANGER! There is risk of scalding.**
- Release pressure through hot water/steam nozzle before removing filter holder.
- **WARNING: Avoid steam burn.**
- When the steam function is used there can be some hot water dripping from the brewing head. **DANGER! The water is hot, there is a risk for scalding.**
- When opening the steam knob there is a shot of hot water coming out. Be careful and open the steam valve slowly. **DANGER! The water is hot, there is a risk for scalding.**
- Do not immerse the appliance in water or any other liquid.
- Do not exceed the maximum filling volume as indicated on the appliances.
- Fill the water tank only with cold water, never with milk or other liquids.
- Always use fresh water to brew espresso to promise the best taste.
- Do not use the appliance if the water tank has not been filled.
- Do not use the appliance without the drip tray or drip grid, unless a higher cup/mug is in use.
- Do not use or place the appliance on a hot surface or near source of heat.
- **WARNING: Avoid spillage on the connector.**
- **WARNING: Potential injury can be caused from misuse.**
- **WARNING: Do not place the appliance in a cabinet when in use.**
- This appliance is intended for domestic use only. The manufacturer cannot accept any liability for possible damage caused by improper or incorrect use.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances.

Do not dispose appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

Electrolux reserves the right to change products, information and specifications without notice.

COMPONENTS

- | | |
|-----------------------------------|--|
| A. Power indicator button | J. Cleaning pin* |
| B. One-cup indicator/button | K. Water tank lid |
| C. Two-cup indicator/button | L. Water tank handle |
| D. Steam indicator/button | M. Water tank |
| E. Brewing head | N. Cup warmer |
| F. One-cup/E.S.E pod filter cup | O. Steam knob |
| G. Two-cup filter cup | P. Hot water/steam nozzle (milk frother) |
| H. Filter holder | Q. Drip grid |
| I. Tamper/dispenser measure spoon | R. Drip tray |

* available in certain modelsonly

GETTING STARTED

Start the machine for the first time

- 1 Place the machine on a flat surface. Plug in the machine to turn on its stand-by mode, with  button turns half on. Fill the tank with cold pure water. Put filter cup into filter holder, and then secure it onto brewing head anti-clockwise from "INSERT" to "LOCK" position without coffee. Make sure the knob is at the horizontal position ("OFF" position).

Note: Water quality varies by region, and it is recommended to use purified water.

- 2 Start the machine with  button, with light turns fully on and  and  buttons start blinking.
- 3 When buttons stop blinking, pre-heating is done. Open the steam knob for approximately 10-15 seconds to release any air trapped inside the machine. Then close the knob and press the  button or  button to start the brewing process.
- 4 When brewing is finished, remove the filter holder clockwise, clean the filter and the drip tray. Now the machine is ready to use.

Note: The machine will turn off automatically after 20 mins of no operation.

Make espresso coffee

- 5 **Put one-cup filter cup into filter holder.** Add one spoon of ground coffee, press it tight with tamper; or add an E.S.E pod and put it into filter cup. **E.S.E (Easy Serving Espresso) Pods can be used to simplify the espresso preparation. Each pre-packed pod contains 7 grams of coffee, already measured, pressed and sealed between 2 fine layers of filter paper.**
- 6 Attach the filter holder onto the brewing head in anti-clockwise direction from "INSERT" to "LOCK" position.
- 7 Put a warm cup on the drip tray. When pre-heating is done,  and  and  buttons fully light on, press  button to start brewing process.
- 8 Wait a moment and the top-grade coffee will flow out. When the machine stops working, your coffee is now ready.
- 9 Now apply two-cup filter cup. Press  button. Brew 2 cups of espresso at the same time.

Note:

If both  and  buttons start blinking quickly, you may simply press  or  button to cancel brewing, or you may restart brewing after cooling down the boiler. Turning the knob to  position to release hot water from steam nozzle. The pump stops working automatically when it has cooled down. Turn the knob off and resume brewing.

Froth milk and make cappuccino/latte

- 10 Fill a jug with 100ml (for cappuccino) or 200ml (for latte) milk. **Note: make sure jug diameter is no less than 70±5mm, and jug capacity can hold twice the milk volume after frothed.**

- 11 When pre-heating is done,  and  and  buttons fully light up. Press  button, it starts blinking.
Note: Use full milk at refrigerator temperature (NOT HOT!)
- 12 When the  button stops blinking, steam / milk frothing function is ready. Before frothing milk, push steam nozzle in the direction of drip tray, turn the knob to  /  position to release steam until there's no water coming out, turn off steam function by turning the knob back to horizontal "OFF" position.
- 13 Immerse steam nozzle in milk about 2cm under the milk surface, turn on the knob. Make sure the steam nozzle is placed in a position that makes the milk turning in one direction inside the jug from top to bottom.
- 14 When the desired level of foam is reached, turn off the knob. Note: Clean steam nozzle with wet sponge immediately after steam stops generating. Be careful not to get hurt! The pump automatically stops working after frothing milk for 3 minutes.
- 15 Pour the frothed milk into the espresso prepared, now the cappuccino/latte is ready. Sweeten to taste and if desired, sprinkle the froth with a little cocoa powder. **Note: After frothing milk, you may immediately make espresso again by pressing  or  button. If both  and  buttons start blinking quickly, cool down the boiler and resume brewing (see step 11)**

Make hot water

- 16 When pre-heating is done,  and  and  buttons fully light up, turn the knob to  /  position. Hot water will flow out from the steam nozzle. Turn the knob off when you get the needed amount.

DIY / Volume

- 17 When pre-heating is done,  and  and  buttons fully light up, press and hold  /  button for 3 seconds to start resetting mode. Press  /  button to start brewing and press again to stop when the desired volume is reached. Now the volume is saved for next operations.
- 18 Restore factory default setting simply by simultaneously pressing  and  buttons for 3 seconds again.

Cleaning and care

- 19 Turn the machine off and unplug the power cord. Let the machine cool down completely before cleaning. Wipe all outer surfaces with a damp cloth. Clean water tank, drip tray and drip grid regularly. Never use caustic or abrasive cleaners, and never immerse the machine in liquid!
Note: only the filter cups are dishwasher safe.
- 20 Detach the filter holder by turning it clockwise. Scrap coffee residue or used E.S.E pod. Extract the filter cup from the filter holder, rinse them with clean water and dry thoroughly.

Descaling

- 21 Descaling is recommended when all indicators blink 5 times with 5 beeps at the moment machine is turned on. Descaling warning will repeat 2 more times when you turn on the appliance if you do not perform descaling or do not cancel by simultaneously pressing  and  and  for 3 seconds.
- 22 Fill the water tank to 300ml level with water and then add the descaling agent (or fill in water and vinegar 1:1). **Use only an environmentally friendly descaling agent and always follow the manufacturer's instructions.** When pre-heating is done,  and  and  buttons fully light up, simultaneously press  and  for 3 seconds to start descaling process, during which  and  buttons are blinking slowly one after another. When descaling completes, the machine will return to stand-by mode. Perform step 1-4 twice before using the machine.

Enjoy your new Electrolux product!

TROUBLESHOOTING

EN

PROBLEM	POSSIBLE CAUSE	SOLUTION
Water leaks from the bottom of coffee maker.	There is too much water in the drip tray.	Please clean the drip tray.
	The coffee maker malfunctions.	Please contact with the authorized service facility for repairing.
Water leaks outside of filter cup.	There is some coffee powder on filter edge when attached to the brewing head.	Clean the coffee powder on the filter edge.
Acid (vinegar) taste exists in espresso coffee.	Didn't perform descaling correctly	Clean up machine according to step 1-4 for "start the machine for the first time"
	The coffee powder is stored in a hot, wet place for a long time. The coffee powder turns bad.	Please use fresh coffee powder, or store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
The coffee maker cannot work anymore or does not respond at all.	The power outlet is not plugged well.	Plug the power cord into an earthed socket correctly. If the appliance still does not work, please contact with the authorized service facility for repairing.
The steam / milk frothing does not work properly.	The white indicator is not illuminated.	Only after the white indicator is illuminated, the steam station can be used to perform milk frothing.
	The container is too big or the shape does not fit	Use high and narrow cup or professional milk frothing jug.
	You have used skimmed milk	Use whole milk or half-skimmed milk.
Steam indicator blinking quickly	Continuously steaming for 3 minutes and the steam knob is not reset	Reset steam knob to "OFF" position.
One-cup indicator and two-cup indicator blinking quickly	Dispense 40ml of hot water and the steam knob is not reset	Reset steam knob to "OFF" position.
	The steam knob is not reset after cooling down.	
	Boiler temperature is too high.	Turning the knob to  position to release hot water from steam nozzle. The pump stops working automatically when it has cooled down, then turn the knob back to "OFF" position and resume brewing.
One-cup indicator, two-cup indicator and steam indicator blinking quickly	The steam knob is not reset, but the machine is turned on	Reset steam knob to "OFF" position.
ALL indicators blinking at the same time for 5 times	Need descaling	Perform descaling.
Filter handle is too tight to operate	Fill too much coffee powder in the filter cup.	Fill filter cup with less coffee powder.
Coffee flows drip by drip	Too much coffee powder	Fill filter cup with less coffee powder.
	Coffee powder is too fine, and tamped too tight	Use coarser coffee powder or tamp coffee powder with less force.
	Filter cup is blocked	Clean the filter cup with cleaning pin.
No water come out for a long time during brewing	Machine works without water for a while then air accumulated in system.	Turn steam knob to  position, release some water out of steam nozzle, then turn the knob back to "OFF" position and resume brewing.

คู่มือการใช้งาน

ภาพกราฟฟิกและภาพร่างในคู่มือนี้มีไว้เพื่อคำอธิบายเท่านั้น และอาจจะแตกต่างจากผลิตภัณฑ์จริง กรุณาอ่านคำแนะนำที่แนบมาให้ละเอียดก่อนใช้เครื่องเป็นครั้งแรก เก็บคู่มือนี้ไว้สำหรับอ้างอิงในอนาคต

คำแนะนำด้านความปลอดภัย

อ่านคำแนะนำต่อไปนี้ให้ละเอียดก่อนใช้เครื่องเป็นครั้งแรก

- อุปกรณ์นี้สามารถใช้ได้โดยเด็กอายุตั้งแต่ 8 ปีขึ้นไปและบุคคลที่มีความบกพร่องทางร่างกาย ทางประสาทรับรู้หรือทางจิตใจ รวมถึงผู้ที่ขาดประสบการณ์และความรู้หากมีผู้ดูแลหรือผู้ให้คำแนะนำในการใช้อุปกรณ์อย่างปลอดภัย และเข้าใจถึงอันตรายที่เกี่ยวข้อง
 - ห้ามเด็กเล่นกับอุปกรณ์
 - ห้ามเด็กทำความสะอาดและบำรุงรักษาเครื่องเว้นแต่เด็กมีอายุมากกว่า 8 ปีและต้องอยู่ภายใต้การดูแลของผู้ใหญ่
 - เก็บอุปกรณ์และสายไฟให้พ้นจากมือเด็กที่อายุไม่ถึง 8 ปี
 - อาจเชื่อมต่ออุปกรณ์เข้ากับแหล่งจ่ายไฟที่แรงดันไฟฟ้าและความถี่ของไฟฟ้าตรงกับข้อมูลจำเพาะที่อยู่บนแผ่นป้ายระบุเท่านั้น
 - ห้ามใช้หรือหยิบจับอุปกรณ์หาก
 - สายไฟชำรุดเสียหาย
 - ตัวเครื่องชำรุดเสียหาย
 - ต้องเชื่อมต่ออุปกรณ์เข้ากับช่องรับไฟที่ต่อสายดินไว้แล้วเท่านั้น หากจำเป็น อาจใช้สายพ่วงไฟขนาด 10 A ได้
 - หากอุปกรณ์หรือสายไฟชำรุดเสียหาย ผู้ที่มีหน้าที่เปลี่ยนคือบริษัท ศูนย์บริการ หรือบุคลากรผู้เชี่ยวชาญเพื่อน้องกับอันตรายที่อาจเกิดขึ้น
 - วางอุปกรณ์ไว้บนพื้นผิวที่เรียบเสมอกันทุกครั้ง
 - ปิดเครื่องและตั้งปลั๊กออกหิ้งโซจาน ก่อนทำความสะอาดและดูแลรักษา
 - เครื่องและอุปกรณ์เสริมจะร้อนในขณะใช้โซจาน ให้อุ่นขึ้นและปล่อยให้เย็นก่อนทำการเฉพาะเท่านั้น บ่อยครั้งที่เครื่องเย็นก่อนทำความสะอาดหรือจัดเก็บ
 - ต้องระวังอย่าให้สายไฟแตะกับชิ้นส่วนที่ร้อนของเครื่อง
 - ห้ามเคลื่อนย้ายก้านแรงในขณะที่เครื่องกำลังต้มกาแฟ เนื่องจากเครื่องจะมีแรงดัน **เสี่ยงที่จะเกิดเพลิงไหม้**
 - ห้ามยกแก๊งค์น้ำออกในขณะที่เครื่องกำลังต้มกาแฟ
 - ห้ามเคลื่อนย้ายก้านแรงในขณะที่เครื่องกำลังต้มกาแฟ หรือเมื่อมีไอน้ำนำร้อนออกมาจากก้นชง ตรวจสอบให้แน่ใจว่าได้ปล่อยแรงดันลงในถังน้ำแล้วก่อนถอดก้นชงออก **อันตราย! อาจทำให้ถูกน้ำร้อนลวกได้**
 - คลายแรงดันผ่านหัวฉีดน้ำร้อน/ไอน้ำ ก่อนนำก้นชงออก
 - คำเตือน: ระวังถูกไอน้ำร้อนลวก**
 - เมื่อใช้ฟังก์ชันไอน้ำ อาจมีน้ำร้อนกระเด็นออกมาจากหัวชงกาแฟ **อันตราย! น้ำร้อนและอาจทำให้ลวกได้**
 - เมื่อหมุนเบ้าไอน้ำ อาจมีน้ำร้อนกระเด็นออกมากได้ ใช้ความระมัดระวังและค่อย ๆ เปิดวาล์วไอน้ำ **อันตราย! น้ำร้อนและอาจทำให้ลวกได้**
 - ห้ามจุ่มเครื่องลงในน้ำหรือของเหลว
 - ห้ามเติมน้ำลงที่แสดงระดับสูงสุดบนเครื่อง
 - เติมเฉพาะน้ำเย็นเท่านั้นลงในแก๊งค์น้ำ ห้ามเติมนมหรือของเหลวชนิดอื่น
 - ใช้เท้าเปล่าทุกครั้งเพื่อการต้มกาแฟเอสเปรสโซให้ได้รสชาติกลมกล่อมที่สุด
 - ห้ามใช้เครื่องชงกาแฟนี้หากไม่ได้เติมน้ำลงในแก๊งค์น้ำ
 - ห้ามใช้เครื่องชงกาแฟหากไม่ได้ใส่ถาดรองหรือตะแกรงรอง เว้นแต่ใช้ถ้วย/เหยือกที่สูงกว่าที่กำหนดไว้
 - ห้ามใช้หรือวางเครื่องไว้บนพื้นผิวที่ร้อนหรือใกล้กับแหล่งความร้อน
 - คำเตือน: การใช้โซจานผิดวิธีสามารถทำให้เกิดการบาดเจ็บได้**
 - คำเตือน: ห้ามวางเครื่องไว้ภายในตู้ขณะใช้จน**
 - คำเตือน: ระวังของเหลวหกเลอะเทอะบริเวณตัวต่อ**
 - อุปกรณ์ผลิตขึ้นเพื่อใช้ภายในบ้านเท่านั้น บริษัทจะไม่รับผิดชอบใดๆ ต่อความเสียหายที่อาจเกิดขึ้นเนื่องจากการใช้งานอย่างไม่เหมาะสมหรือไม่ถูกต้อง
 - เครื่องชงกาแฟไม่ได้ผลิตขึ้นเพื่อใช้งานร่วมกับเครื่องจับเวลาภายนอก หรือรีโมทควบคุมระยะไกลยี่ห้อต่างๆ
- อุปกรณ์ผลิตขึ้นเพื่อใช้ในครัวเรือน และการใช้งานก็คล้าย ๆ กันเช่น:**
- ส่วนของห้องครัวสำหรับพนักงานภายในร้าน สำนักงานและพื้นที่ทำงานอื่น ๆ
 - ฟาร์มเฮาส์
 - โดยลูกจ้างในโรงแรม ห้องพักรับและพื้นที่พักอาศัยในรูปแบบอื่น ๆ
 - สถานประกอบการที่ให้บริการห้องพักรับและอาหารเข้า

การกำจัดทิ้ง

รีไซเคิลวัสดุที่มีเครื่องหมาย . แลรีไซเคิลวัสดุบรรจุภัณฑ์ได้ โปรดแยกส่วนประกอบแต่ละชิ้นตามประเภทและทิ้งในภาชนะที่ตรงกับคำแนะนำในการกำจัดในท้องถิ่น การรีไซเคิลวัสดุบรรจุภัณฑ์ช่วยลดการใช้วัตถุดิบและปริมาณของเสียในหลุมฝังกลบ ช่วยปกป้องสิ่งแวดล้อมและสุขภาพของคนรอบข้างได้ด้วยการรีไซเคิลบรรจุภัณฑ์



ห้ามทิ้งอุปกรณ์ที่มีเครื่องหมาย  รวมกับขยะในครัวเรือน รวบรวมผลิตภัณฑ์ไปไว้ที่จุดรวบรวมขยะรีไซเคิลหรือติดต่อหน่วยงานที่ดำเนินการในเรื่องนี้

Electrolux ขอสงวนสิทธิ์ในการเปลี่ยนผลิตภัณฑ์ ข้อมูลและข้อมูลจำเพาะโดยไม่ต้องแจ้งให้ทราบ

ส่วนประกอบ (ภาพหน้า 2)

- A โฟโสดง/ปุ่มเปิดปิด
- B โฟโสดง/ปุ่มหนึ่งถ้วย
- C โฟโสดง/ปุ่มสองถ้วย
- D โฟโสดง/ปุ่มไอน้ำ
- E หัวชงกาแฟ
- F ถ้วยกรองหนึ่งถ้วย / ฟัก E.S.E
- G ถ้วยกรองสองถ้วย
- H ก้านชง
- I ที่วัดกาแฟ / ช้อนตวง

- J หมุดทำความสะอาด
- K ฟาเก็ทน้ำ
- L ก้านเก็บก๊อกน้ำ
- M แท็งก์น้ำ
- N ที่อุ่นถ้วยกาแฟ
- O แป้นหมุนไอน้ำ
- P หัวฉีดน้ำร้อน / ไอน้ำ (ดีฟองนม)
- Q ตะแกรงรอง
- R ถาดรอง

* มีจำหน่ายในบางรุ่นเท่านั้น

เริ่มต้นใช้งาน (ภาพหน้า 3 และ 4)

เริ่มใช้เครื่องชงกาแฟเป็นครั้งแรก

- 1
- วางอุปกรณ์ไว้บนพื้นผิวที่เรียบ เสียบปลั๊กเครื่องเพื่อเปิดโหมดเตรียม โดยโฟจากปุ่ม  จะสว่างขึ้นครึ่งหนึ่ง เติมน้ำเย็นลงในแท็งก์ ใส่ถ้วยกรองลงในก้นชง แล้วประกอบเข้ากับหัวชงกาแฟด้วยการหมุนจากซ้ายไปขวาจากตำแหน่ง "INSERT" มาที่ตำแหน่ง "LOCK" โดยยังไม่ต้องเติมน้ำ และเปลี่ยนไอน้ำให้อยู่ในโหมดนอน (ตำแหน่ง "OFF")
หมายเหตุ: คุณภาพน้ำจะแตกต่างกันไปในแต่ละพื้นที่ และขอแนะนำให้ใช้น้ำบริสุทธิ์
- 2
- สตาร์ทเครื่องด้วยปุ่ม  โดยโฟที่ปุ่มนี้จะติดสว่างเต็มที่และปุ่ม  และ  จะเริ่มกะพริบ
- 3
- เมื่อปุ่มหยุดกะพริบ การอุ่นเครื่องล่วงหน้าเสร็จเรียบร้อยแล้ว เปิดปุ่มสตีมนประมาณ 10-15 วินาที เพื่อแสดงดันอากาศที่ค้างอยู่ภายในเครื่อง จากนั้นปิดปุ่มสตีม แล้วกดปุ่ม  หรือปุ่ม  เพื่อเริ่มกระบวนการชงกาแฟ
- 4
- เมื่อเติมน้ำเรียบร้อยแล้ว ให้หมุนก้านชงออกทางด้านซ้าย ก่อนทำความสะอาดถ้วยกรองและล้างถาดรอง และเครื่องก็จะพร้อมสำหรับดื่มกาแฟพร้อมใหม่แล้ว
หมายเหตุ: เครื่องจะดับเองโดยอัตโนมัติหลังจากไม่ได้ใช้เครื่อง 20 นาที

วิธีชงกาแฟเอสเพรสโซ

วางถ้วยกรองหนึ่งถ้วยลงในก้นชง เติมน้ำเย็นหนึ่งช้อน กดให้แน่นด้วยที่บด หรือวางฟัก E.S.E โดยวางลงในถ้วยกรอง ใช้ฟัก E.S.E (Easy Serving Espresso) เพื่อช่วยให้อัตราการไหลของน้ำที่สม่ำเสมอ ฟักกาแฟเอสเพรสโซแต่ละฟักมีกาแฟอยู่ 7 กรัม ที่คำนวณ บดอัด และชัลมา แล้วระหว่างที่ชงกาแฟของคุณจะใช้เวลาประมาณ 25 วินาที

ดันก้านชงประกอบตรงหัวชงกาแฟของเครื่องชงกาแฟในทิศทางซ้ายไปขวาจากตำแหน่ง "INSERT" มาที่ "LOCK"

วางถ้วยที่อุ่นไว้บนถาดรอง เมื่อเครื่องเข้าสู่โหมด "อุ่นเครื่องเสร็จแล้ว" ปุ่ม  และ  จะนิ่งและสว่างเต็มที่ ให้กดปุ่ม  เพื่อเริ่มดื่มกาแฟ

รอสักครู่และกาแฟเอสเพรสโซจะไหลออกมา เมื่อเครื่องชงกาแฟหยุดทำงาน แสดงว่ากาแฟพร้อมสำหรับเสิร์ฟแล้ว

หากใช้ถ้วยกรองสองถ้วย กดปุ่ม  ดื่มกาแฟเอสเพรสโซ 2 ถ้วยพร้อมกัน

หมายเหตุ: หากปุ่ม  และปุ่ม  เริ่มกะพริบเร็ว คุณอาจต้องกดปุ่ม  หรือปุ่ม  เพื่อยกเลิกการต้มกาแฟ หรือ

คุณอาจเริ่มดื่มกาแฟอีกครั้งหลังจากการให้หม้อต้มเย็นลงแล้ว การหมุนแป้นไปที่ตำแหน่ง  /  จะเปิดให้น้ำร้อนไหลออกจากหัวฉีดไอน้ำ นี่เป็นกะพริบทำงานเองโดยอัตโนมัติเมื่อเย็นลง ให้หมุนแป้นมาที่ปิดและสามารถกลับมามีกาแฟได้

ดีฟองนมและทำคาปูชิโน/ลาเต้

เติมนม 100 มล. (สำหรับลาปูชิโน) หรือ 200 มล. (สำหรับลาเต้) ลงในเหยือก หมายเหตุ: เส้นผ่านศูนย์กลางของเหยือกต้องไม่น้อยกว่า 70±5 มม. และเหยือกต้องจุ่มไม่ได้เป็นสองเท่าหลังจากที่ทำฟองเสร็จแล้ว

- 11
- ในโหมด "อุ่นเครื่องเสร็จแล้ว" เมื่อปุ่ม  และ  นิ่งและสว่างเต็มที่ ให้กดปุ่ม  ซึ่งจะเริ่มกะพริบ หมายเหตุ: ใช้นมอุณหภูมิของตู้เย็น (ไม่ร้อน!)

- 12 เมื่อปุ่ม  หยุด:พริบ แสดงว่าฟังก์ชันโอน้ำ / ฟองนมพร้อมใช้งานแล้ว ก่อนทำฟองนม ให้ดันหัวฉีดโอน้ำไปทางถาดรอง หมุนเบ้นใบที่ตำแหน่ง  และปล่อยโอน้ำจนไม่ขึ้นน้ำไหลออกมา จากนั้นปิดฟังก์ชันโอน้ำโดยหมุนเบ้นกลับไปที่ตำแหน่ง "OFF" ในเบนวนอน
- 13 จุ่มหัวฉีดโอน้ำได้ฟองนมลงมาประมาณ 2 ซม. แล้วหมุนเบ้นเพื่อปิด หัวฉีดโอน้ำด้อยอยู่ในตำแหน่งที่จะปั่นนํ้าในทิศทางเดียวกันภายในเหยือกจากบนลงล่าง
- 14 เมื่อสิ้นมอเป็นฟองได้ทั้งระดับที่ต้องการแล้ว ให้หมุนเบ้นเพื่อปิด **หมายเหตุ:** ใช้ฟองนํ้าหมุนเบ้นเพื่อยืดเพื่อยืดความสะอาดหัวฉีดโอน้ำทันทีที่ไม่ใช้โอน้ำแล้ว แต่ระวังเพราะอาจได้รับบาดเจ็บได้ เบ้นจะหยุดทำงานโดยอัตโนมัติหลังจากดีฟองนมเป็นเวลา 3 นาที
- 15 เทฟองนมลงในเอสเพรสโซ่ที่เตรียมไว้ ดอนนี้คาปูชิโน/ลาเต้ก็พร้อมเสิร์ฟแล้ว ประจุสหวานตามชอบ หรือจะโรยพองโกโก้ด้านบนฟองนมก็ได้ **หมายเหตุ:** หลังจากดีฟองนมแล้ว คุณอาจจะชงกาแฟเอสเพรสโซ่อีกแก้วได้ด้วยการกดปุ่ม  หรือปุ่ม  หากปุ่ม  และปุ่ม  จะพริบเร็ว ๆ كررเพื่อให้หม้อต้มเย็นลงก่อน แล้วค่อยกลับมามาเพ็คอีกครั้ง (ดูขั้นตอนที่ 11)

การต้มน้ำร้อน

- 16 ในโหมด "อุ่นเครื่องเสร็จแล้ว" เมื่อปุ่ม  และ  และ  ทั้งหมดจะนิ่งและสว่างเต็มที่ ให้หมุนเบ้นมาที่ตำแหน่ง  น้ำร้อนจะไหลออกจากหัวฉีดโอน้ำ หมุนเบ้นเพื่อปิดเมื่อได้ปริมาณที่ต้องการแล้ว

ปริมาณการชงแบบ DIY /

- 17 ในโหมด "อุ่นเครื่องเสร็จแล้ว" เมื่อปุ่ม  และ  และ  ตั้งและสว่างเต็มที่ ให้กดปุ่ม  /  ค้างไว้ 3 วินาที เพื่อเริ่มรีเซ็ตโหมด กดปุ่ม  /  เพื่อเริ่มต้นกาแฟ และกดอีกครั้งเพื่อหยุดเมื่อได้กาแฟปริมาณที่ต้องการแล้ว ดอนนี้เครื่องจะบันทึกปริมาณที่ใช้ไว้สำหรับใช้ในครั้งหน้าและครั้งต่อ ๆ ไป
- 18 เรยก็นการตั้งค่าเริ่มต้นจากโรงงานได้ง่าย ๆ ด้วยการกดปุ่ม  และ  3 วินาทีอีกครั้ง

การทำความสะอาดและการดูแลรักษา

- 19 ปิดเครื่องและถอดปลั๊ก วางเครื่องทิ้งไว้ให้เครื่องเย็นสนิทก่อนทำความสะอาด ใช้ฟ้าน้ำหมาด ๆ เช็ดทำความสะอาดด้านนอกทั้งหมด ทำความสะอาดแท็งก์น้ำ ถาดรองและตะแกรงรองเป็นประจำ ห้ามใช้น้ำยาทำความสะอาดที่มีฤทธิ์กัดกร่อนหรือมีฤทธิ์แรง และห้ามจุ่มเครื่องลงในของเหลวโดยเด็ดขาด! **หมายเหตุ:** ถ้วยกรองจะเป็นอุปกรณ์ชิ้นเดียวที่ใช้กับเครื่องล้างจานได้
- 20 หมุนก้านของออกด้วยการหมุนไปทางซ้าย หมายเหตุ:เพื่ให้ลือหรือฟัก E.S.E ที่ใช้แล้วทิ้ง ยกถ้วยกรองออกจากก้านชง ล้างด้วยน้ำสะอาด และวางทิ้งไว้ให้แห้งสนิท

การจัดกราดตะกรัน

- 21 แนะนำให้ทำการจัดกราดตะกรันเมื่อไฟแสดงทั้งหมด:พริบ 5 ครั้ง และเมื่อเสียงดัง 5 ครั้งในตอนที่เปิดเครื่อง **การเตือนให้จัดกราดตะกรันจะเกิดขึ้นซ้ำอีก 2 ครั้ง เมื่อคุณเปิดเครื่องแต่คุณยังไม่ได้จัดกราดตะกรัน หรือยังไม่ได้ยกเลิกด้วยการกดปุ่ม  และ  และ  พร้อมกันค้างไว้ 3 วินาที หมายเหตุ:** การรีเซ็ตจะไม่ครอบคลุมถึงการซ่อมแซมเครื่องชงกาแฟที่เกิดบิษมาจากกราดตะกรัน หากพู่ใช้ไม่ได้ดำเนินการจัดกราดตะกรันตามขั้นตอนที่อธิบายไว้ข้างต้นเป็นประจำ
- 22 เติมนํ้าลงในแท็งก์น้ำจนถึงระดับ 300 มล. ก่อน และค่อยเติมนํ้ายาลจัดกราดตะกรัน (หรือเติมนํ้าและนํ้าส้มสายชูในอัตราส่วน 1:1) ใช้ **นํ้ายาลจัดกราดตะกรันที่เป็นมิตรกับสิ่งแวดล้อมเท่านั้น และปฏิบัติตามคำแนะนำของบริษัทเสมอ** ในโหมด "อุ่นเครื่องเสร็จแล้ว" เมื่อปุ่ม  และ  และ  ตั้งและสว่างเต็มที่ ให้กดปุ่ม  และ  พร้อมกันค้างไว้ 3 วินาที เพื่อเริ่มต้นขั้นตอนการจัดกราดตะกรัน ซึ่งในระหว่างนี้ปุ่ม  และ  จะ:พริบซ้ำ ๆ สลับกัน เมื่อจัดกราดตะกรันเสร็จแล้ว เครื่องจะกลับมายุ่งที่โหมดเตรียมพร้อม ทำตามขั้นตอนที่ 1-4 สองครั้งก่อนใช้เครื่องชงกาแฟอีกครั้ง

ขอให้อัฟฟิดเผลินกับพลิดกันที่หนึ่งของ Electrolux!

ปัญหาและวิธีการแก้ไข

ปัญหา	สาเหตุที่อาจเป็นไปได้	วิธีแก้ไขปัญหา
น้ำรั่วออกมาจากกันเครื่องชงกาแฟ	มีน้ำอยู่ในถาดรองกากกาแฟ	โปรดทำความสะอาดถาดรอง
	เครื่องชงกาแฟไม่ทำงาน	โปรดติดต่อศูนย์บริการที่ได้รับอนุญาตเพื่อส่งซ่อม
น้ำรั่วออกมาจากถ้วยกรอง	มีผงกาแฟอยู่รอบถ้วยกรองเมื่อคืนประกอบกับหัวชงกาแฟ	ล้างผงกาแฟที่ค้างอยู่รอบขอบแผ่นกรองออกให้หมด
กาแฟสเปรสไม่รสเปรี้ยว (น้ำดื่มสายชู)	ชดโครบต:กรณีไม่ถูกวิธี	ทำความสะอาดเครื่องชงกาแฟตามขั้นตอนที่ 1-4 สำหรับ "เริ่มใช้เครื่องชงกาแฟเป็นครั้งแรก"
	เก็บผงกาแฟไว้ในที่ร้อนหรือเปียกนานเกินไป พกกาแฟเสียแล้ว	โปรดใช้ผงกาแฟใหม่ หรือเก็บผงกาแฟที่ยังไม่ได้ใช้ไว้ในที่เย็นและแห้ง หลีกเลี่ยงเปิดของผงกาแฟแล้ว ให้สัมผัสไว้ให้แห้งตามเดิม และเก็บไว้ในตู้เย็นเพื่อรักษาความสด
เครื่องชงกาแฟไม่ทำงานหรือตอบสนองเองเลย	เสียบปลั๊กไม่ได้	เสียบปลั๊กไฟลงเ็นเต้ารับไฟที่ต่อสายดินไว้ให้ถูกต้อง หากเครื่องชงกาแฟยังไม่ทำงาน โปรดติดต่อศูนย์บริการที่ได้รับอนุญาตเพื่อส่งซ่อม
ฟองชื่อน้ำ / ตีฟองนมทำงานไม่ได้มาตรฐาน	ไฟแสดงสีขาวไม่ติดสว่าง	ใช้ฟองชื่อน้ำเพื่อตีฟองนมได้หลังจากไฟแสดงสีขาวติดสว่างขึ้นแล้วเท่านั้น
	การนม:ให้นมเกินไปหรือรูปทรงไม่เหมาะสม	ใช้ถ้วยทรงสูงและแคบ หรือเหยือกตีฟองนมแบบที่มือโปรใช้กัน
	ใช้นมพร่องมันเนย	ใช้นมไขมันเต็มหรือนมทั้งพร่องมันเนย
ไฟแสดงน้ำ渴:พร้อมเร็ว	ใช้ฟองชื่อน้ำต่อเนื่อง 3 นาที และยังไม่ได้รับรีเซ็ตเป็นน้ำ	รีเซ็ตเป็นน้ำที่ตำแหน่ง "OFF"
ไฟแสดงหนึ่งถ้วยและไฟแสดงสองถ้วย渴:พร้อมอย่างรวดเร็ว	พ่นน้ำร้อนออก 40 มล. และไม่ได้รีเซ็ตเป็นน้ำ	รีเซ็ตเป็นน้ำที่ตำแหน่ง "OFF"
	ไม่ได้รีเซ็ตเป็นน้ำหลังจากเครื่องเย็นลงแล้ว	
	หม้อต้มมีอุณหภูมิสูงเกินไป	การหมุนเป็นไปที่ตำแหน่ง  และปิดให้น้ำร้อนไหลออกจากหัวฉีดไอ น้ำ นี้จะหยุดทำงานเองโดยอัตโนมัติเมื่อเย็นลง
ไฟแสดงหนึ่งถ้วย ไฟแสดงสองถ้วย และไฟแสดงน้ำ渴:พร้อมอย่างรวดเร็ว	ไม่ได้รีเซ็ตเป็นน้ำ แต่เครื่องยังทำงาน	รีเซ็ตเป็นน้ำที่ตำแหน่ง "OFF"
ไฟแสดงทั้งหมด渴:พร้อมรอบ ๆ กัน 5 ครั้ง	ต้องชดโครบต:กรณี	ทำการชดโครบต:กรณี
ใช้กันชนได้เพราะ:นมเกินไป	เติมผงกาแฟในถ้วยกรองมากเกินไป	เติมผงกาแฟในถ้วยกรองให้น้อยลง
กาแฟไหม้หรือรสขม	ผงกาแฟมากเกินไป	เติมผงกาแฟในถ้วยกรองให้น้อยลง
	ผงกาแฟจะอัดเกินไปและอัดจนแน่นเกินไป	ผงกาแฟควรหยกกว่านี้หรือไม่ต้องอัดจนแน่นเกินไป
	ถ้วยกรองอุดตัน	ใช้หม้อทำความสะอาดเพื่อทำความสะอาดถ้วยกรอง
ไม่มีน้ำไหลออกมาเป็นเวลานานในขณะที่เครื่องกำลังต้มกาแฟ	เครื่องทำงานโดยไม่มีน้ำแรงหนึ่งจากนี้ซึ่งส่งผลให้อากาศสะสมในระบบ.	หมุนปุ่มไปที่ตำแหน่ง  ปล่อยน้ำออกจากหัวจ่ายน้ำเล็กน้อย จากนั้นหมุนปุ่มกลับไปที่ตำแหน่ง "ปิด" แล้วเริ่มต้มกาแฟอีกครั้ง

中国

伊莱克斯（中国）电器有限公司
上海市虹口区公平路168号
北外滩来福士西塔30楼
售后服务: +86 9510 5801
网站: www.electrolux.com.cn

台灣

新加坡商伊萊克斯股份有限公司 台灣分公司
105408 台北市松山區敦化南路一段3號4樓
免付費客服專線: 0800-888-259
電子信箱: service.tw@electrolux.com
網站: www.electrolux.com.tw

KOREA

Electrolux Korea limited
22F, Youngpoong Building, 41,
Cheonggyecheon-ro, Jongno-gu,
Seoul, Republic of Korea (03188)
Tel : +82 2 6020-2200
Fax: +82 2 6020-2271-3
Customer Care Services : +82 1566-1238
Email : homecare.kr@electrolux.com
Website: www.electrolux.co.kr

INDONESIA

PT. Electrolux Indonesia
Jalan Tanah Abang II No. 42,
Petojo Selatan, Gambir,
Jakarta Pusat 10160,
Indonesia
Tel: +62 21 5081 7303
Fax: +62 21 5081 8069
SMS/WA : 0811-8339-777
Customer Care Services: 0804111 9999
Email: customer-care@electrolux.co.id
Website: www.electrolux.co.id

PHILIPPINES

Electrolux Philippines, Inc.
12th Floor, Cyber Sigma Building
Lawton Avenue, McKinley West, Fort Bonifacio
Taguig City, Philippines 1634
Domestic Toll Free: 1-800-10-845-CARE (2273)
Customer Care Services: (02) 845-CARE (2273) /
(02)-8845-4663
Email: wecare@electrolux.com
Website: www.electrolux.com.ph

THAILAND

Electrolux Thailand Co Ltd
Electrolux Building
1910 New Petchburi Road
Bangkapi, Huay Kwang
Bangkok 10310
Thailand
Tel: +66 2 725 9100
Fax: +66 2 725 9299
Customer Care Services: +66 2 725 9000
Email: customer-care-thai@electrolux.com
Website: www.electrolux.co.th

VIETNAM

Electrolux Vietnam Ltd
Floor 10, Sofic Tower, 10 Mai Chi Tho,
An Khanh Ward,
Ho Chi Minh City,
Vietnam
Tel: +84 8 3910 5465
Fax: +84 8 3910 5470
Customer Care Services: 1800-58-8899
Email: vn-care@electrolux.com
Website: www.electrolux.vn

MALAYSIA

Electrolux Home Appliances Sdn Bhd
Lot C6, No. 28, Jalan 15/22,
Taman Perindustrian Tiong Nam,
40200 Shah Alam, Selangor
Malaysia
Customer Careline: 1300-88-1122
Email: malaysia.customer-care@electrolux.com
Website: www.electrolux.com.my

SINGAPORE

Electrolux SEA Pte Ltd
351 Braddell Road #01-04
Singapore 579713
Customer Care Services: +65 6727 3699
Email: customer-care.sin@electrolux.com
Website: www.electrolux.com.sg

UAE

ELECTROLUX APPLIANCES
MIDDLE EAST DMCC,
P.O.BOX 336148, Unit No. 4001,
MAZAYA BUSINESS AVENUE BB1,
JUMEIRAH LAKE TOWERS, Dubai,
United Arab Emirates



Share more of our thinking at www.electrolux.com