Electrolux

electrolux.com/register

EDH90****

EN	User Manual	**Tumble Dryer**	2
TH	คู่มือการใช้งาน	**เครื่องอบผ้า**	55

Enjoy peace of mind. Register your appliance today.

Stay updated on better living services, safety notices and shop for accessories.

1. **Open the camera app on your smartphone and point at the QR code to scan.**
   Product Registration QR code is located on the front of your appliance or inside the door rim.

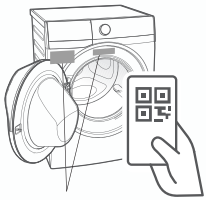

2. **Tap the notification or link to open the registration form.**
3. **Complete your details and enjoy peace of mind.**

Full version of the User Manual is available on www.electrolux.com. Alternatively, scan QR code, tap Electrolux logo, and search for your appliance.

Welcome to Electrolux! Thank you for choosing our appliance.

Get usage advice, brochures, troubleshooter, service information, buy accessories & spare parts, online product registration.
www.electrolux.com

CUSTOMER CARE AND SERVICE

We recommend the use of original spare parts. When contacting Service, ensure that you have the following data available. The information can be found on the rating plate. Model, PNC, Serial Number.

⚠ Warning / Caution-Safety information.

ⓘ General information and tips.

Environmental information.

Subject to change without notice.

CONTENT

1. ⚠ SAFETY INFORMATION 3
2. SAFETY INSTRUCTIONS 7
3. PRODUCT DESCRIPTION 9
4. TECHNICAL DATA 9
5. INSTALLATION 10
6. CONTROL PANEL 15
7. DIAL AND BUTTONS 16
8. DISCOVER YOUR APPLIANCE 18
9. FIRST TIME START-UP 19
10. WIFI - CONNECTIVITY SETUP 20
11. PROGRAMMES 24
12. OPTIONS 29
13. MACHINE SETTINGS 35
14. STEAM FUNCTION 38
15. BEFORE FIRST USE 40
16. DAILY USE 41
17. HINTS AND TIPS 45
18. CARE AND CLEANING 46
19. TROUBLESHOOTING 51
20. ENVIRONMENT CONCERNS 54

1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions.
The manufacturer is not responsible if an incorrect installation and use causes injuries and damage.
Always keep the instructions with the appliance for future reference.

Read the instructions.

WARNING: Flammable materials/Risk of fire.

The appliance contains flammable gas, propane (R290), a gas with a high level of environmental compatibility. Keep fire and ignition sources away from the appliance.
Be careful not to cause damage to the refrigerant circuit containing propane.

1.1 Children and vulnerable people safety

⚠ **WARNING!**
Risk of suffocation, injury or permanent disability.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not let children play with the appliance.

- Keep all packaging away from children and dispose of it appropriately.
- Keep detergents away from children.
- Keep children and pets away from the appliance when the door is open.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

1.2 General Safety

- Do not change the specification of this appliance.
- The appliance can be installed as free-standing or below a kitchen counter with correct space (refer to the Installation chapter).
- Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, that would prevent the appliance door from being fully open.
- The ventilation opening in the base must not be covered by a carpet, mat, or any floor covering.
- Connect the mains plug to the mains socket only at the end of the installation process. Make sure that the mains plug is accessible after installation.
- Ensure good air ventilation in the room where the appliance is installed to avoid the back flow of unwanted gases into the room from appliances burning gas or other fuels, including open fires.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorized Service Centre or similarly qualified persons to avoid an electrical hazard.

- Do not exceed the maximum load (refer to the "Programme chart" chapter in User manual).
- Do not use the appliance if items have been soiled with industrial chemicals.
- Wipe away lint or packaging debris that has accumulated around the appliance.
- Do not run the appliance without a filter. Clean the lint filter before or after each use.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items containing foam rubber (also known as latex foam), similarly textured rubber, or materials e.g. shower caps, waterproof textiles, rubber-backed articles, and clothes or pillows fitted with foam rubber pads should not be dried in the machine on a heat setting. Foam rubber materials can produce fire by spontaneous combustion when heated.
- Fabric softeners, or similar products, should only be used as specified by the product manufacturer's instructions.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and create a fire hazard.

- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent. This will reduce, but not eliminate, the hazard.
- Remove all objects from items that could be a source of fire ignition such as lighters or matches.
- Before any maintenance operation, deactivate the appliance and disconnect the mains plug from the socket.
- Pre-treatment sprays and stain remover can damage plastic components on your machine. If you use pre-treatment sprays or stain removers, apply them to the clothing well away from your machine.

⚠ WARNING!

- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Do not damage the refrigerant circuit.
- Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

1.3 CONDITIONS OF USE

The appliance is intended to be used in household and similar applications such as:

- farm houses;
- by clients in hotels, motels, bed & breakfast and other residential type environments;
- areas for communal use in blocks of flats or in launderettes.

2. SAFETY INSTRUCTIONS

2.1 Installation

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions supplied with the appliance.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not install or use the appliance where the temperature can be lower than 5°C or higher than 35°C.
- The floor area on which the appliance is to be installed must be flat, stable, heat resistant and clean.
- Make sure that there is air circulation between the appliance and the floor.
- Always keep the appliance vertical when it is being moved.
- The rear surface of the appliance must be put against a wall.
- When the appliance is in its permanent position, check if it is levelled correctly with the aid of a spirit level. If it is not, adjust the feet accordingly.

⚠ WARNING!

- Do not install the appliance in an environment with no air exchange.
- In the appliance enclosure or in the built-in structure, keep ventilation opening clear of obstruction.

2.2 Electrical connection

⚠ WARNING!
Risk of fire and electric shock.

- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- The appliance must be earthed.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.

2.3 Use

⚠ WARNING!
Risk of injury electric shock, fire, burns or damage to the appliance.

- This appliance is for household (indoors) use only.
- Do not dry damaged (torn, frayed) items that contain padding or fillings.
- If laundry has been washed with a stain remover, carry out an additional rinse cycle before starting a drying cycle.
- Dry only fabrics that are suitable to dry in the appliance. Follow the cleaning instruction on the item label.
- Do not drink or prepare food with the condensed water/distilled water. It can cause health problems to people and pets.
- Do not sit or step on the open door of the appliance.
- Do not dry dripping wet clothes in the appliance.
- Fill steam generators only with liquids specified by the manufacturer. (Available for model EDH***R9**)

2.4 Internal lighting (Available for model EDH***R7**, EDH***R9**)

⚠ WARNING!
Risk of injury.

- Visible LED radiation, do not look directly into the beam.
- The LED lamp is dedicated to drum lighting. This lamp cannot be reused for other lighting purposes.
- To replace the internal lighting, contact the Authorized Service Centre.

2.5 Compressor

⚠ WARNING!
Risk of damage to the appliance.

- The compressor and its system in the tumble dryer is filled with a special agent which is free from fluoro-chloro-hydrocarbons. This system must stay tight. Damage of the system can cause a leakage.

2.6 Disposal

⚠ WARNING!
Risk of injury or suffocation.

- Disconnect the appliance from the mains electrical and water supplies.
- Cut off the mains electrical cable close to the appliance and dispose of it.
- The appliance contains flammable gas (R290). Contact your municipal authority for information on how to discard the appliance correctly. Remove the door latch to prevent accidental access by children or pets and getting trapped inside the drum.
- Dispose of the appliance in accordance with local requirements for the disposal of Waste Electrical and Electronic Equipment (WEEE).
- For more detailed information about recycling this product, Please contact your local city office, your household waste disposal service, or the shop where you purchased the product.

2.7 Care and cleaning

⚠ WARNING!
Risk of injury or damage to the appliance.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- Be careful when you clean the appliance to prevent damage to the cooling system.

3. PRODUCT DESCRIPTION

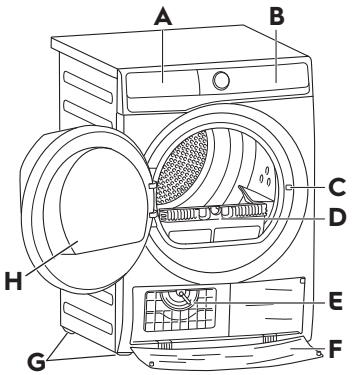

A Water Container
B Control Panel
C Door Lock
D Filter
E Heat Exchanger lid
F Heat Exchanger cover
G Adjustable Feet
H Appliance Door

4. TECHNICAL DATA

Model Name	EDH902R9SC
Height x Width x Depth	850 x 596 x 662 mm
Max. depth with the appliance door open	1107 mm
Max. width with the appliance door open	958 mm
Adjustable height	850 mm (+ 15 mm - feet adjustment)
Drum volume	113 l
Maximum load	9 kg
Voltage	220-240 V
Frequency	50 Hz
Total power	1600 W
Type of use	Household
Permitted ambient temperature	+ 5°C to + 35°C
Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture	**IPX4**
Gas designation	R290
Gas weight	0.149 kg

5. INSTALLATION

Unpacking

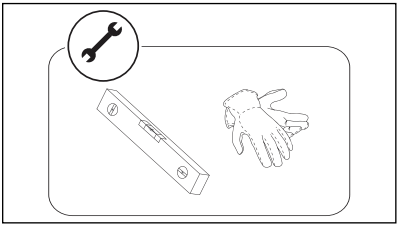

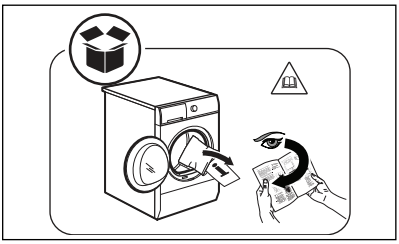

ⓘ The rear drum locks are removed automatically when the dryer is activated for the first time. Possible to hear some noise.

Installation

⚠ WARNING!
Before proceeding with installation, read the safety information, and dimension preferred.

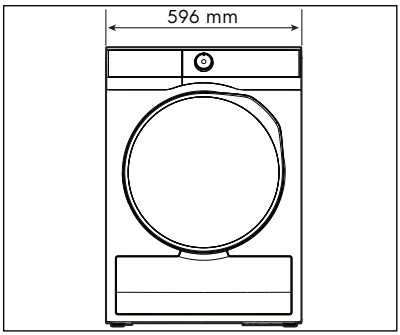

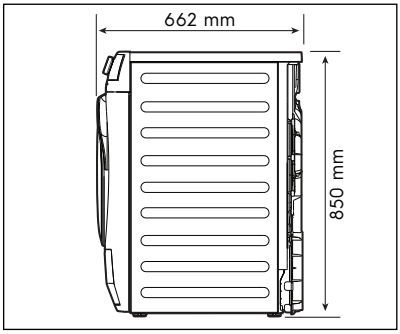

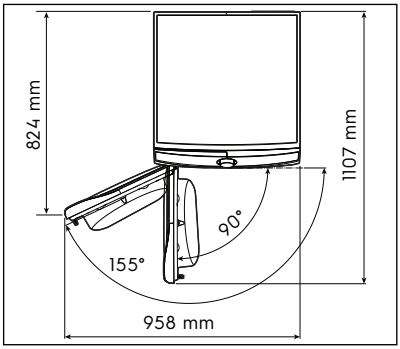

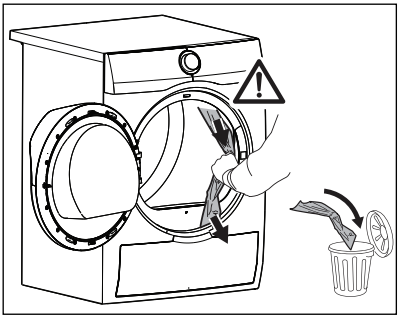

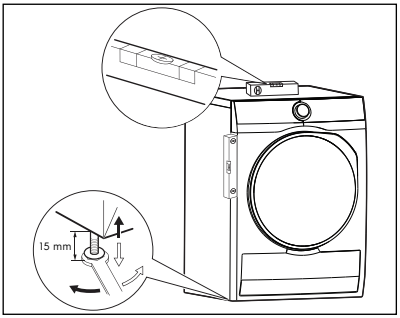

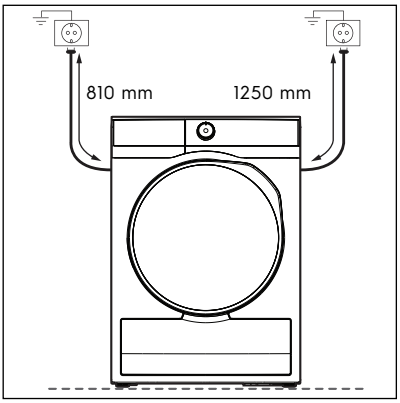

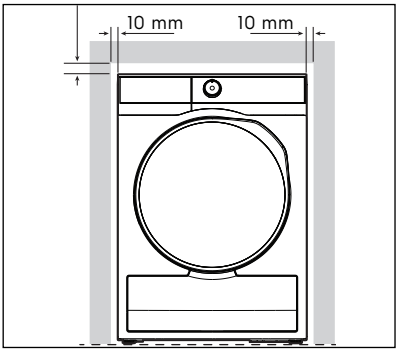

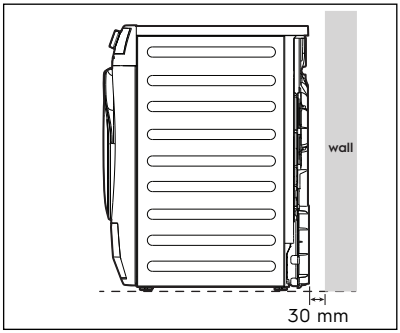

⚠ WARNING!

The tumble dryer cannot be placed on top of a washing machine.
For more information, please contact authorized dealer.

Door reverse guide

A tumble dryer can possibly change and reverse the door.

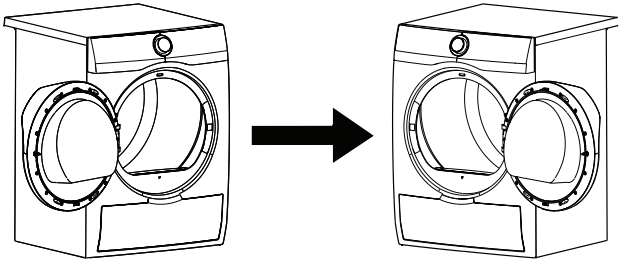

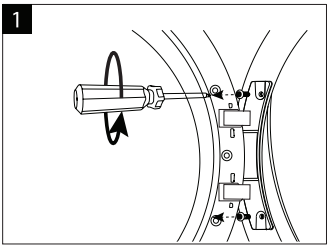

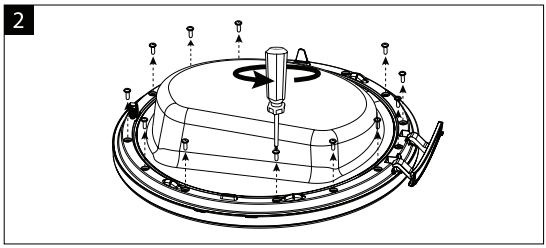

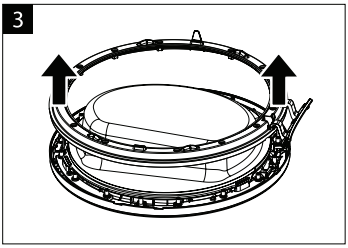

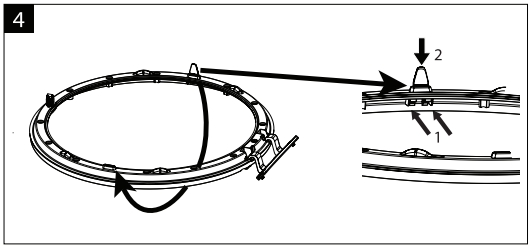

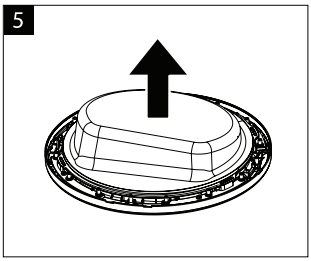

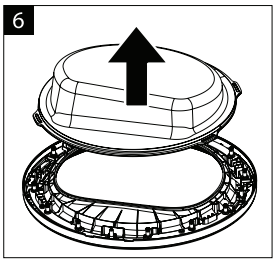

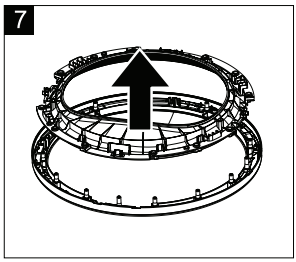

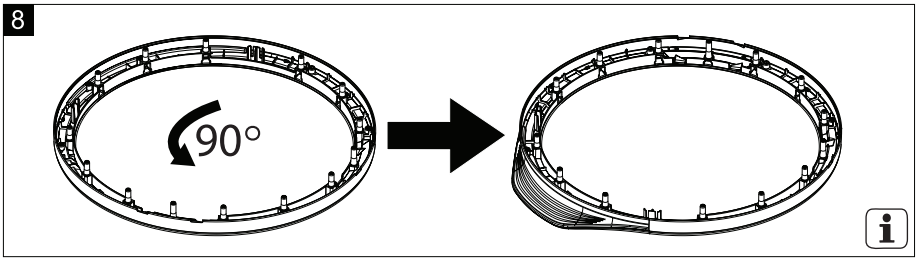

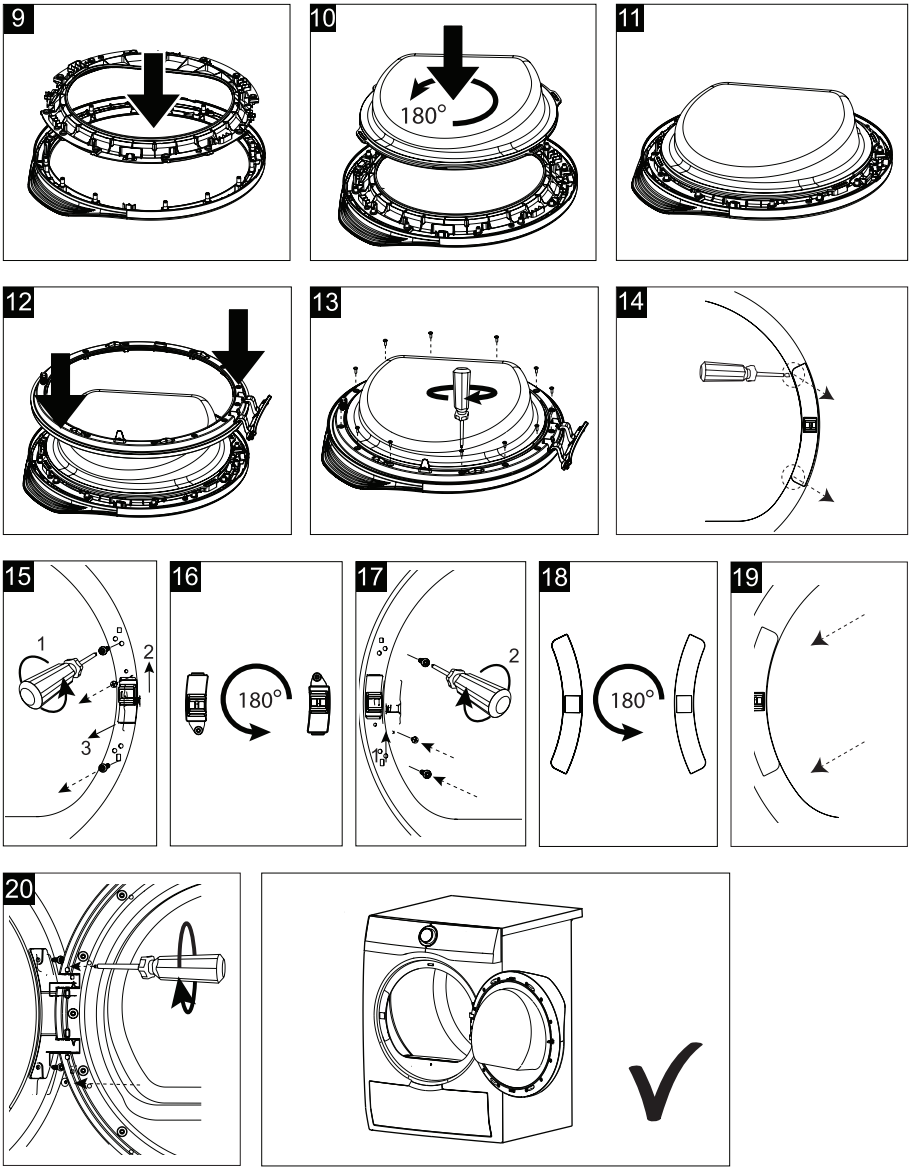
9
10
180°
11
12
13
14
15
1
2
3
16
180°
17
2
18
180°
19
20

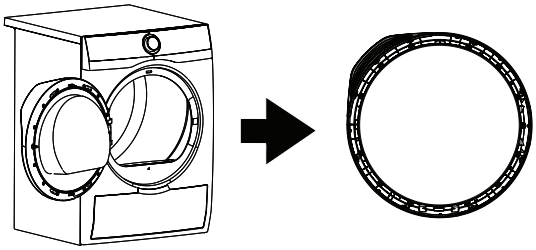

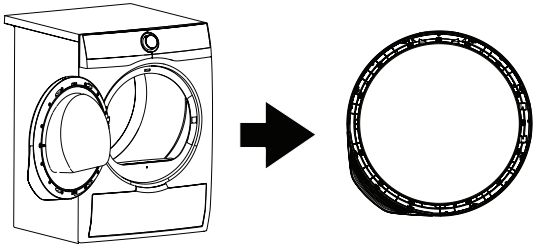

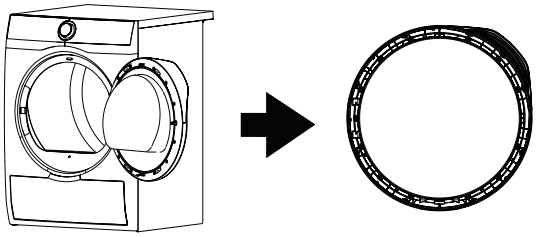

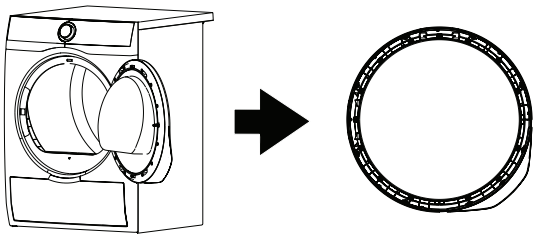

6. CONTROL PANEL

6.1 Control Panel Description

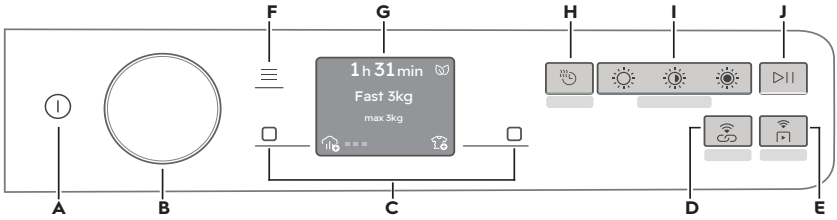

A On/Off button

B Programme knob

C Soft key

- Right Soft key
- Left Soft key

D SyncDry touch key

E Remote Start touch key

F Menu touch key

G Display

H Time Dry touch key

I Automatic dry touch key

- Extra Dry
- Cupboard Dry
- Iron Dry

J Start/Pause touch key

Press the touch buttons with your finger in the area with the symbol or name of the option. Do not wear gloves when you operate the control panel. Make sure that the control panel is always clean and dry.

6.2 SmartSelect

This new feature has been created with the aim of improving the sustainability of drying cycles, the care and maintenance of fabrics and consumer experience. This new interface area is designed with the aim of guiding the user through sustainable choices, and providing an improved and direct way of selecting the most indicated cycles and options with minimum effort. An indication on the sustainability will be given through the SmartLeaf indicator (see chapter Control Panel: SmartLeaf feedback).

The drying temperature adapts to each SmartSelect level according to the selected cycle to ensure the best performance, without the need to change the temperature manually.

6.3 SmartLeaf feedback

SmartLeaf guides the consumer toward a more energy-efficient clothes drying, based on energy consumption weighted on programme's rated capacity.

There are three different level of SmartLeaf indicated by the leaf icon (green colour) :

1. No leaf lit on the display or App indicates an average consumption level or no indication possible (for Time based cycles).
2. one leaf indicates a good energy consumption level.
3. two leaves indicate the best consumption level.

6.4 Symbols

	Indicator : Anticrease phase
	Indicator : Steam
	Indicator : WiFi
	Finish In icon
	Indicator : Drain the water container
	Indicator : Favourite
	SmartLeaf icon
	Indicator : Extra silent
	Child lock icon
	Indicator : Clean filter
	Indicator : Check heat exchanger

7. DIAL AND BUTTONS

7.1 Introduction

ⓘ The options are not available with all drying programmes. Check the compatibility between options and drying programmes in the "Programme options compatibility". An option can exclude another one, in this case the appliance doesn't allow you to set incompatible options.

7.2 ⏻ On/Off button

Press and hold briefly this button for a few seconds to activate or deactivate the appliance. A dedicated jingle sound while switching the appliance on or off, lights and display switches on and Start/ Pause button led pulse.

During the first switch on of the appliance, the system shall require to setup the appliance

7.3 Programme dial

By rotating the programme dial it is possible to select the desired programme.

7.4 Menu

Tap the "☰" touch key to enter inside the option.

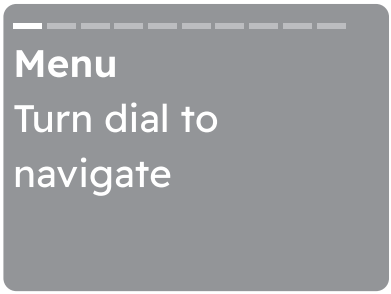

Turn the dial to navigate. To activate/ deactivate an option tap the right soft key "▢".

To exit the menu user shall:

- Press the "☰" touch key again.
- Wait a time out of 10 seconds.

7.5 ▢ Right/Left soft keys

The two soft keys "▢" are located on the right and the left of the display.

Tap the right soft key "▢" to prompt the action that appears on the right bottom of the display (ex. Finish In, go back in the menu,..).

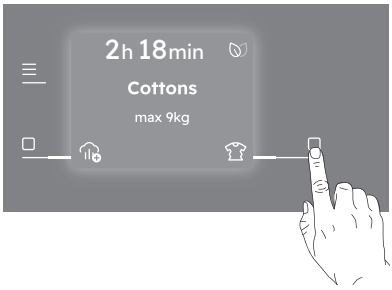

Tap the left soft key "▢" to prompt the action that appears on the left bottom of the display (e.g. Extra Anticrease, Final dryness level for Wool programme, Stem Level, activate or deactivate an option.) the menu,..).

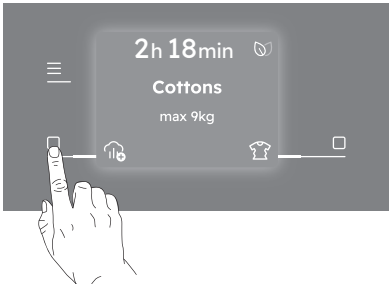

7.6 SmartSelect

This new feature has been created with the aim of improving the sustainability of drying cycles, the care and maintenance of fabrics and consumer experience.

Dryness Levels

Easy direct access to dryness level with one simple touch.

For drying the three possible choices are:

1. Iron Dry
   This option is recommended to dry garments suitable for ironing.
2. Cupboard Dry
   It is the default drying level selected for most programme, and it is indicated for items to be stored.
3. Extra Dry
   This option is recommended for towelling materials.

ⓘ To activate one of this options turn the dial to select the desired programme.
The default dryness level icon light on.
To change it tap on the related icon.

SyncDry

This feature lets your tumble dryer to automatically set the most appropriate programme that matches the last washing program recently executed.
All you need to do is start the drying programme once your tumble dryer is loaded. No other programme settings or options are required on the tumble dryer.

Once the washing programme has come to an end, the washing machine transfers the programme data via the home router WiFi to the Electrolux Cloud, as well as to your tumble dryer.

ⓘ In order to use the SyncDry function, the Electrolux tumble dryer and washing machine must be connected to the same home network and paired with our app.

To activate the function:

1. Once the wash cycle has come to an end, place the clean laundry in the tumble dryer.
2. Press "SyncDry" touch key.
3. All display symbols will stay lighted off except WiFi icon and ProSense bars that run an animation for a few seconds as the appliance is retrieving data from the cloud.
4. Display will update itself automatically with the suggested programme.
   After 10 seconds, if data retrieving is unsuccessful, the button LED is switched off and the machine gives an acoustic error signal. Then previously selected programme is restored.

5. Press "▷|| Start/Pause" touch key to begin drying process.

ⓘ When SyncDry programme is set, user is still allowed to change options or select another program by rotating knob or using APP. In such cases SyncDry touch key LED will turn off to indicate that the programme is not anymore the suggested one; SyncDry automatic programme can be selected again by pressing related touch key until data is available on Cloud.

7.7 ▷|| Start/Pause

Tap the "▷|| Start/Pause" touch key to start and pause the appliance or interrupt a running programme.

7.8 Remote Start

A quick touch of this "" activates the Remote Start function that allows you to start, pause and stop the appliance remotely.

Activating the Remote Start the machine goes in a stand-by status.

To exit this state, preaa again the button and turn it off.

ⓘ If the door is open, the Remote Start is deactivated.

Press and hold this button for longer time to provide two other functions:

- hold it down for 5 seconds as long as a click sounds: the WiFi is turned on and off.
- hold it down for 10 seconds as long as a double beep sounds to reset network credentials and fallowing message pops up: Reset network credentials?

8. DISCOVER YOUR APPLIANCE

The first time you turn the appliance on, the display guided through some information related to the appliance.

If user skipped it during first power on, it will show again on the next power up after start up. If user has press skipped for the second time, do not show anymore.

9. FIRST TIME START-UP

Each time you turn the appliance on, the Start-up Screen appears on the touch screen. The first time you turn the appliance on, after the Start-up Screen you are guided through the initial setup procedure.

9.1 Language setup

Scroll through the list of languages by rotating the knob to find the desired language and select it by pressing the right soft key "▢" .

ⓘ By turning the knob the selected language will be visible in bold.

9.2 WiFi setup

At first power on, the display indicates to connect your appliance to the WiFi.

The following window pops up:

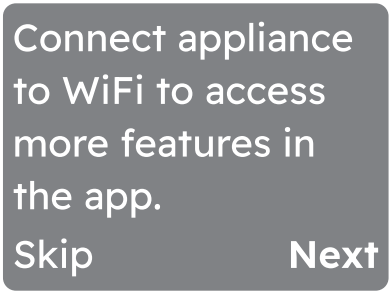

Tap on the left soft key "▢" to skip this action and go back to the previous view.

Tap on the right soft key "▢" to pass to next stage and follow the prompts. The following window pops up:

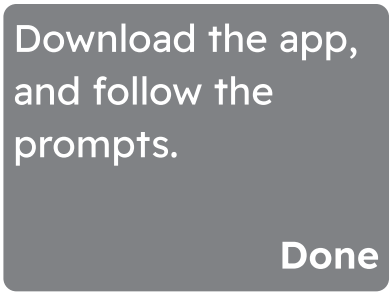

ⓘ To link the appliance to mobile devices, download the App and other features refer to "WiFi - Connectivity Setup" chapter.

10. WIFI - CONNECTIVITY SETUP

ⓘ The software in this product contains components that are based on free and open source software. Electrolux gratefully acknowledges the contributions of the open software and robotics communities to the development project. To access the source code of these free and open source software components whose license conditions require publishing, and to see their full copyright information and applicable license terms, please visit: **http://electrolux.opensoftwarerepository.com (folder NIUS)**

This chapter describes how to connect the smart appliance to the Wi-Fi network and to link it to a mobile devices.

By this functionality you can receive notifications, monitor and control your tumble dryer from your mobile devices.

The Wi-Fi functionality is off as factory

default setting.

To connect the appliance to enjoy the full range of features and services you need:

- Wireless network at home with internet connection enabled.
- Mobile device connected to wireless network.

Wi-Fi module parameter	
Frequency/ Protocol	Wi-Fi: 2.4 GHz / 802.11 bgn
Max power	Wi-Fi 2.4 GHz: < 20 dBm
Encryption	WPA, WPA2, WEP

ⓘ You will need to install our app, create an account, and accept the Terms and Conditions and Electrolux's Privacy Policy in the app to use the connected features of the laundry appliance. Internet and Wi-Fi connections are required to use the full features of the App and the laundry appliance. Minimum operating system for app refer App FAQ.

10.1 QR code on rating plate

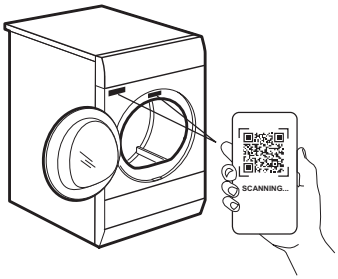

QR code can be used in two ways:

- Scan the QR code with the built-in camera app to download our app from the App store on your smart device and follow the required steps.
- Pairing your smart device with appliance to simplify the process. Scan the QR code with QR code scanner built-in our app.

10.2 Installing our app

When connecting the tumble dryer to the application, stand near it with Your smart device.

Make sure that your smart device is connected to the wireless network.

1. Go to the App Store/Play Store on your smart device or scan QR code (see chapter "QR code on rating plate").

Download on the App Store GET IT ON Google Play

2. Download and install our app.
3. Make sure you started a WiFi connection in the dryer. If not go to the section below.

4. Start the application. Select the country and language and login with Your email and password. If you do not have an account, create a new one following the instructions in our app.

10.3 Configuring the dryer wireless connection

Have our app downloaded and installed on your smart device.

ⓘ You can also configure the dryer wireless connection by press the "Remote Start" touch jey about 5 second.

1. In our app - tap on Add appliance and follow the instructions on the App for appliance connection.
2. Press the "⏻ On/Off" button for a few seconds to activate the appliance.
3. Tap on the Menu "☰" soft key, rotate the dial until the display shows "Machine Settings".

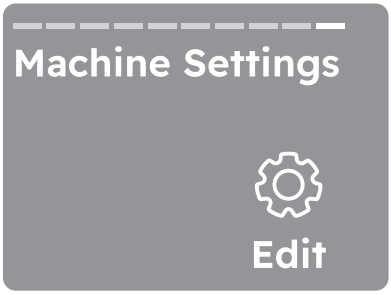

4. Tap the right soft key ▢ to enter to the machine settings.
5. Rotate the dial until the display shows "WiFi".

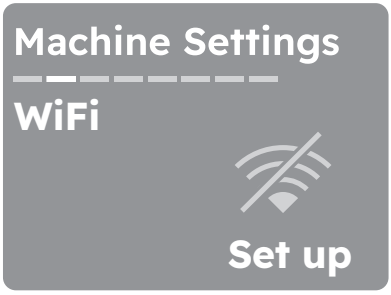

6. Tap the right soft key ▢ to set up WiFi connection. The wireless module begins starting up. It may takes about 10 seconds before it is ready.

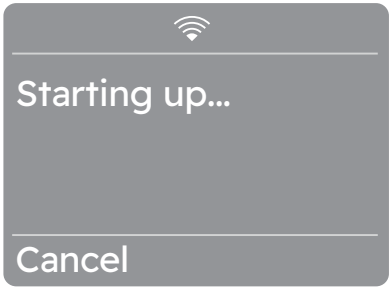

When the wireless module is ready the following screen pops up (Ready to connect):

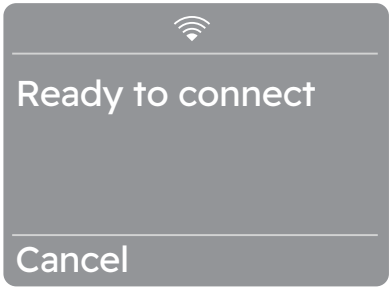

The access point will be open for about 5 minutes.

7. Configure our app on your smart device.If the connectivity is configured following screen pops up

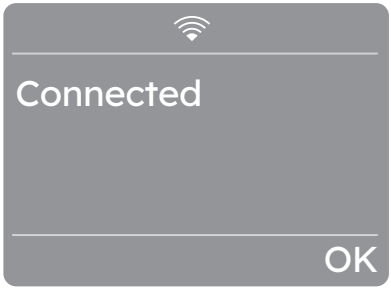

8. Tap the right soft key "▢" (OK) to get back to home screen.

ⓘ Every time you switch the appliance on, the appliance takes 10 seconds to connect to the network automatically.

After the connectivity is configured,
Tap "Remote Start" touch key for ON/OFF function.

ⓘ If you switch the appliance off and on again, the wireless connection is automatically off.

10.4 Reset network credentials

ⓘ You can also reset network credentials by press "Remote Start" touch key about 10 second.

1. Press the "⏻ on/off" button for a few seconds to activate the appliance.
2. Tap on the "☰" Menu soft key, rotate the dial until the display shows Machine Settings.

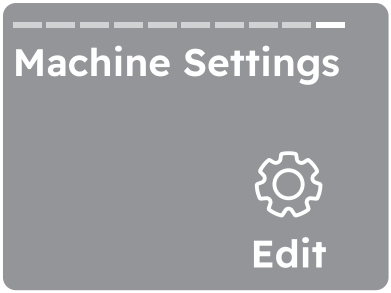

3. Tap the right soft key "▢" to enter to the machine settings.
4. Rotate the dial until the display shows "WiFi".

5. Tap the right soft key "▢ "to edit WiFi connection.
6. Rotate the dial until the display shows Reset Network screen.

7. Tap the right soft key "▢". The following screen pops up.

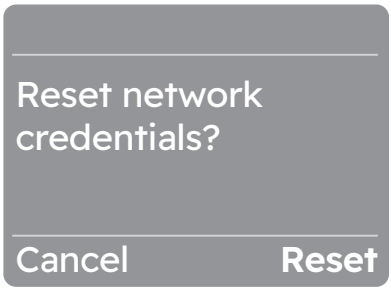

8. Tap the right soft key "▢" to confirm your choice.

The network credentials begins resetting.

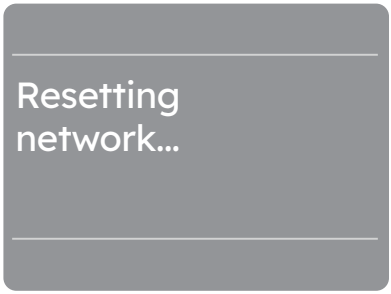

After a few seconds the following screen pops up:

10.5 Network information

When the App is installed and the wireless connection is complete, you can check a few information regarding connection and network.

1. Press the "⏻ on/off" button for a few seconds to activate the appliance.
2. Tap on the "☰" Menu soft key, rotate the dial until the display shows "Machine Settings".

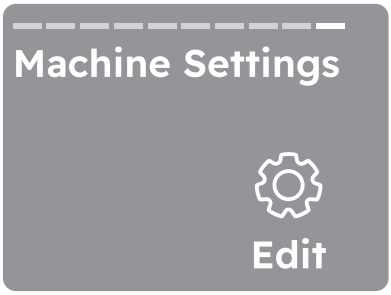

3. Tap the right soft key "▢" to enter to the machine settings.
4. Rotate the dial until the display shows "WiFi".

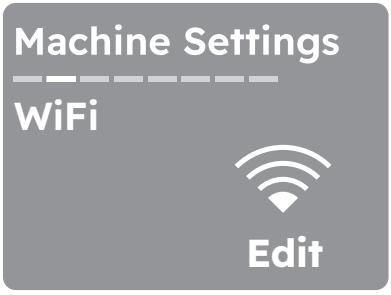

5. Tap the right soft key "▢" to enter the following screen:

here you can check:

- Status of connection (e.g Starting up..., Not connected, Connected)
- Signal strength

6. Tap the right soft key "▢" to enter the following screen:

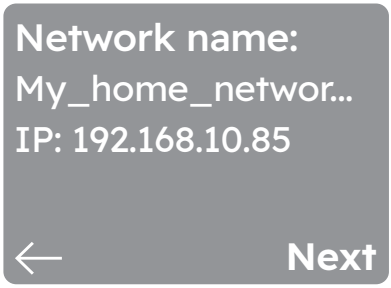

here you can check:

- Network name
- IP address of your dryer

7. Tap the right soft key "▢" to enter the following screen:

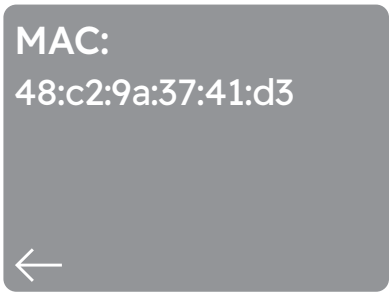

here you can check:

- MAC address of your dryer

8. Tap the left soft key "▢" a few times to go back to the machine settings screen.

10.6 Over-the-air update

ⓘ During the update it is highly recommended to not turn off or unplug the appliance.

The App may propose an update for downloading new features.

The update is accepted via App only.

If a programme is running, the App notifies that the update will start at the end of the programme.

During the update, the fallowing message pops upon the display: Don't turn off the appilance.

The appliance will be usable again at the end of the update, without any notification about successful update.

If an error occurs, , the fallowing message pops upon the display: Update failed. Press (OK) right soft key "▢" to return to normal use.

10.7 WiFi Always On

The WiFi Always On function can be activated only via our app.

This feature keeps the appliance connected to the network even when the appliance is turned off, so that it can always be woken up and managed remotely from your device.

The indicator "📶" goes on.

It is possible to turn the appliance on by pressing the ⏻ on/off button or through the App.

ⓘ The WiFi Always On function may affect your energy consumption. WiFi Always On function is disabled by default.

11. PROGRAMMES

11.1 ⓘ Programme Information

By rotating the programme dial to select a desired programme, there is a possibility to display the programme information screen. If there is information on a programme, the "ⓘ" info icon is visible in the bottom right corner.

- Tap the right soft key ▢"

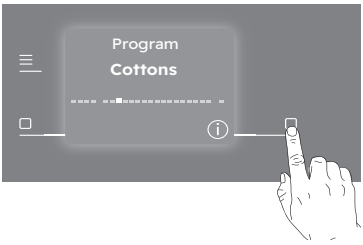

If there are two pages, the first will show Next and the second will show OK, which dismiss the screen and move on to the home screen. If there is only one page, the right soft key will be OK. There is a 5s timeout that automatically dismisses the information page (this timer is reset if there are two pages and the user presses Next).

11.2 Programme table

Programme	Load [1]	Properties / Fabric type
Cottons	Max	White and colored cotton fabrics program. The default setting is for ready-to-store dryness level.
Eco Cottons	Max	Cotton fabrics programme designed for maximum energy saving.
Fast 3kg	3 kg	Fast cycle for everyday clothes made of cotton, cotton-synthetic blends and synthetic. Ideal for light items.
MixedDry	5 kg	Designed for routine drying of what you wash without sorting. Dries evenly clothes made of cotton, cotton-synthetic blends and synthetic.
Synthetics	4 kg	Blended garments containing mostly synthetic fibres like polyester, polyamide, etc.
Delicates	2 kg	Recommended for generic delicate fabrics such as viscose, rayon, acrylic and their blends.
Denim	4 kg	Deeply dries jeans and other denim garments, even in thick parts like pockets, seams, and cuffs reducing entanglement.
Wool	1 kg	Gently dries machine and hand-washable woollens. Tumbling is minimized as the fast drum speed motion makes the garment lie flat on the inside of the drum walls replicating flat drying. Approved by Woolmark.
Linen	2 kg	Gently dries linens and reduces the formation of creases for easier ironing. It is suggested to remove the clothes as soon as the drying cycle is finished.
Silk	0.5 kg	Preserves the shape of delicate machine and hand-washable silk clothes, minimizing creases by using gentle warm air and soft movements.
Bedding+	4.5 kg	Up to three bed linen sets, one of which can be double size.
Duvet	3 kg	Ensures proper drying of inner parts through single or double duvets, pillows, and padded blankets.
Sports+	4 kg	Dries generic sportswear made with synthetic fibres including polyester, elastane blends, and polyamide.
Towels	5 kg	Ensures softer results and optimal drying of cotton towels and bathrobes.
Hygiene	5 kg	Dries and sanitizes your garments and other items maintaining the temperature above 60°C over time, removing 99.99% of bacteria and viruses.[2] Note: This cycle should only be used for wet items. Not suitable for delicate items.
Easy Iron	2 kg	Limits creases on small loads of cotton, synthetic and mixed-fabric garments for easy ironing. Features two drying levels: Iron leaves garments slightly damp for ironing or hanging; Cupboard fully dries items.
Steam Refresh	2 kg	For dry clothes only. Short low temperature cycle that helps in removing odours from a small amount of garments. Indicated also for dry clothes that were in storage for long time.

1) Maximum capacity depends on model of dryer.

2) Tested for Candida albicans, MS2 Bacteriophage and Escherichia coli in external test performed by Swissatest Testmaterialien AG in 2021 (Test Report No. 20212038).

Steam programmes

Programme	Load	Properties / Fabric type
Cottons	2 kg	Helps to remove the creases from the cottons pieces of clothing. Programme duration is automatically adjusted to dry the load up to the optimal humidity level for steam action. Frequently it is not necessary to iron the clothes after steam programme. In this case clothes must be hang on the clothes hanger or folded.
Synthetics	2 kg	Helps to remove the creases from the synthetics pieces of clothing. Programme duration is automatically adjusted to dry the load up to the optimal humidity level for steam action. Frequently it is not necessary to iron the clothes after steam programme. In this case clothes must be hang on the clothes hanger or folded.
Steam Refresh	2 kg	For dry clothes only. Also applicable to remove odours. The clothes become soft and cosy. We recommend to remove and hang the clothes immediately after the programme end.

Woolmark Apparel Care - Blue

The wool drying cycle of this machine has been tested and approved by The Woolmark Company. The cycle is suitable to dry wool garments which are labelled "hand wash" provided that the garments are washed in a Woolmark endorsed hand washing cycle and dried according to the instructions issued by the manufacturer. **M2140**.

11.3 Additional Programmes

At the end of the programme list, there is a single position where it is possible to navigate to the secondary list called More programs.

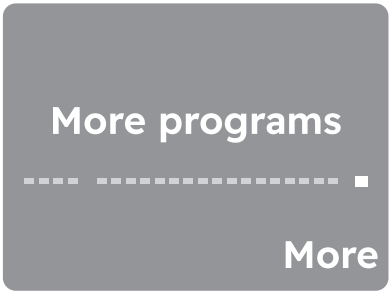

Press the right soft key next to More indication to enter the extra programs list. Navigating this list works just like navigating the main list.

To go back to the main list, turn the rotary to the left to the Back to main list position and press the left soft key next to Back indication.

List of default additional programmes.

Our app provides you with a wide choice of additional programmes. Connect the appliance to our app and you will be able to choose the programme that suits your needs most.

ⓘ Programme names are subject to change depending on market requirements without notice. The App will give you a complete description of each programme.

Baby Care ,Outdoor ,Curtains ,Anti Allergy ,Drying Rack ,Running Shoes ,Down Jacket ,Daily Training ,Ski Gear ,Football/Rugby ,Pillow ,Pet Hair.

Reset additional programme list to factory default.

At the end of the more programmes list, if the user has customised the programme list in the app, there is an option to reset it to the factory default list.

1. Rotate the dial to the end of More programs screen. The display shows Reset list screen.

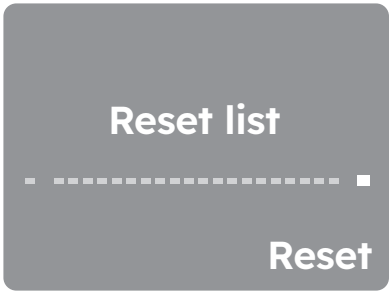

2. Taping the right soft key ▢ (Reset) will bring up a dialogue asking to cancel or confirm.

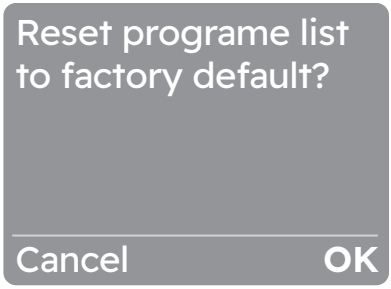

3. Tap the right soft key ▢ (OK) to reset the additional programme list to the factory default.

11.4 Programme options compatibility

Programme [1]	Dryness Level			Stream	Extra Anticrease	Extra Silent	Reversplus	Time Dry	Finish In
Cottons	■	■	■	■	■	■	■	■	■
Eco Cottons		■			■				■
Fast 3kg		■			■				■
MixedDry	■	■			■	■		■	■
Synthetics	■	■	■	■	■	■	■	■	■
Delicates		■			■				■
Denim	■	■			■				■
Wool								■	■
Linen		■			■				■
Silk		■			■				■
Bedding+	■	■	■		■		■	■	■
Duvet		■			■				■
Sports+		■			■				■
Towels		■			■				■
Hygiene	■				■				■
Easy Iron		■	■		■				■
Steam Refresh				■	■				■

1) Together with the programme you can set 1 or more options. To activate or deactivate them, press the related touch button.

12.1 Final dryness level for Wool programme.

Option suitable for Wool programme to adjust final dryness level.

- Tap the left soft key "▢" to set desired dryness level for Wool programme.

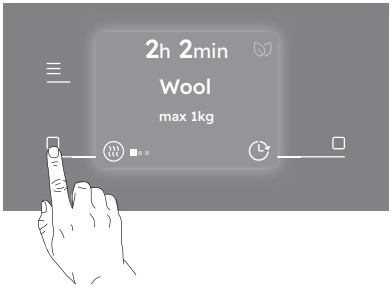

There are three default dryness levels available.

- ■ ■ ■ Standard
- ■ ■ ■ Extra
- ■ ■ ■ Maximum

12.2 Time Dry

You can set the programme duration, from a minimum of 10 minutes to a maximum of 2 hours. The required duration is related to the quantity of laundry in the appliance.

ⓘ We recommend that you set a short duration for small quantities of laundry or for only one item.

TIME DRYING RECOMMENDATION	
10 - 20 mins.	action of cool air only (no heater).
20 - 40 mins.	additional drying to improve dryness after previous drying cycle.
>40 mins.	full drying of the small laundry loads up to 4 kg, well spun (>1200 rpm).

To activate this option:

- Tap on the "Time Dry" option.

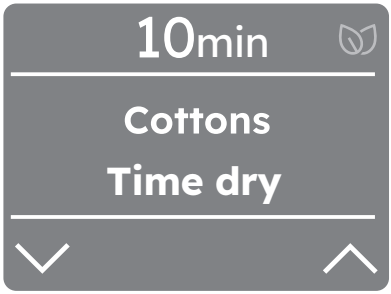

- You can activate this option by pressing the right soft key "▢". The display shows the minutes or hours of the time drying.

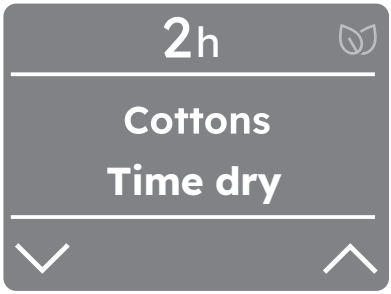

- Pressing the right soft key "▢" ∧ it is possible to increase the time by 10 minutes with each tap, up to 2 hours.

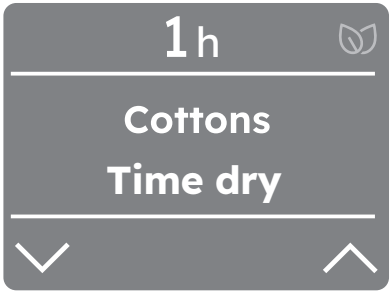

- If you want to decrease time tap the left soft key "▢" ∨, the duration will be reduced by 10 minutes with each tap.

- Once you have selected the desired timer wait 3 seconds you will be redirected to the home screen where at the top of the display you will be able to see the time drying.

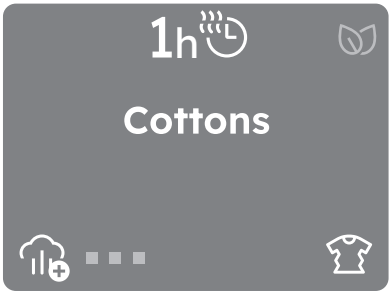

To remove the time drying option, select another programme by rotating the programme dial or reduce the time by pressing the "Time Dry" again and left soft key "□" ∨ until display to programme time.

12.3 Extra Anticrease

This option extends the anti-crease phase by 90 minutes at the end of the drying cycle. This function reduces creases. The laundry can be removed during the anti-crease phase.

To activate/deactivate this option there are two possibilities.

By taping right soft key

ⓘ if the option available for a selected programme on the home screen.

Tap the right soft key "□" and the icon (standard anti-crease) will change to the icon (extra anti-crease).

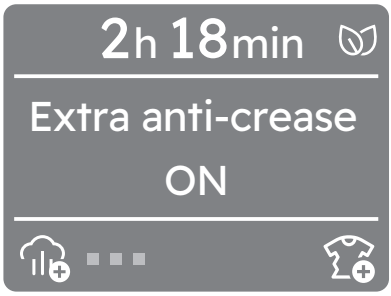

12.4 Reverse Plus

Increase drum reversing frequency to reduce items twisting and entanglement. To increase uniformity of drying result and help reduce creases. Recommended for large or long items (e.g. sheets, trousers, long dresses).

Tap on the Menu "≡" soft key, rotate the dial until the display shows the "Reverse Plus" option.

To activate/deactivate this option:

- Tap the right soft key "□" and the relevant indicator will turn ON/OFF.

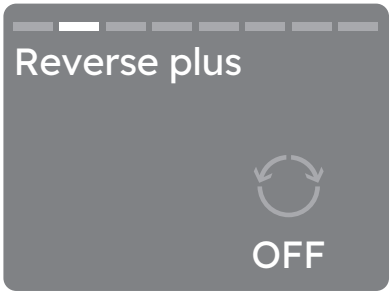

12.5 Extra Silent

The appliance operates with low noise without effect on the drying quality. The appliance operates slowly with longer cycle time.

Tap on the Menu "☰" soft key, rotate the dial until the display shows the "Extra Silent" option.

To activate/deactivate this option:

- Tap the right soft key "▢" and the relevant indicator will turn ON/OFF.

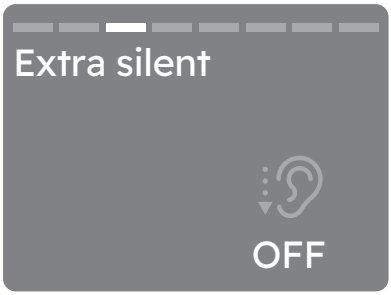

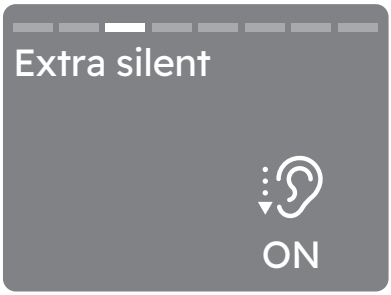

12.6 End Alert

The buzzer sounds at the:

- cycle end
- start and end of the anti-crease phase
- cycle interruption The buzzer option is by default always on.

You can use this option to activate or deactivate the sound.

Tap on the Menu "☰" soft key, rotate the dial until the display shows the "End alert" option.

- Tap the right soft key "▢" and the relevant indicator will turn ON/OFF.

If End Alert option is deactivated, the display shows the End Alert off icon.

ⓘ If the Cycle End Alarm is OFF (see Machine Settings menu), End Alert option is not available.

12.7 Finish In

With this option you can set the time to end of the selected cycle.

To activate/deactivate this option:

- Tap on the Menu "☰" soft key, rotate the dial until the display shows the Set Timer to Finish In option.

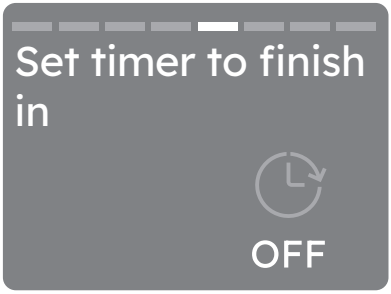

- You can activate this option by pressing the right soft key "▢" . The display shows the hours of the time to end starting from 1 hours.

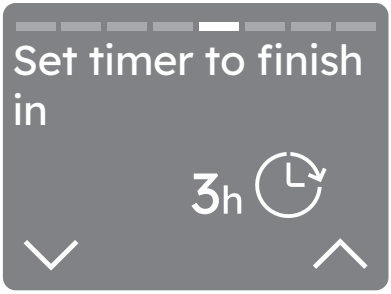

- Pressing the right soft key "▢" ∧ it is possible to increase the time by one hour with each tap, up to 24 hours.

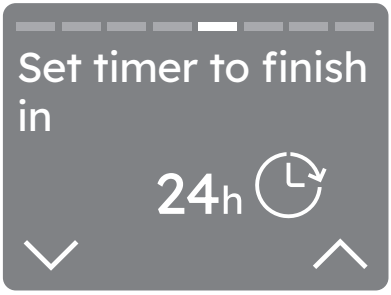

- If you want to decrease time tap the left soft key "▢" ∨ , the duration will be reduced by one hour with each tap.
- Once you have selected the desired timer wait 3 seconds or tap Menu "☰" and you will be redirected to the home screen where at the top of the display you will be able to see the countdown.

ⓘ The appliance keeps the selection of this option after you switch it off.

To remove the Set Timer to Finish In option:

- Navigate through the Menu "☰" to the "Set Timer to Finish In" option.
- Reduce the time by pressing the left soft key until the display shows "OFF"

12.8 Child lock

With this option you can prevent the children from accidentally operating the appliance.

To activate this option:

- Tap on the Menu ☰ soft key, rotate the dial until the display shows the "Child lock" option.

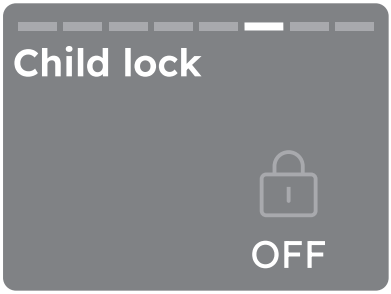

- You can activate this option by tapping the right soft key "▢".
- After you have activated the child lock all touch buttons are deactivated. It is possible to turn the appliance off by means of the "⏻ On/Off" button.
- Before pressing the "▷|| Start/Pause" touch key the appliance cannot start. The display shows the icon "🔒".

ⓘ The appliance keeps the selection of this option after you switch it off.

To deactivate this option:

- Hold the right soft key "▢" for 3 seconds. A countdown will be visible in the display in the lower right corner.

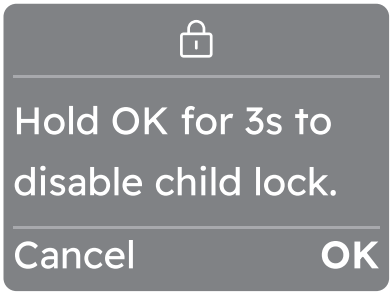

ⓘ Once the option is deactivated the display will show the information as before activation,

12.9 ♡ Favourite

How to set a favourite cycle Up to three favourite cycles can be saved.

ⓘ There are no favourite cycles saved by default.

- Tap on the Menu "☰" soft key, rotate the dial until the display shows "Save as favourite"

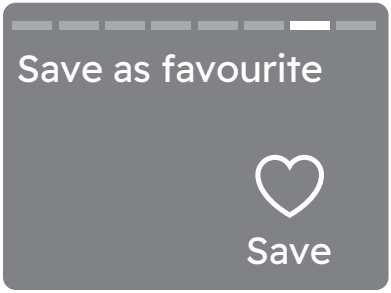

- Select one of the three empty fields by tapping the right soft key "▢".

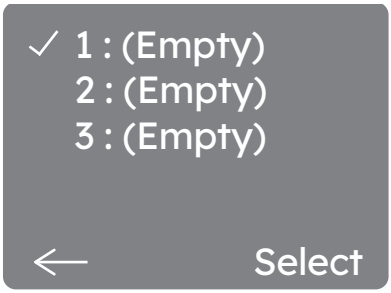

- After two seconds, the display will show the selected cycle as a favourite recognizable by a heart "♡" at the top of the screen.

ⓘ When you want to save the next favourite the first empty slot will be indicated automatically.

How to replace a favourite cycle It is possible to replace favourites:

- Turn dial to select one of the three fields to be overwritten.
- Confirm the choice by tapping the right soft key.
- After two seconds, the display will show the selected cycle as a favourite recognizable by a heart at the top of the screen.

It is not possible to delete you favourite cycle on the appliance.

ⓘ In order to delete favourites it is necessary to perform a factory reset of the appliance or by the app.

How to access the favourites cycle To access the favourites from programmes list rotate the dial to the left.

ⓘ If the fields are occupied the first favourite cycle will be displayed, then the second and eventually the third.

13. MACHINE SETTINGS

In this part are explained the main settings of the appliance.

- Tap on the Menu "☰" soft key, rotate the dial until the display shows the "Machine setting" option.
- Select "Edit" by tapping the right soft key "▢".

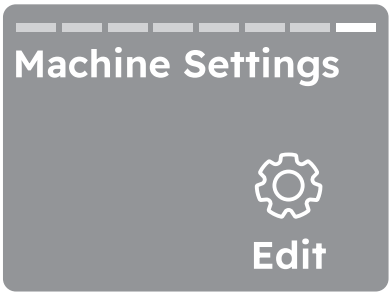

13.1 Language setup

It is possible to change the display language by scrolling through the list rotating the knob to find the desired language.

- Select it by tapping the right soft key "▢".
- Go back "←" to the previous view by tapping the left soft key "▢".

ⓘ By turning the knob the selected language will be visible in bold.

13.2 Default Dryness

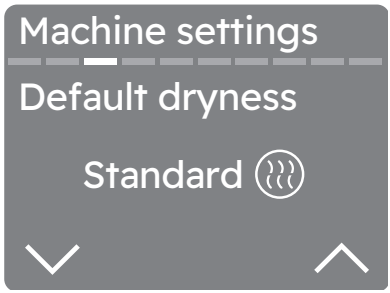

With this setting you can change the default dryness.

ⓘ This may be necessary since the dryness results are impacted by many conditions, e.g. the water type, the supply voltage or the ambient temperature etc.

HOW TO ACHIEVE A PERFECT DRYING:

1. Try to adjust the dryness level options (see "Dial and buttons" SmartSelect -Dryness Level " option).
2. If you want to further increase the laundry dryness results, you can modify the default dryness setting (see below). This adjustment will act on most programmes, except Eco, Wool, Duvet, Down Jacket, Refresh programmes if available on the machine.

To modify the level:

- Tap the left soft key "▢" next to ∨ indicator to decrease default dryness.
- Tap the right soft key "▢" next to ∧ indicator to increase default dryness.

There are three default dryness levels available.

- Standard
- Extra
- Maximum

Rotate the dial to move to the next setting.

13.3 Tank reminder

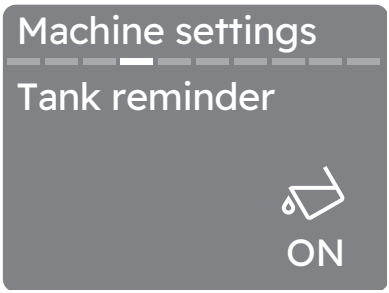

With this setting you can turn activate/deactivate the tank remainder.

By default, the tank remainder indicator is on It comes on when the programme is completed or when it is necessary to empty the water container.

- Tap the right soft key "▢" to ON/OFF the tank remainder.

ⓘ If a draining kit is installed (additional accessory), the appliance automatically drains the water from the water container. In this case we recommend that you deactivate the indicator of the water container.

Rotate the dial to move to the next setting.

13.4 Save last used

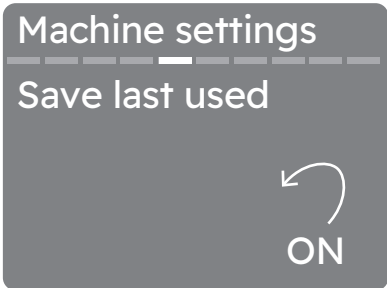

If this setting is active, the most recently used programme and options are saved on the beginning of programmes list (in slot last used) next to favourites programmes.

- Tap the right soft key "▢" to activate/deactivate the Save last used setting.

13.5 Button sounds

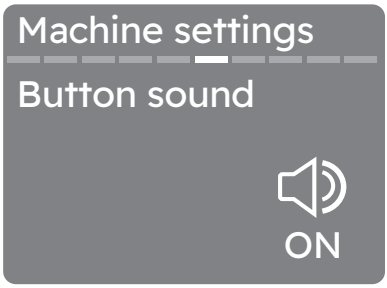

With this setting you can turn off the sound of the buttons.

To activate/deactivate the sounds:

- Tap the right soft key "▢" and the relevant indicator will turn ON/OFF .

Rotate the dial to move to the next setting.

ⓘ The sound of the "⏻ on/off" button cannot be disabled.

13.6 Cycle end alarm

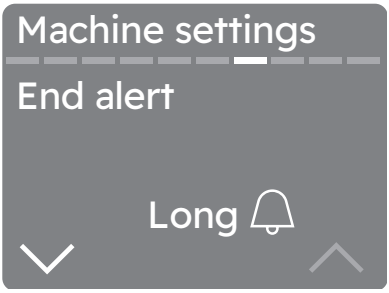

With this setting you can change the cycle end alarm tap the right soft key "▢" ∧,∨ to edit the option:

- Long
- Medium
- Short
- Off

13.7 Display Brightness

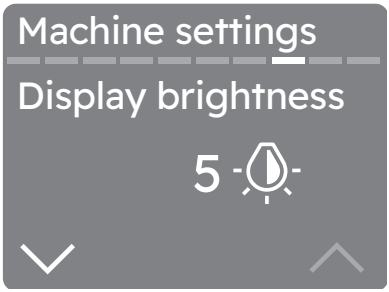

With this setting you can change the display brightness to modify the level:

- Tap the left soft key "▢" next to ﹀ indicator to decrease brightness.
- Tap the right soft key "▢" next to ﹀ indicator to increase brightness.

Rotate the dial to move to the next setting.

ⓘ There are five brightness levels available.

13.8 Guides

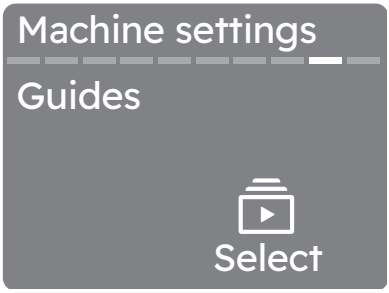

With this option you can see brief explanations of some features.

Rotate the programme dial and select by tapping the right soft key "▢" one of the following option:

- Introduction: information about the control panel, the SmartSelect, Steam programmes, menu, soft keys and Remote Start.
- WiFi : information about the onboarding.

13.9 Reset to Factory Settings

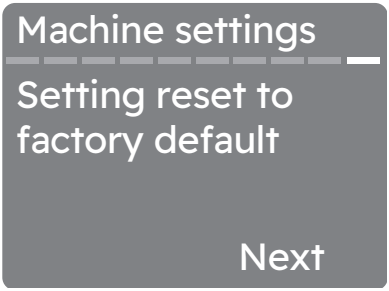

With this setting you can reset your appliance to the factory settings.

1. Tap on the right soft key "▢" to enter the option.
2. Tap on the left soft key "▢" to Cancel.
3. Tap on the right soft key "▢" to confirm the Reset.
   Performing the reset will take a few seconds

ⓘ Reset to factory settings deletes permanents options and favourites saved.

14. STEAM FUNCTION

Steam helps to remove odours like the outdoor air.
Decreases or removes creases. Makes the pieces of clothing more flexible.
The pieces of clothing after steam programme are easy to iron.
At the end of the steam cycles clothes come out with a residual humidity appropriate for ironing.
If clothes are not ironed immediately hang them until they are completely dry.

ⓘ At the start, because of wide types of fabrics, apply small steam level. You easily get the experience, which helps you to use the sufficient steam level.

14.1 How to fill water container for steam system

ⓘ Use only distilled or demineralized water. Always when the container is empty the indicator "" is on and you cannot start the steam programmes.

ⓘ Water container for steam system is automatically refilled if you dry with standard and steam programmes. If the water tank is empty you can fill it manually. The condensed water is also applicable for steam system. The condensate water must be filtered e.g. with a coffee filter to remove small pieces of fluff.

To fill water container:

1. Turn on the appliance.
2. Set 1 of the programmes with steam option to check the water level.
3. Pull the water container. Keep it in horizontal position.

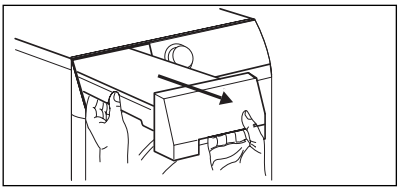

4. Fill the water until it reaches the "Max" level.

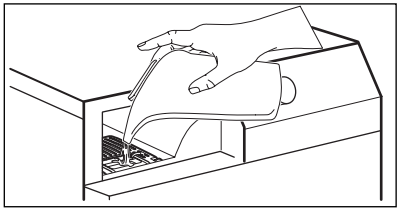

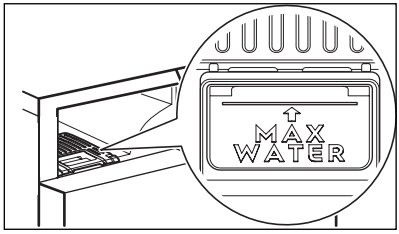

5. Put the water container.

ⓘ The icon "" alerts you when the steam tank is empty. In this case steam functions can not be activated.

14.2 Steam Level

This option is to set the required steam level. It depends on the: type, weight and volume of the laundry.

ⓘ This option is available only for Cottons,Synthetics and Steam Refresh programmes.

- Tap the left soft key "" to select desired steam level.

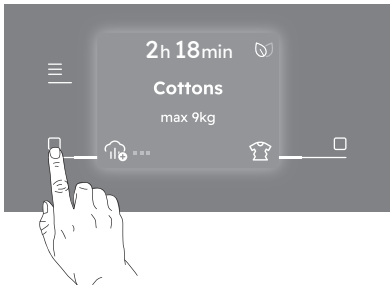

There are 3 possible selections:

■ ■ ■ Standard

■ ■ ■ Extra

■ ■ ■ Maximum

14.3 Steam Level chart

Programmes / types of the clothes	Steam Level	Load
cottons	■ ■ ■ minimum level	0.5 - 1 kg
	■ ■ ■ moderate level	1 - 1.5 kg
	■ ■ ■ maximum level	1.5 - 2 kg
Cottons / shirts	■ ■ ■ minimum level	1 - 2 items
	■ ■ ■ moderate level	3 - 4 items
	■ ■ ■ maximum level	5 items
Synthetics	■ ■ ■ minimum level	0.5 - 1 kg
	■ ■ ■ moderate level	1 - 1.5 kg
	■ ■ ■ maximum level	1.5 - 2 kg
Synthetics / shirts	■ ■ ■ minimum level	1 - 2 items
	■ ■ ■ moderate level	3 - 4 items
	■ ■ ■ maximum level	5 items
Steam Refresh	■ ■ ■ minimum level	0.5 kg
	■ ■ ■ moderate level	1 kg
	■ ■ ■ maximum level	2 kg

15.1 Unusual smell

The appliance is tightly packed.

After product unpacking you can feel an unusual smell. This is normal for brand new products.

Appliance is built of several different types of material which all together can generate unusual smell.

Over usage time, after few drying cycles unusual smell gradually disappears.

15.2 Noises

ⓘ Different noises may be heard at different times during the drying cycle. They are perfectly normal operating sounds.

Working compressor.

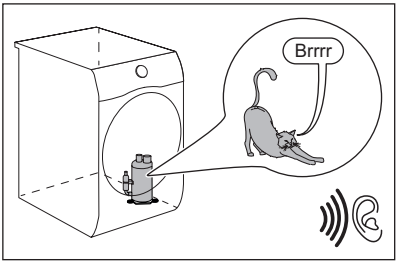

Rotating drum.

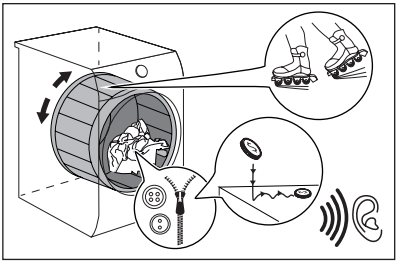

Working fans.

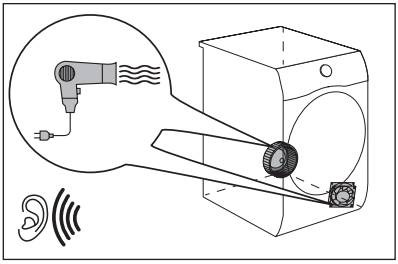

Working pump and transferring condensation to the tank.

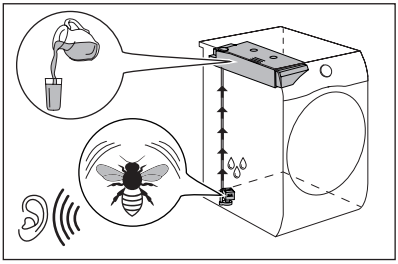

16.1 Start a programme without Finish In option

1. Prepare the laundry and load the appliance.

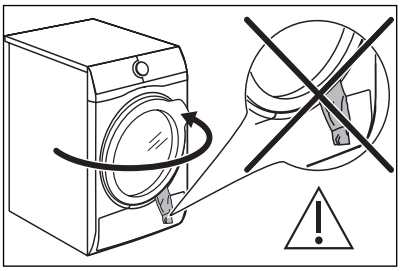

⚠ CAUTION!
Make sure that when you close the door, the laundry does not get caught between the appliance door and the rubber seal.

2. Press the "⏻ on/off" touch key to activate the appliance.

After a few seconds the display shows programme summary view with the following information:

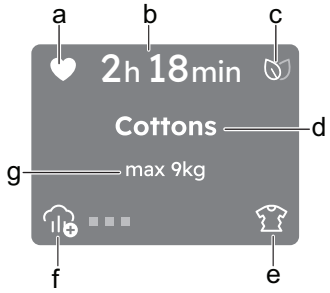

a Favourite, if already saved.

b Programme duration

c Eco feedback

d Selected programme

e Anticrease phase.

f Depends on selected programme (e.g. Final dryness level for Wool programme, Stem Level,)

g Maximum programme load.

3. Set the correct programme and options for the type of load.

ⓘ Real drying time will depend on type of the load (quantity and composition), the room temperature and the initial moisture after spinning phase of your laundry.

4. Press "▷|| Start/Pause" touch key.

The programme starts and during the first minutes of the cycle, the machine estimates the quantity of loaded laundry to better adapt the cycle profile and duration to effective load.

The ProSense progress bar moves back and forth to communicate that estimation is in progress, if foreseen in the selected programme.

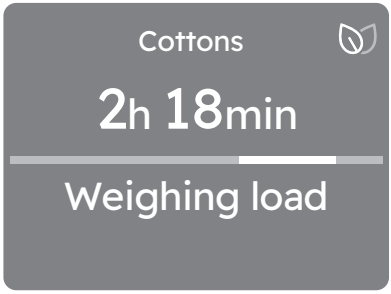

ⓘ In case of drum overload, the maximum declared load the fallowing indicator comes on Overweight , during these 30 seconds, it is possible to open the door and remove the exceeding garments. Once removed, press "▷|| Start/Pause" touch key to start the programme again. If the laundry amount will not be reduced, the programme starts anyway. In this case, it will be not possible to guarantee the best results.

After the ProSense accomplished estimates the quantity of loaded laundry the appliance starts selected programme and display shows following information:

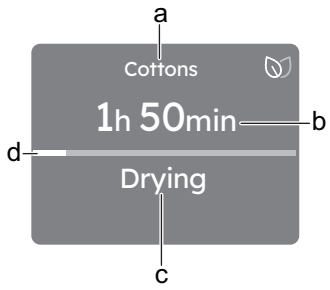

a Selected programme

b Remaining phase time

c The phase of a cycle (e.g. drying, cooling, steam)

d Progress bar

16.2 Starting the programme with Finish In option

1. Set the correct programme and options for the type of load.
2. Tap on the Menu "☰" soft key, rotate the dial until the display shows the "Set timer to finish In" option.
3. "∧" Increase or "∨" decrease time by taping soft keys "▢"

Once you have selected the desired timer wait 5 seconds or tap Menu "☰" and you will be redirected to the home screen where at the top of the display you will be able to see the countdown.

4. Press "▷|| Start/Pause" touch key.

The drum starts rotating to perform the ProSense estimation, if foreseen in the selected programme.

5. The appliance starts the countdown to the end of the programme and the programme will start at the right moment for ending.

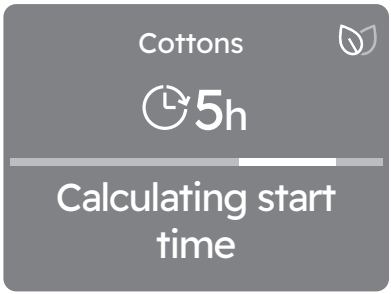

16.3 Change a programme

1. Press the "⏻ on/off" button to deactivate appliance
2. Press the "⏻ on/off" button to activate the appliance.
3. Set the programme.

16.4 At the end of the programme

When the programme is completed:

- An intermittent acoustic signal operates.
- The display shows the completely filled progress bar and alternately messages pops up:
  Remove items

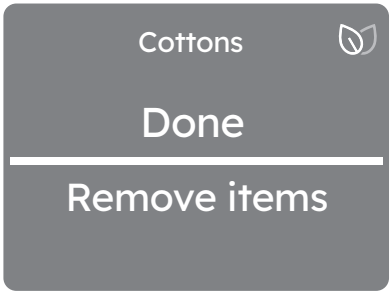

Anti-crease

- The "▷II Start/Pause" indicator is on.

The appliance continues to operate with the anti-crease phase for approximately 30 minutes or more if "Extra Anticrease" option was set (see chapter Option - "Extra Anticrease").

The anti-crease phase reduces creasing.

You can remove the laundry before the anticrease phase is completed. We recommend, for better results, that you remove the laundry when the phase is almost completed.

When the anti-crease phase is completed:

- The display shows the completely filled progress bar and alternately messages pops up:
  Remove items

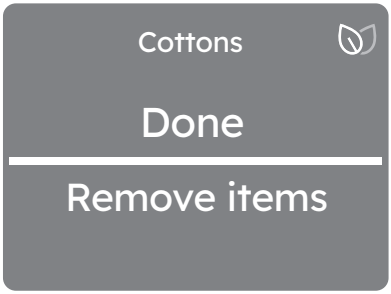

Clean filter

Empty water tank

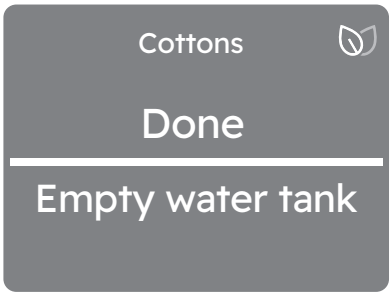

- ▷II Start/Pause indicator goes off.

1. Press "⏻ on/off" touch key to deactivate the appliance.
2. Open the appliance door.
3. Remove the laundry.

ⓘ To keep the effects of the Steam treatment, clothes must be removed one garment at a time during the anticrease phase and hung immediately on a clothes hanger to dry (for minimum 5-15 min, depending on fabric and selected steam level). Do up the buttons and tug the garment into shape, paying particular attention to cuffs and seams.

Possible causes of unsatisfactory drying results:

- Inadequate default dryness level settings. See chapter OPTIONS: Dryness Level - Adjustment of the target final moisture
- Room temperature is too low or too high. Optimal room temperature is between 18°-25°C.

ⓘ Always clean the filter and empty the water container when a programme is completed.

16.5 Low power mode

To reduce energy consumption, this function automatically deactivates the appliance:

- After 5 minutes if you do not start the programme.
- After 5 minutes from the end of the programme or anticrease phase.

ⓘ The time is reduced to 30 seconds if the selector knob is pointing to "Reset" position.

ⓘ When the appliance goes in low power mode, the display and icons turn off. You can reactivate it by pressing "⏻ on/off" touch key.

ⓘ If WiFi is on and remote control is enabled, the remote start "⎡▸⎤" icon remains also when the appliance goes on low power mode.

17. HINTS AND TIPS

17.1 Preparing the laundry

Loading the drum up to the maximum capacity indicated for the respective programmes will contribute to the energy saving.

To assure proper drying process:

- Close the zips.
- Close the fasteners of duvet covers.
- Do not dry ties or ribbons loose (e.g. apron ribbons). Tie them before you start a programme.
- Remove all items from pockets.
- Turn items with the internal layer made of cotton inside out. Cotton layer must be faced outwards.
- Always set the programme suitable for the type of laundry.
- Do not put light and dark colours together.
- Use suitable programme for cottons, jersey and knitwear to reduce shrinkage.
- Do not exceed the maximum load stated in the programmes chapter or shown on the display.
- Dry only the laundry that is suitable for tumble drying. Refer to the fabric label on the items.
- Do not dry large and small items together. Small items can be trapped inside the large items and remain wet.
- Shake the large clothes, fabrics before placing in the tumble dryer. It is to avoid moist places inside the fabric after the drying cycle.

Steam function hints

- Do not use steam programmes for wool not suitable to dry in the tumble dryers, leather, textiles with large metal, wooden or plastic parts, textiles with rusting metal parts, oilskins or wax cotton garments.
- Sort and dry together textiles with similar size, weight, material and colour.
- Do not dry new, coloured textiles together with light-coloured laundry items. Colours may fade (check colour fastness of fabric when damp in an inconspicuous area).
- Do not use dry cleaning sets in combination with the steam programmes.
- Remove stains by washing or using localised stain removal before the steam programme use.
- For best drying results turn items with double-layered fabrics inside out (e.g. with cotton lined anoraks, the cotton layer should be outermost).

Fabric label	Description
	Laundry is suitable for tumble drying.
	Laundry is suitable for tumble drying at higher temperatures.
	Laundry is suitable for tumble drying at low temperatures only.
	Laundry is not suitable for tumble drying.

18. CARE AND CLEANING

18.1 Periodic cleaning schedule

Periodic cleaning helps to extend the life of your appliance.

If the appliance is not used for a long time unplug the appliance.

Indicative periodic cleaning schedule:

Cleaning the filter	When the message or symbol pops up: Clean lint filter
Empty the water container	When the message or symbol pops up: Empty water tank
Clean the Heat Exchanger	When the message or symbol pops up: Clean condenser
Clean the steam system filter	When the message or symbol pops up: Clean steam filter
Clean drum	Every two months
Clean the control panel and housing	Every two months
Clean the airflow slots	Every two months

The following paragraphs explain how you should clean each part.

18.2 Removing the foreign items

ⓘ Make sure that the pockets are empty and all loose elements are tied up before running the drying cycle. Refer to the "Preparing the laundry" section.

Remove any foreign items that you may find in the drum after the drying cycle (e.g. metal clips, buttons, coins, etc).

18.3 Cleaning the filter

At the end of each cycle the message or symbol pops up: Clean lint filter "" and you must clean the filter.

ⓘ The filter collects the lint during the drying cycle.

ⓘ To achieve the best drying performance clean the filter regularly. The clogged filter causes the longer drying cycle and as a consequence the energy consumption increase. Clean the filter by hand. Use a vacuum cleaner if necessary.

⚠ CAUTION!
When cleaning the filters, the lint should be thrown in the garbage bin and not washed through the drain in order to avoid spreading microplastics in the used water system.

1. Open the door. Pull the filter up.

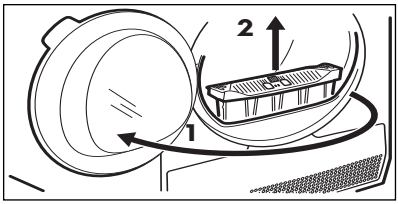

2. Push the hook to open the filter.

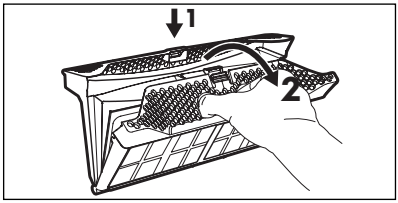

3. Gather lint with hand from both internal parts of the filter.

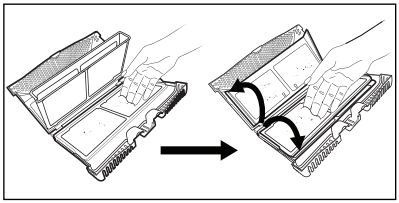

Throw the lint in the dustbin.

4. If necessary, clean the filter with a vacuum cleaner.
5. If necessary, remove lint from the filter socket and gasket. You can use a vacuum cleaner. Place the filter back inside the filter socket.

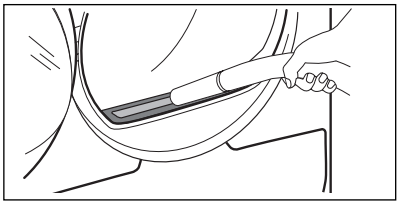

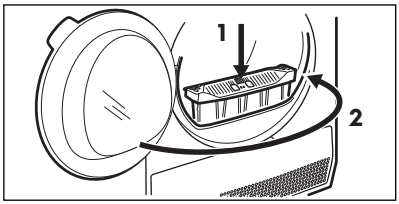

18.4 Emptying the water container

Empty the condensed water container after each drying cycle.

If the condensed water container is full, the programme stops automatically. The message or symbol pops up: Empty water tank "" on the display and you must empty the water container.

To empty the water container:

1. Pull the water container out keeping it in a horizontal position.

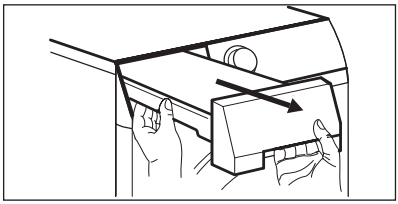

2. Pull the plastic connection out and drain the water into a basin or equivalent

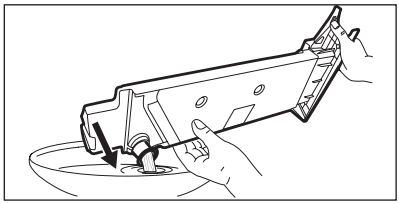

3. Push the plastic connection back in and place the water container back into position.

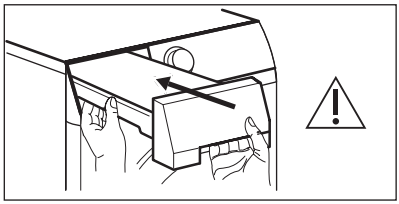

4. To continue the programme press the "▷II Start/Pause" touch key.

18.5 Cleaning the condenser

If the message or symbol pops up: Clean condenser "" on the display, inspect the condenser and its compartment. If it is dirty, clean it. Do the check not less than once a 6 months.

⚠ WARNING!
Do not touch the metal surface with bare hands. Risk of injury. Wear protective gloves. Clean carefully to avoid damaging the metal surface.

⚠ WARNING!

Do not use vacuum cleaner with a hard attachment to remove the fluff from the condenser, it may damages the ribs of the condenser, with leads to lower performance of the appliance and longer time drying.

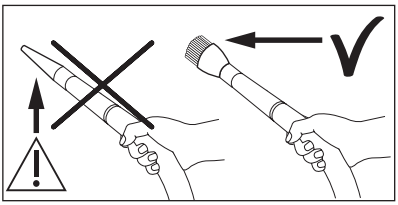

To inspect:

1. Open the door. Pull the filter up.

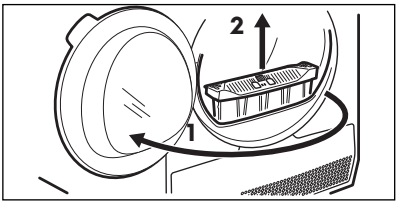

2. Open the condenser cover.

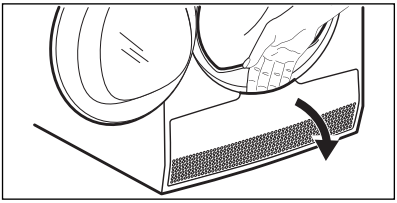

3. Turn the levers to unlock the condenser lid and lower the condenser lid.

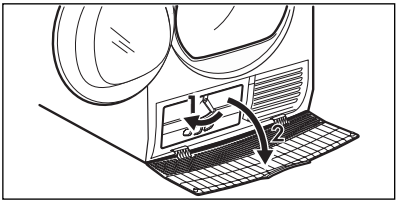

4. If necessary, remove the fluff from the condenser and its compartment. You can use a vacuum cleaner with a brush attachment.

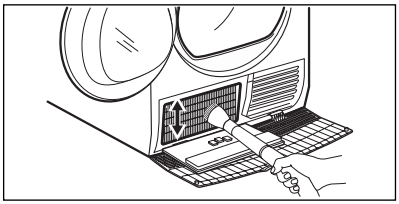

5. Close the condenser lid.

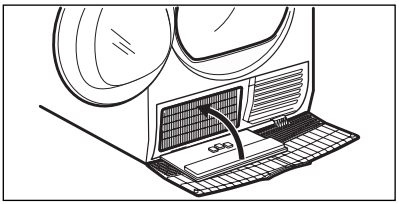

6. Turn the levers until it clicks into position.

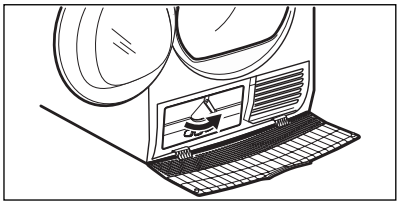

7. Put the filter back.

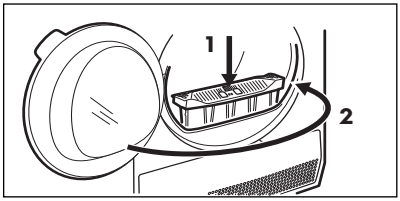

18.6 Cleaning the steam system filter

⚠ CAUTION!
Do not use the steam programmes without the steam system filter or with damaged or blocked filter.

If the message or symbol pops up: Clean steam filter "" on the display you must clean the filter.

To clean the steam system filter:

1. Pull the water container. Keep it in horizontal position.

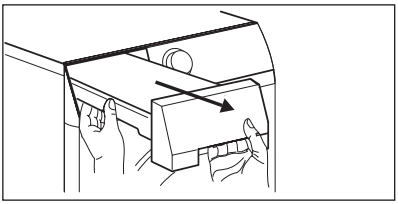

2. Pull the filter.

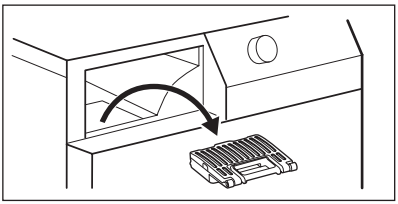

3. Open the filter.

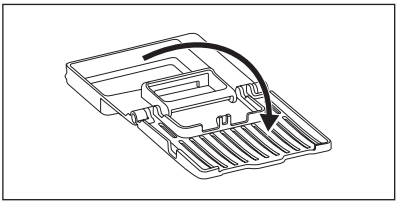

4. Use a moist hand to clean the filter.

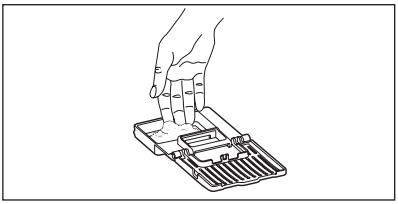

5. Put the filter inside the filter socket.
6. Put the water container.

18.7 How to drain the water from the steam system container

ⓘ The quality of the water in the container can get worse. If you will not use the appliance for long period drain the water from the container.

To drain the water:

1. Open the door.
2. Open the condenser cover.

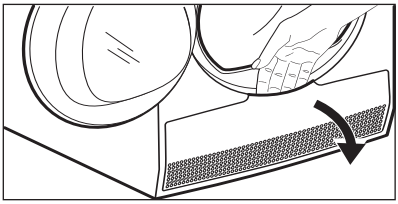

3. Turn the lever to unlock the condenser lid and lower the condenser lid.

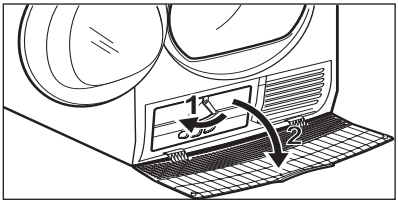

4. Take the pipe placed on the left wall of the compartment. Open the cap to drain the water.

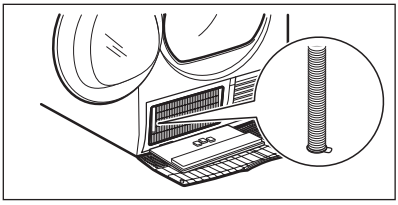

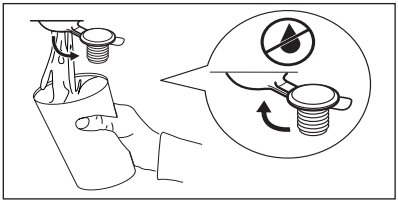

5. Close the cap.
6. Place the pipe back on its seat.

7. Close the condenser lid.
8. Turn the lever to lock the condenser lid and close the condenser cover.

18.8 Cleaning the drum

⚠ WARNING!
Disconnect the appliance before you clean it.

Use a standard neutral soap detergent to clean the inner surface of the drum. Dry the cleaned surfaces with a soft cloth.

⚠ CAUTION!
Do not use abrasive materials or steel wool to clean the drum.

18.9 Cleaning the control panel and housing

Use a standard neutral soap detergent to clean the control panel and housing.

Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth.

⚠ CAUTION!
Do not use furniture cleaning agents or cleaning agents which can cause corrosion.

18.10 Cleaning the airflow slots

Use a vacuum cleaner to remove fluff from the airflow slots.

19. TROUBLESHOOTING

⚠ WARNING!
Refer to Safety chapters.

19.1 Error Codes

The appliance does not start or it stops during operation.

First try to find a solution to the problem (refer to the table). If the problem persists, contact the Authorised Service Centre.

⚠ WARNING!
Deactivate the appliance before carrying out any check.

In case of major problems, the acoustic signals operate, ▷II Start/Pause button may flash continuously:

Malfunction	Possible cause	Solution
• The programme was not complete	• Appliance motor overloaded. Too much laundry or entrap in the drum.	• The programme was not completed. Remove the laundry from the drum, set the programme and restart the cycle.
• Machine does not start	• The mains supply is unstable.	• Wait until main supply is stable then press start. If the appliance pause the cycle without any indication then press the cycle start. If the warning will occur check the power cord /socket integrity or main supply.
• Machine does not start the steam programmes.	• Possible empty steam tank, steam heater failure.	• Fill water container for steam system, Switch the appliance off and on again. If the error code appears again, contact the Authorised Service Centre.
• Machine does not start ***Connected models**	• Internal fail. No communication between electronic elements of the appliance.	• The programme was not finished properly or the appliance stopped too early. Switch the appliance off and on again. If the error code appears again, contact the Authorised Service Centre.

If the display shows other error codes, deactivate and activate the appliance. If the problem continues, contact the Authorised Service Centre.

In case of different problem with the tumble dryer check the table below for possible solutions.

Problem	Possible solution
You cannot activate the appliance.	Make sure that the mains plug is connected to the mains socket.
	Check fuse in fuse box (domestic installation).
The programme does not start.	Press "▷|| Start/Pause".
	Make sure that the appliance door is closed.
Steam programme does not start. The steam water container indicator lights up.	Fill water container.
	Clean the steam water filter
After a steam programme, clothes are not sufficiently smooth.	Note the composition of the fabric.
	Set a higher steam level.
	Load the machine with fewer clothes, or only equivalent ones.
	Remove clothes quickly one at a time from the machine as soon as possible after the start of the anticrease phase.
	Hang clothes on clothes hangers, do up buttons and tug clothes into shape.
	Reshape multilayered clothes by ironing after they come out of the machine.
After a steam programme, there are wet spots on clothes.	Incorrect steam level selection. Set suitable steam level (see steam guide for reference).
	Clean the filter (see chapter CARE AND CLEANING) before performing the steam cycle.
Even after several drying cycle the steam water tank is empty.	Clean the steam water filter.
The appliance door does not close.	Make sure that the installation of the filter is correct.
	Make sure that the laundry is not caught between the appliance door and the rubber seal.
The appliance stops during operation.	Make sure that the water container is empty. Press "▷|| Start/Pause" to start the programme again.
	Load is too small, increase the load or use the Time Drying programme.

Problem	Possible solution
The cycle time is too long or unsatisfactory drying result. [1]	Make sure that the weight of the laundry is suitable for the duration of the programme.
	Make sure that the filter is clean.
	The laundry is too wet. Spin the laundry in the washing machine again.
	Ensure that the room temperature is higher than +5°C and lower than +35°C. Optimal room temperature is 18°C to 25°C.
	Set the "Time Dry" or the "Extra Dry" programme. [2]
The App cannot connect to the dryer.	Check if your smart device is connected to the wireless network. Check your home network and router. Restart the router. Contact your wireless service provider if there are problems with the wireless network.
	The dryer, the smart device, or both, need to be configured again.
The App frequently cannot connect to the dryer.	Try to move the home router as near the dryer as possible or consider purchasing a wireless range extender.
	Turn the microwave off. Avoid using the microwave and the Remote Control of the dryer at the same time. The microwaves disrupt the WiFi signal.

1) After maximum 5 hours, the programme ends automatically.

2) It can happen that some area remains humid when drying big items (e.g. bed sheets).

20. ENVIRONMENT CONCERNS

20.1 Packaging Materials

The materials marked with the symbol are recyclable.

>PE<=polyethylene

>PS<=polystyrene

>PP<=polypropylene.

This means that they can be recycled by disposing them properly in appropriate collection containers.

20.2 Old Machine

Use authorized disposal sites for your old appliance. Help to keep your country tidy!

The symbol on the product or on its packaging indicates that this product may not be treated as household waste.

Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Welcome to Electrolux! Thank you for choosing our appliance.

สอบถามเกี่ยวกับข้อแนะนำในการใช้งาน โบร์ชัวร์ วิธีแก้ไขปัญหา ข้อมูลการบริการ เลือกซื้ออุปกรณ์เสริมและชิ้นส่วนอะไหล่, ลงทะเบียนผลิตภัณฑ์ออนไลน์
www.electrolux.com

การดูแลและให้บริการลูกค้า
เราขอแนะนำให้ใช้ชิ้นส่วนอะไหล่แท้ เมื่อติดต่อศูนย์บริการของเรา จะต้องแจ้งข้อมูลดังนี้ คุณสามารถดูข้อมูลเหล่านี้ได้จากแผ่นแสดงข้อมูลภายในตัวเครื่อง รุ่น, หมายเลข PNC, หมายเลขเครื่อง

⚠ คำเตือน / ข้อควรระวังเพื่อความปลอดภัย
ⓘ ข้อมูลทั่วไปและข้อแนะนำ
ข้อมูลด้านสิ่งแวดล้อม

อาจมีการเปลี่ยนแปลงโดยไม่ต้องแจ้งให้ทราบล่วงหน้า

สารบัญ

1. ⚠ ข้อมูลความปลอดภัย 56
2. คำแนะนำด้านความปลอดภัย 60
3. รายละเอียดผลิตภัณฑ์ 62
4. ข้อมูลทางเทคนิค 62
5. การติดตั้ง 63
6. แผงควบคุม 68
7. ปุ่มหมุนและปุ่มกด 69
8. ข้อมูลเบื้องต้น 71
9. การใช้งานเริ่มต้น 72
10. WI-FI การตั้งค่าเชื่อมต่อ 73
11. โปรแกรมการทำงาน 77
12. โปรแกรมออฟชั่น 82
13. การตั้งค่าของเครื่องใช้ไฟฟ้า 88
14. ฟังก์ชั่นไอน้ำ 91
15. ก่อนการใช้งาน 93
16. การใช้งานทั่วไป 94
17. คำแนะนำและเคล็ดลับ 98
18. การดูแลรักษาและทำความสะอาด 99
19. การแก้ไขปัญหา 104
20. ข้อมูลเพื่อการรักษาสิ่งแวดล้อม 107

1. ⚠ ข้อมูลความปลอดภัย

ก่อนติดตั้งและใช้งาน ผลิตภัณฑ์นี้ โปรดอ่าน คู่มือที่ให้มาอย่างละเอียด บริษัทผู้ผลิตจะไม่รับผิดชอบต่อการติดตั้ง และการใช้งานอย่างไม่ถูกวิธีซึ่งส่งผลให้ได้รับการบาดเจ็บและความเสียหายใด ๆ โปรดเก็บคู่มือไว้กับเครื่องเพื่อใช้อ้างอิงในอนาคต

อ่านคู่มือการทำงาน

คำเตือน! วัสดุไวไฟ/อันตรายจากไฟไหม้
ผลิตภัณฑ์นี้บรรจุก๊าซหุงต้ม (R290) ซึ่งเป็นก๊าซไวไฟ ซึ่งเป็นมิตรกับสิ่งแวดล้อมในระดับสูง อย่าให้มีแหล่งกำเนิดไฟและประกายไฟใกล้กับเครื่อง ระวังอย่าให้เกิดความเสียหายกับวงจรสารทำความเย็นที่เก็บก๊าซหุงต้ม

1.1 ความปลอดภัยสำหรับเด็กและกลุ่มเปราะบาง

⚠ **คำเตือน!**
อาจเสียชีวิตเนื่องจากขาดอากาศหายใจ บาดเจ็บหรือทุพพลภาพถาวรได้

- ผลิตภัณฑ์นี้ไม่ได้มีไว้สำหรับการใช้งานโดยบุคคล (รวมทั้งเด็ก) ที่มีสมรรถภาพทางกายภาพ ทางประสาทสัมผัส หรือความสามารถทางจิตใจไม่สมบูรณ์ หรือขาดประสบการณ์และความรู้ พวกเขาเหล่านี้ต้องได้รับการดูแล หรือคำแนะนำเกี่ยวกับการใช้เครื่องใช้ไฟฟ้าโดยผู้ที่รับผิดชอบความปลอดภัยของพวกเขา เด็กควรได้รับการดูแล เพื่อให้แน่ใจว่าพวกเขาไม่ได้เล่นกับผลิตภัณฑ์
- อย่าปล่อยให้เด็กเล่นกับผลิตภัณฑ์นี้

- เก็บบรรจุภัณฑ์ทั้งหมดให้ห่างจากมือเด็ก และกำจัดทิ้งด้วยวิธีที่เหมาะสม
- เก็บสารซักฟอกให้ห่างจากมือเด็ก
- อย่าให้เด็กเล็กและสัตว์เลี้ยงอยู่ใกล้กับตัวเครื่องเมื่อฝาเครื่องเปิดอยู่
- หากผลิตภัณฑ์นี้มีอุปกรณ์ความปลอดภัยสำหรับเด็ก ควรเปิดใช้งานอุปกรณ์ดังกล่าว
- ห้ามให้เด็กเล็กทำความสะอาดและบำรุงรักษาเครื่องโดยปราศจากผู้ดูแล

1.2 ความปลอดภัยทั่วไป

- อย่าเปลี่ยนคุณลักษณะใด ๆ ของเครื่อง
- ผลิตภัณฑ์นี้สามารถติดตั้งได้ทั้งแบบอิสระหรือติดตั้งไว้ใต้เคาน์เตอร์ในครัวที่มีขนาดพื้นที่เหมาะสม (ดูหัวข้อ "การติดตั้ง")
- อย่าติดตั้งเครื่องไว้หลังประตูที่สามารถล็อกได้ ประตูบานเลื่อน หรือประตูที่มีบานพับทางด้านตรงข้ามกับเครื่อง เพื่อไม่ให้เป็นการจำกัดระยะการเปิดปิดฝาเครื่อง
- ช่องระบายอากาศที่ฐานเครื่องต้องไม่ถูกคลุมด้วยพรม เสื่อ หรือวัสดุปูพื้นใด ๆ
- เชื่อมต่อปลั๊กไฟหลักเข้ากับเต้ารับเมื่อเสร็จสิ้นกระบวนการติดตั้งแล้วเท่านั้น หลังจากติดตั้งแล้ว โปรดตรวจสอบให้แน่ใจว่าสามารถเข้าถึงปลั๊กไฟหลักได้
- ต้องแน่ใจว่าห้องที่ติดตั้งผลิตภัณฑ์นี้มีอากาศถ่ายเทได้สะดวก เพื่อไม่ให้ก๊าซที่ไม่พึงปรารถนาจากก๊าซเผาไหม้ของเครื่องหรือเชื้อเพลิงอื่น รวมถึงเปลวไฟ ถูกพัดกลับเข้ามาในห้อง
- หากสายไฟหลักเสียหาย ต้องเปลี่ยนใหม่โดยผู้ผลิต ศูนย์บริการอย่างเป็นทางการ หรือช่างที่มีคุณสมบัติเท่าเทียม เพื่อหลีกเลี่ยงอันตรายทางไฟฟ้าที่อาจเกิดขึ้น

- อย่าใส่ผ้าเกินพิกัดสูงสุด (ดูหัวข้อ "ตารางโปรแกรม" ในคู่มือการใช้งาน)
- อย่าใช้งานเครื่องถ้าผ้าเปื้อนสารเคมีที่ใช้ในงานอุตสาหกรรม
- ปัดใยผ้าหรือเศษบรรจุภัณฑ์ที่ติดอยู่บนตัวเครื่องออกให้หมด
- ห้ามใช้งานเครื่องโดยที่ไม่มีตัวกรอง ทำความสะอาดแผ่นกรองใยผ้าทั้งก่อนและหลังการใช้งานแต่ละครั้ง
- ห้ามอบแห้งสิ่งของต่าง ๆ ที่ยังไม่ผ่านการซักในเครื่องอบผ้า
- ควรซักผ้าที่เปื้อนสารต่าง ๆ เช่น น้ำมันปรุงอาหาร อะซีโตน แอลกอฮอล์ น้ำมันเบนซิน น้ำมันก๊าด น้ำยาลบรอยเปื้อน น้ำมันสน แว็กซ์ และน้ำยาลอกแว็กซ์ ในน้ำร้อนผสมสารซักฟอกปริมาณมาก ก่อนนำมาอบในเครื่องอบผ้า
- ไม่ควรอบเสื้อผ้าที่มีส่วนประกอบของยางโฟม (หรือที่รู้จักกันว่าโฟมลาเท็กซ์) ยางที่มีโครงสร้างคล้ายกัน หรือวัสดุอย่างหมวกคลุมอาบน้ำ ผ้ากันน้ำ ผ้าที่มีโครงยาง และเสื้อผ้าหรือหมอนที่บุด้วยแผ่นยาง ในเครื่องอบผ้า ด้วยการตั้งค่าให้ความร้อน วัสดุที่มีโฟมยางติดอยู่สามารถทำให้เกิดเพลิงไหม้ได้จากการลุกไหม้เมื่อได้รับความร้อน
- ควรใช้น้ำยาปรับผ้านุ่ม หรือผลิตภัณฑ์ในลักษณะเดียวกัน ตามคำแนะนำของผู้ผลิตผลิตภัณฑ์ดังกล่าวเท่านั้น
- ผ้าที่เปื้อนน้ำมันเหล่านี้อาจติดไฟได้ โดยเฉพาะอย่างยิ่งเมื่อสัมผัสกับความร้อน เช่น อยู่ในเครื่องอบผ้า ผ้าจะค่อย ๆ ร้อนขึ้น ทำให้เกิดปฏิกิริยาออกซิเดชั่นในน้ำมัน ซึ่งปฏิกิริยาออกซิเดชั่นนี้จะทำให้เกิดความร้อน หากไม่สามารถระบายความร้อนนี้ออกได้ ผ้าก็จะร้อนขึ้นจนถึงระดับที่ติดไฟได้ ผ้าเปื้อนน้ำมันที่กองรวมกัน วางซ้อน หรือสุมไว้ด้วยกัน จะทำให้ความร้อนไม่สามารถระบายออกไปได้ และส่งผลให้เกิดไฟลุกไหม้
- นำสิ่งของทั้งหมดที่อาจลุกติดไฟได้ออกจากกระเป๋าเสื้อและกางเกงให้หมด เช่น ไฟแช็กและไม้ขีดไฟ

- หากจำเป็นต้องอบผ้าที่เปื้อนน้ำมันพืช น้ำมันปรุงอาหาร หรือผลิตภัณฑ์จัดแต่งทรงผมลงในเครื่องอบผ้า ควรนำผ้าเหล่านั้นไปซักด้วยน้ำร้อนกับผงซักฟอกชนิดพิเศษก่อน วิธีการนี้จะช่วยลด แต่ไม่สามารถขจัดอันตรายที่อาจเกิดขึ้นได้
- ก่อนเริ่มต้นงานบำรุงรักษาใด ๆ ให้ปิดการทำงานของเครื่องและปลดปลั๊กไฟออกจากเต้ารับ
- การใช้สเปรย์รักษาเนื้อผ้าและน้ำยาขจัดคราบเปื้อนจะทำให้ชิ้นส่วนพลาสติกของเครื่องได้รับความเสียหาย ถ้าคุณใช้สเปรย์รักษาเนื้อผ้าหรือน้ำยาขจัดคราบเปื้อน ให้ฉีดใส่เสื้อผ้าในตำแหน่งที่ห่างจากเครื่อง

คำเตือน!

- ห้ามใช้อุปกรณ์สวิตชิ่งภายนอก เช่น ตัวตั้งเวลา หรือเชื่อมต่อเข้ากับวงจรที่มีการเปิดและปิดบ่อย ๆ เพื่อจ่ายไฟให้กับผลิตภัณฑ์นี้
- อย่าทำวงจรสารทำความเย็นเสียหาย
- ห้ามหยุดการทำงานของเครื่องอบผ้าก่อนจะสิ้นสุดรอบการทำงาน เว้นแต่จะนำสิ่งของทั้งหมดออกแล้ว เพื่อให้ความร้อนกระจายออก

1.3 เงื่อนไขการใช้งาน

ผลิตภัณฑ์นี้มีวัตถุประสงค์เพื่อนำไปใช้ในครัวเรือนและการใช้งานที่มีลักษณะใกล้เคียงกัน เช่น:

- บ้านสวน
- และเพื่อใช้โดยลูกค้าในโรงแรม โมเต็ล ที่พักประเภทที่มีการบริการอาหารเช้า และที่พักประเภทอื่น ๆ
- พื้นที่สำหรับการใช้งานส่วนกลางในแฟลต หรือห้องสำหรับซักผ้า

2. คำแนะนำด้านความปลอดภัย

2.1 การติดตั้งอย่างปลอดภัย

- ถอดบรรจุภัณฑ์ทั้งหมดออก
- ห้ามติดตั้งหรือใช้งานผลิตภัณฑ์ที่มีร่องรอยความเสียหาย
- ปฏิบัติตามคู่มือการติดตั้งที่ให้มากับตัวผลิตภัณฑ์
- โปรดใช้ความระมัดระวังเสมอเมื่อเคลื่อนย้ายผลิตภัณฑ์ เนื่องจากผลิตภัณฑ์มีน้ำหนักมาก ให้สวมถุงมือนิรภัยและสวมรองเท้าแบบหุ้มส้นมิดชิดเสมอ
- ห้ามติดตั้งหรือใช้งานผลิตภัณฑ์ในสถานที่ซึ่งอุณหภูมิอาจลดลงต่ำกว่า 5°C หรือสูงกว่า 35°C
- พื้นที่สำหรับติดตั้งผลิตภัณฑ์ต้องเป็นพื้นราบที่มั่นคง กันความร้อนได้ และสะอาด
- ตรวจสอบให้แน่ใจว่ามีการหมุนเวียนของอากาศระหว่างตัวผลิตภัณฑ์และพื้น
- ต้องให้ตัวผลิตภัณฑ์อยู่ในแนวตั้งตรงเสมอเมื่อทำการเคลื่อนย้าย
- พื้นผิวด้านหลังของตัวผลิตภัณฑ์ต้องชิดกับกำแพง
- เมื่อติดตั้งผลิตภัณฑ์ในตำแหน่งที่ต้องการแล้ว ให้ตรวจสอบว่าตัวผลิตภัณฑ์อยู่ในแนวระนาบหรือไม่โดยใช้ตัววัดระดับ หากไม่ตรง ต้องปรับขาตั้งใหม่

⚠ คำเตือน!

- อย่าติดตั้งเครื่องในสภาพแวดล้อมที่อากาศไม่ถ่ายเท
- อย่าให้มีสิ่งกีดขวางช่องระบายอากาศของเครื่องนี้หรือในโครงสร้างบิลต์อิน

2.2 การเชื่อมต่อระบบไฟฟ้า

⚠ คำเตือน!

เสี่ยงต่อการเกิดไฟไหม้และการเกิดไฟฟ้าช็อต

- เชื่อมต่อปลั๊กไฟเข้ากับเต้ารับเมื่อเสร็จสิ้นกระบวนการติดตั้งแล้วเท่านั้น หลังการติดตั้งต้องตรวจสอบให้แน่ใจว่าสามารถเข้าถึงปลั๊กไฟได้
- ตัวเครื่องต้องมีการเชื่อมต่อสายดิน
- ตรวจสอบให้แน่ใจว่าพารามิเตอร์บนป้ายแสดงอัตรากระแสไฟฟ้าเข้ากันได้กับอัตรากระแสไฟฟ้าของแหล่งจ่ายไฟหลัก
- ให้ใช้เต้ารับแบบป้องกันไฟดูดซึ่งติดตั้งอย่างถูกต้องเท่านั้น
- ห้ามใช้หัวแปลงปลั๊กไฟแบบสากลและสายไฟต่อพ่วง
- สำหรับการถอดปลั๊กไฟของเครื่อง ห้ามดึงที่สาย ให้ดึงโดยจับที่ตัวปลั๊กเสมอ
- ห้ามสัมผัสสายไฟหรือปลั๊กไฟในขณะที่มือเปียก

2.3 การใช้งาน

⚠ คำเตือน!

เสี่ยงที่จะได้รับบาดเจ็บจากไฟฟ้าช็อต ไฟไหม้ แผลพุพอง หรือความเสียหายของผลิตภัณฑ์

- ผลิตภัณฑ์นี้เป็นเครื่องใช้สำหรับใช้งานภายในครัวเรือน (ในอาคาร) เท่านั้น
- ห้ามอบแห้งสิ่งของที่มีนุ่นหรือวัสดุอื่นอยู่ภายในซึ่งมีความเสียหาย (ฉีกขาด, หลุดรุ่ย)
- หากมีการใช้น้ำยาขจัดคราบสกปรกในการซักเสื้อผ้า ให้ล้างน้ำเปล่าเพิ่มอีกหนึ่งรอบก่อนทำการอบแห้ง
- ทำการอบแห้งเฉพาะเนื้อผ้าที่สามารถอบแห้งด้วยเครื่องนี้ได้เท่านั้น ปฏิบัติตามคำแนะนำในการทำความสะอาดบนฉลากของแต่ละรายการ
- อย่าดื่มหรือจัดเตรียมอาหารด้วยน้ำที่มาจากการกลั่นตัวเป็นหยดน้ำ/น้ำกลั่น เพราะอาจเป็นสาเหตุของปัญหาสุขภาพทั้งต่อคนและสัตว์เลี้ยง
- ห้ามนั่งหรือยืนบนฝาเครื่องที่เปิดอยู่
- ห้ามอบแห้งเสื้อผ้าเปียกที่ยังมีน้ำหยดออกจากผ้าภายในเครื่องนี้
- เติมเครื่องกำเนิดไอน้ำด้วยของเหลวที่กำหนดโดยบริษัทผู้ผลิตเท่านั้น (ใช้ได้กับรุ่น EDH***R9**)

2.4 ไฟส่องสว่างภายในเครื่อง (ใช้ได้กับรุ่น EDH***R7**, EDH***R9**)

⚠ คำเตือน!
ความเสี่ยงที่จะได้รับบาดเจ็บ

- รังสี LED เป็นรังสีที่มองเห็นได้ อย่ามองเข้าไปที่ลำแสงโดยตรง
- ไฟส่องสว่างภายในเครื่องใช้ไฟ LED ไฟนี้ไม่สามารถนำกลับไปใช้เพื่อวัตถุประสงค์อื่น
- หากต้องการเปลี่ยนไฟส่องสว่างภายในเครื่อง กรุณาติดต่อศูนย์บริการอย่างเป็นทางการ

2.5 คอมเพรสเซอร์

⚠ คำเตือน!
ความเสี่ยงที่เครื่องจะได้รับความเสียหาย

- คอมเพรสเซอร์และระบบในเครื่องอบผ้าบรรจุสารพิเศษที่ปราศจากสารฟรูออโรคลอโรไฮโดรคาร์บอน ระบบนี้ต้องปิดผนึกอยู่เสมอ หากระบบได้รับความเสียหายจะเป็นสาเหตุให้เกิดการรั่วขึ้น

2.6 การดูแลทำความสะอาด

⚠ คำเตือน!
อันตรายจากการขาดอากาศและการบาดเจ็บ

- ปลดปลั๊กไฟของเครื่องออกจากระบบไฟฟ้าและระบบจ่ายน้ำ
- ตัดสายไฟหลักให้ชิดกับเครื่องและกำจัดทิ้ง
- ผลิตภัณฑ์นี้มีก๊าซไวไฟบรรจุอยู่ (R290) กรุณาติดต่อเทศบาลในพื้นที่ของคุณเพื่อสอบถามวิธีการกำจัดทิ้งผลิตภัณฑ์นี้อย่างถูกวิธี ถอดกลอนประตูของเครื่องออกเพื่อป้องกันเด็กเล็กหรือสัตว์เลี้ยงเข้าไปติดอยู่ภายในถังอบ
- กำจัดทิ้งผลิตภัณฑ์นี้ตามข้อกำหนดในพื้นที่สำหรับการกำจัดทิ้งขยะอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์ (WEEE)
- สำหรับข้อมูลอย่างละเอียดเกี่ยวกับการรีไซเคิลผลิตภัณฑ์นี้ กรุณาติดต่อหน่วยงานที่รับผิดชอบในพื้นที่ บริการจัดการขยะในครัวเรือน หรือร้านค้าที่คุณซื้อผลิตภัณฑ์นี้

2.7 การดูแลรักษาและทำความสะอาด

⚠ คำเตือน!
ความเสี่ยงที่จะได้รับบาดเจ็บหรือเครื่องเสียหาย

- อย่าทำความสะอาดเครื่องด้วยการฉีดน้ำและไอน้ำ
- ทำความสะอาดโดยการเช็ดด้วยผ้านุ่มชุบน้ำบิดหมาด ๆ ใช้สารซักฟอกที่มีฤทธิ์เป็นกลางเท่านั้น อย่าใช้สารขัด ฟองน้ำล้างจาน สารทำละลาย หรือวัตถุโลหะ
- ใช้ความระมัดระวังเมื่อทำความสะอาดเครื่องเพื่อหลีกเลี่ยงไม่ให้ระบบระบายความร้อนเสียหาย

3. รายละเอียดผลิตภัณฑ์

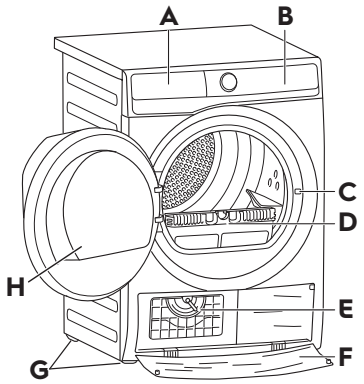

A ที่เก็บน้ำ

B แผงควบคุม

C ตัวล็อค

D ตัวกรอง

E ฝาปิดตัวแลกเปลี่ยนความร้อน

F ฝาครอบตัวแลกเปลี่ยนความร้อน

G ขาตั้งปรับได้

H ประตูเครื่อง

4. ข้อมูลทางเทคนิค

ชื่อรุ่น	EDH902R9SC
ความสูง x ความกว้าง x ความลึก	850 x 596 x 662 มิลลิเมตร
ความลึกสูงสุดขณะเปิดประตูเครื่อง	1107 มิลลิเมตร
ความกว้างสูงสุดขณะเปิดประตูเครื่อง	958 มิลลิเมตร
ความสูงที่ปรับได้	850 มิลลิเมตร (+ 15 มิลลิเมตร - การปรับขาตั้ง)
ปริมาตรถัง	113 ลิตร
ความจุสูงสุด	9 กิโลกรัม
แรงดันไฟฟ้า	220-240 โวลต์
ความถี่	50 เฮิร์ทซ
พลังงานทั้งหมด	1600 วัตต์
ประเภทการใช้งาน	เครื่องใช้ไฟฟ้าภายในบ้าน
อุณหภูมิโดยรอบที่เหมาะสม	+ 5°C ถึง + 35°C
ระดับการป้องกันการเล็ดรอดของอนุภาคแข็งและความชื้น เป็นการรับรองโดยฝาครอบป้องกัน ยกเว้นในกรณีที่อุปกรณ์ที่ใช้แรงดันไฟต่ำไม่มีชิ้นส่วนสำหรับป้องกันความชื้น	**IPX4**
รายละเอียดก๊าซ	R290
น้ำหนักก๊าซ	0.149 กิโลกรัม

5. การติดตั้ง

การแกะบรรจุภัณฑ์

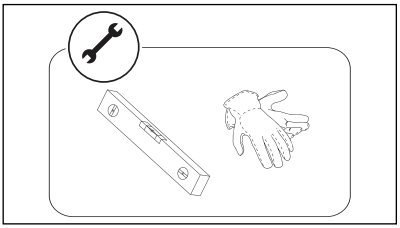

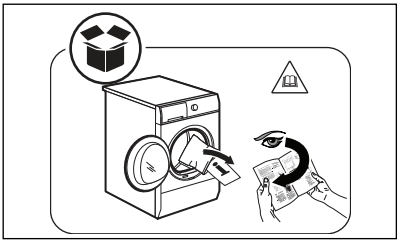

ⓘ ตัวล็อกถังอบจะถูกปลดออกโดยอัตโนมัติ เมื่อเปิดใช้งาน เครื่องอบผ้าในครั้งแรก ซึ่งอาจทำ ให้ได้ยินเสียงดังขึ้น

การติดตั้ง

⚠ คำเตือน
โปรดอ่านข้อมูลเกี่ยวกับความปลอดภัยและขนาดติดตั้งก่อนการติดตั้ง

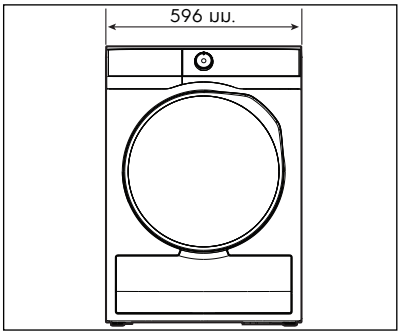

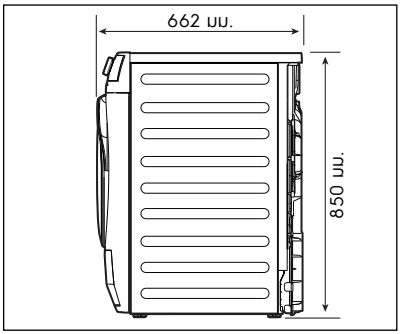

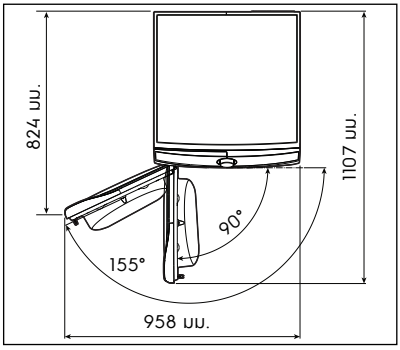

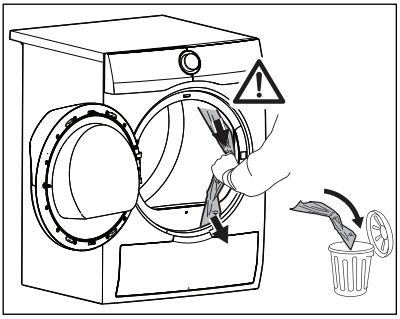

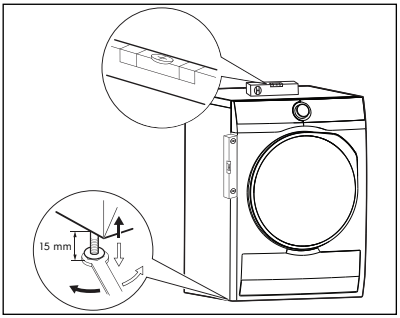

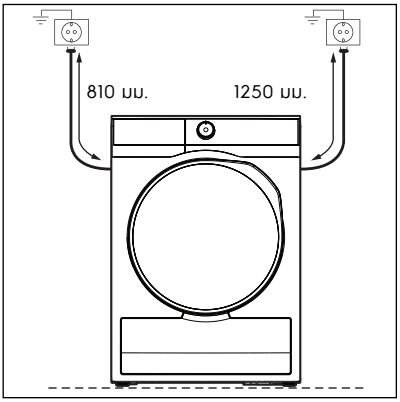

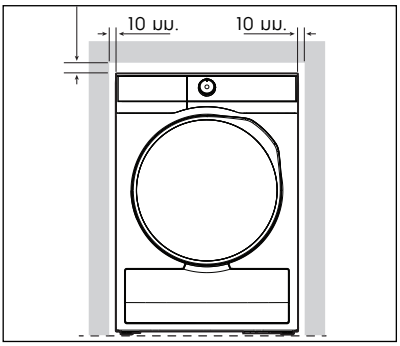

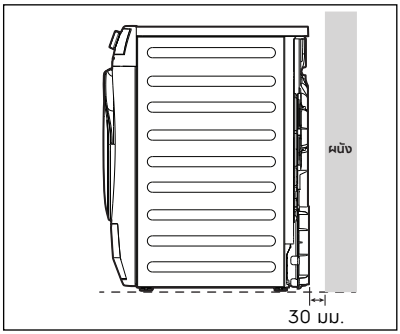

⚠ คำเตือน!

ห้ามวางเครื่องอบผ้าไว้บนหลังเครื่องซักผ้า
สำหรับข้อมูลเพิ่มเติม กรุณาติดต่อตัวแทนจำหน่ายอย่างเป็นทางการ

คำแนะนำในการกลับด้านประตูเครื่องอบผ้า

คุณสามารถกลับด้านประตูเครื่องอบผ้าได้ ดังนี้

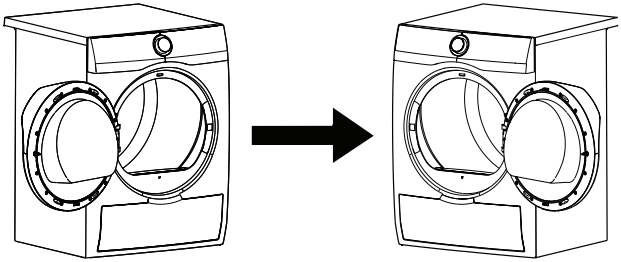

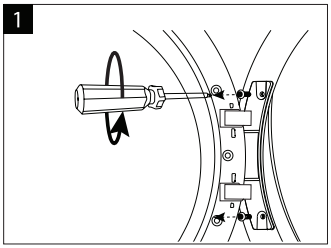

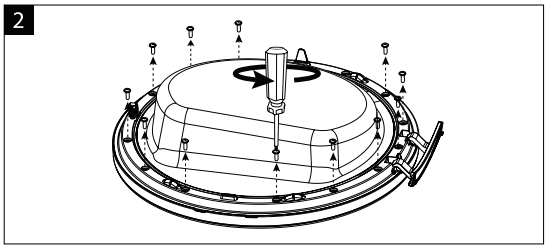

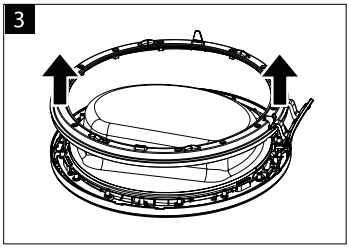

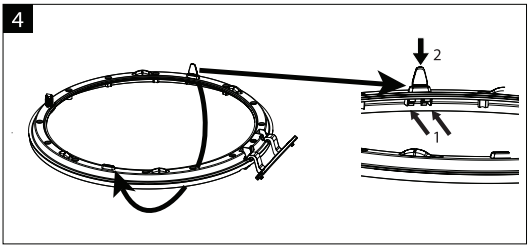

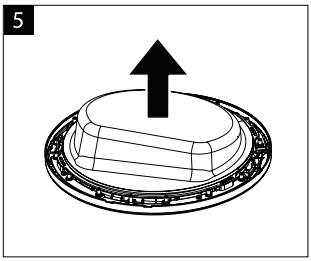

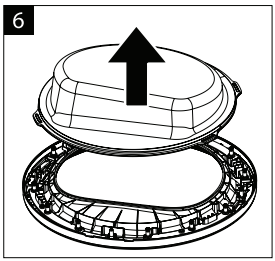

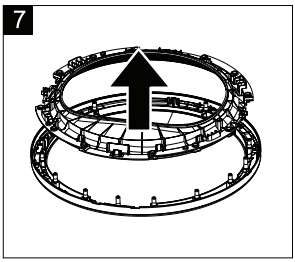

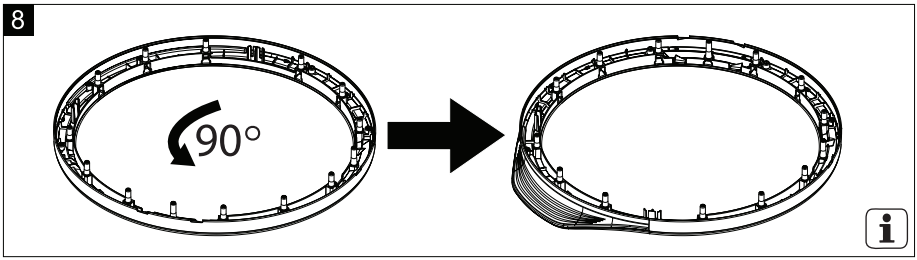

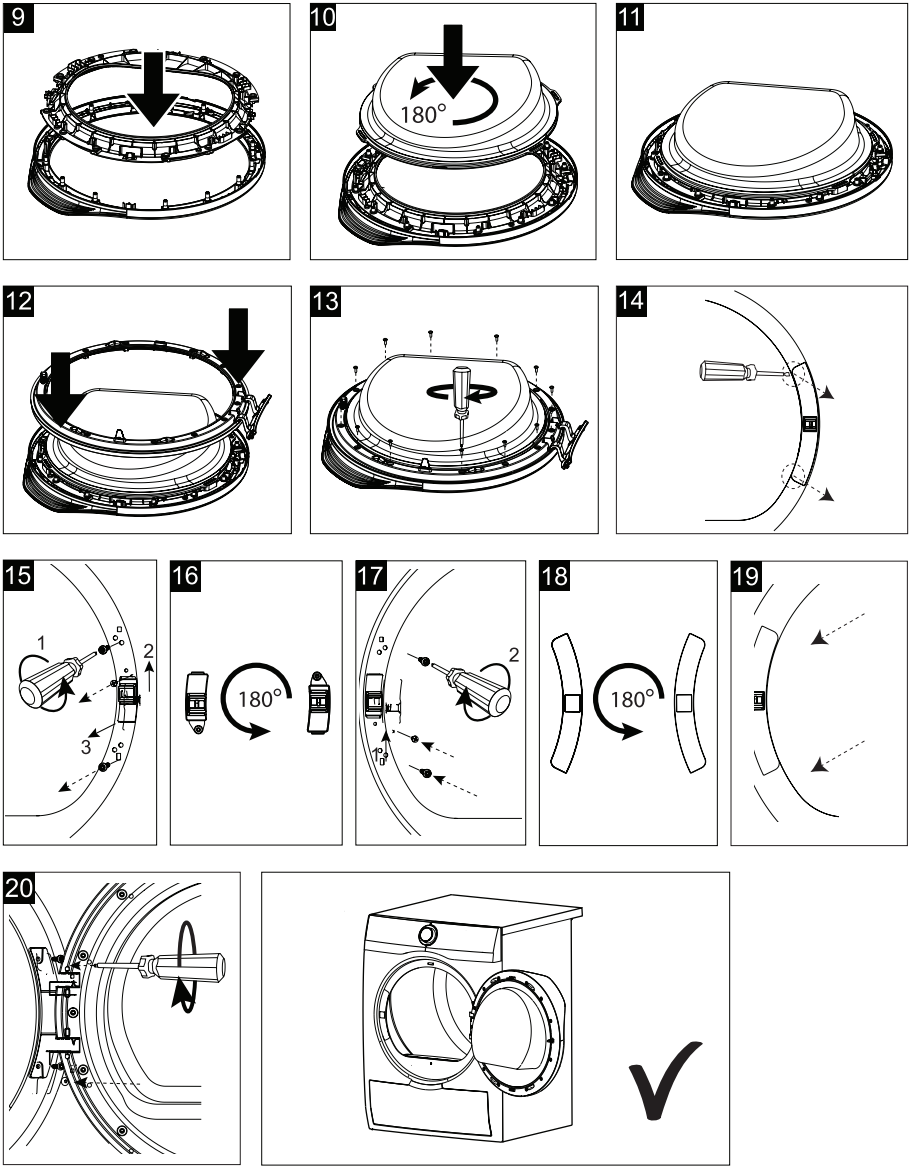
9
10
180°
11
12
13
14
15
1
2
3
16
180°
17
2
18
180°
19
20

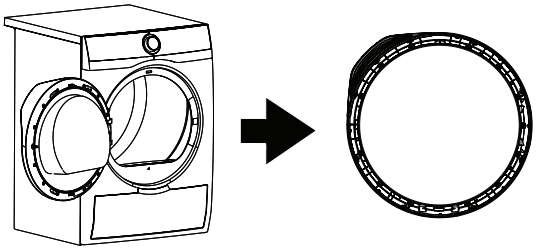

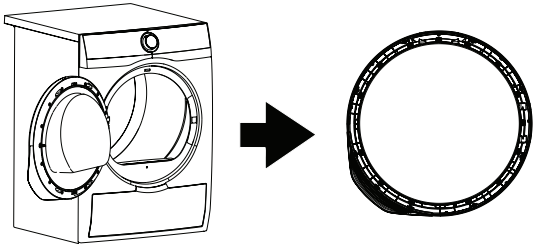

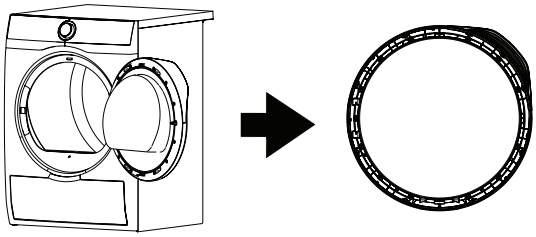

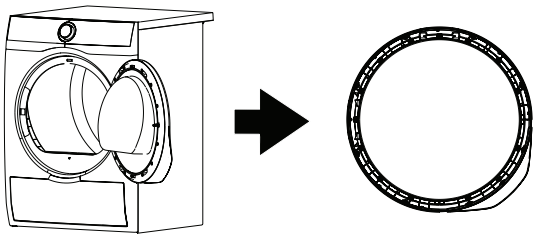

6. แผงควบคุม

6.1 แผงควบคุมการทำงาน

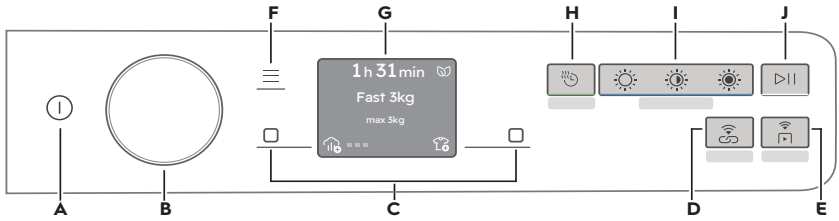

A ปุ่ม เปิด/ปิด

B ปุ่มหมุนตั้งโปรแกรม

C ปุ่มสัมผัส ซอฟต์คีย์

- ซอฟต์คีย์ด้านขวา
- ซอฟต์คีย์ด้านซ้าย

D ปุ่มสัมผัส เชื่อมต่อออบผ้า

E ปุ่มสัมผัส สั่งงานผ่านแอป

F ปุ่มสัมผัส เมนู

G จอแสดงผล

H ปุ่มสัมผัส เวลาอบ

I ปุ่มสัมผัส ระดับความแห้ง

- แห้งพิเศษ
- พับเก็บ
- เพื่อรีด

J ปุ่มสัมผัส เริ่ม/หยุด

ⓘ กดปุ่มสัมผัสด้วยนิ้วของคุณในบริเวณที่มีสัญลักษณ์หรือชื่อของตัวเลือก ห้ามสวมถุงมือเมื่อคุณใช้งานแผงควบคุม ตรวจสอบให้แน่ใจว่าแผงควบคุมสะอาดและแห้งอยู่เสมอ

6.2 ตัวเลือกอัจฉริยะ

ฟีเจอร์ใหม่นี้ได้รับการสร้างขึ้นเพื่อปรับปรุงความยั่งยืนของรอบการอบแห้ง การดูแลและบำรุงรักษาผ้า รวมถึงประสบการณ์ของผู้บริโภค ที่ออกแบบมาเพื่อแนะนำผู้ใช้ในการเลือกตัวเลือกที่ยั่งยืน และให้วิธีการที่ดีขึ้นและตรงไปตรงมามากขึ้นในการเลือกการตั้งค่าและตัวเลือกที่เหมาะสมที่สุด ซึ่งตัวเลือกนี้จะสอดคล้องกับ SmartLeaf
(หัวข้อ: ข้อเสนอแนะสำหรับ SmartLeaf)
อุณหภูมิในการอบแห้งจะปรับตัวตามแต่ละระดับตามรอบที่เลือก เพื่อให้มั่นใจในประสิทธิภาพที่ดีที่สุด โดยไม่จำเป็นต้องเปลี่ยนแปลงอุณหภูมิด้วยตนเอง

6.3 ข้อเสนอแนะสำหรับ SmartLeaf

SmartLeaf นำทางผู้บริโภคไปสู่การอบผ้าให้มีประสิทธิภาพการใช้พลังงานที่ดีขึ้น โดยอิงจากการใช้พลังงานที่คำนวณตามความจุที่กำหนดของโปรแกรม มีระดับของ SmartLeaf สามระดับที่ระบุด้วยไอคอนใบไม้ (สีเขียว):

1. ไม่มีใบไม้ปรากฏบนหน้าจอหมายถึงระดับการใช้พลังงานปานกลางหรือไม่สามารถแสดงข้อมูลได้ (สำหรับรอบที่อิงตามเวลา)
2. ใบไม้หนึ่งใบหมายถึงระดับการใช้พลังงานที่ดี
3. ใบไม้สองใบหมายถึงระดับการใช้พลังงานที่ดีที่สุด

6.4 สัญลักษณ์

	ไฟสถานะ : ขั้นตอนการลดรอยยับ
	ไฟสถานะ : ไอน้ำ
	ไฟสถานะ : WiFi
	ไอคอน ตั้งเวลาจบ
	ไฟสถานะ : ระบายน้ำในที่เก็บน้ำออก
	ไฟสถานะ : อบประจำ
	ไอคอน SmartLeaf
	ไอคอน เงียบพิเศษ
	ไอคอน ล็อค
	ไฟสถานะ : ทำความสะอาดตัวกรอง
	ไฟสถานะ : ตรวจสอบอุปกรณ์แลกเปลี่ยนความร้อน

7. ปุ่มหมุนและปุ่มกด

7.1 บทนำ

ⓘ ตัวเลือกเหล่านี้อาจไม่พร้อมใช้งานกับทุกโปรแกรมการอบแห้ง โปรดตรวจสอบความเข้ากันได้ระหว่างตัวเลือกและโปรแกรมการอบแห้งใน "ตัวเลือกโปรแกรม" ตัวเลือกหนึ่งอาจไม่สามารถใช้ร่วมกับอีกตัวเลือกหนึ่งได้ ในกรณีนี้ เครื่องจะไม่อนุญาตให้คุณตั้งค่าตัวเลือกที่ไม่เข้ากัน

7.2 ⏻ ปุ่ม เปิด/ปิด

กดและค้างปุ่มนี้ไว้สั้น ๆ เป็นเวลาหลายวินาทีเพื่อเปิดหรือปิดเครื่อง เมื่อเปิดหรือปิดเครื่อง จะมีเสียงเพลงสั้นเฉพาะ ตัวไฟและจอแสดงผลจะเปิดขึ้น และไฟ LED ของปุ่มเริ่ม/หยุด จะกระพริบ ในระหว่างการเปิดเครื่องครั้งแรก ระบบจะขอให้ตั้งค่าเครื่องก่อน

7.3 ปุ่มหมุนโปรแกรม

การหมุนปุ่มหมุนโปรแกรมจะช่วยให้เลือกโปรแกรมที่ต้องการได้

7.4 เมนู

แตะปุ่มสัมผัส "☰" เพื่อเข้าสู่ตัวเลือก

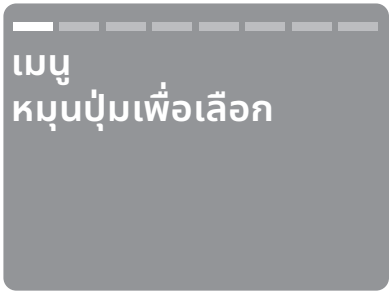

หมุนปุ่มเพื่อเรียกดู เลือกเปิด/ปิดตัวเลือกโดยการแตะที่ปุ่มซอฟต์คีย์ขวา "▢"

ในการออกจากเมนู ผู้ใช้จะต้อง:

- กดปุ่มสัมผัส "☰" อีกครั้ง
- รอเวลาออกจากเมนูเป็นเวลา 10 วินาที

7.5 ▢ ปุ่มซอฟต์คีย์ขวา/ซ้าย

ปุ่มซอฟต์คีย์สองปุ่ม "▢" ตั้งอยู่ทางด้านขวาและด้านซ้ายของจอแสดงผล
แตะที่ปุ่มซอฟต์คีย์ด้านขวา"▢" เพื่อเรียกใช้งานที่ปรากฏที่มุมขวาล่างของจอแสดงผล (เช่น เสร็จสิ้น, กลับไปที่เมนู, ฯลฯ)

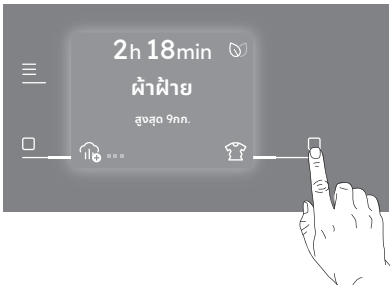

แตะที่ปุ่มซอฟต์คีย์ด้านซ้าย "▢" เพื่อเรียกใช้งานที่ปรากฏที่มุมซ้ายล่างของจอแสดงผล (เช่น เพิ่มเวลาลดรอยยับ, ระดับความแห้งสำหรับ Wool โปรแกรม, ระดับไอน้ำ, เปิดหรือปิดตัวเลือกเป็นต้น)

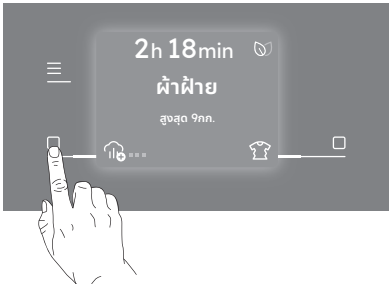

7.6 ตัวเลือกอัจฉริยะ

ฟีเจอร์ใหม่นี้ถูกสร้างขึ้นเพื่อปรับปรุงความยั่งยืนของรอบการอบแห้ง การดูแลและบำรุงรักษาผ้า รวมถึงประสบการณ์ของผู้บริโภค

ระดับความแห้ง

การเข้าถึงระดับความแห้งอย่างง่ายดายด้วยการสัมผัสเพียงครั้งเดียว สำหรับการอบแห้งมีตัวเลือกสามแบบดังนี้:

1. เพื่อรีด
   ตัวเลือกนี้แนะนำสำหรับการอบแห้งเสื้อผ้าที่เหมาะสำหรับการรีด
2. พับเก็บ
   เป็นระดับความแห้งเริ่มต้นที่เลือกสำหรับโปรแกรมส่วนใหญ่ และเหมาะสำหรับการเก็บรักษาสิ่งของ
3. แห้งพิเศษ
   ตัวเลือกนี้แนะนำสำหรับวัสดุผ้าขนหนู

ⓘ ในการเปิดใช้งานตัวเลือกหนึ่งในนี้ ให้หมุนปุ่มหมุนเพื่อเลือกโปรแกรมที่ต้องการ ไอคอนระดับความแห้งเริ่มต้นจะติดขึ้น หากต้องการเปลี่ยนไอคอน ให้แตะที่ไอคอนที่เกี่ยวข้อง

เชื่อมต่ออบผ้า

ฟีเจอร์นี้ช่วยให้เครื่องอบผ้าของคุณตั้งค่าโปรแกรมที่เหมาะสมที่สุดโดยอัตโนมัติตามโปรแกรมการซักล่าสุดที่เพิ่งทำไป สิ่งที่คุณต้องทำคือเริ่มโปรแกรมการอบแห้งเมื่อเครื่องอบผ้าของคุณโหลดเสร็จแล้ว ไม่จำเป็นต้องตั้งค่าโปรแกรมหรือเลือกตัวเลือกอื่นใดบนเครื่องอบผ้า
เมื่อโปรแกรมการซักสิ้นสุดลง เครื่องซักผ้าจะส่งข้อมูลโปรแกรมผ่าน WiFi ของเราเตอร์ในบ้านไปยัง Electrolux Cloud และยังส่งไปยังเครื่องอบผ้าของคุณด้วย

ⓘ ในการใช้ฟังก์ชัน เชื่อมต่ออบผ้า เครื่องอบผ้าและเครื่องซักผ้า Electrolux ต้องเชื่อมต่อกับเครือข่ายภายในบ้านเดียวกันและเชื่อมต่อกับแอปของเรา

เพื่อเปิดใช้งานฟังก์ชัน:

1. เมื่อซักเสร็จแล้ว ให้นำผ้าที่สะอาดใส่ในเครื่องอบผ้า
2. กดปุ่มสัมผัส "เชื่อมต่ออบผ้า"
3. สัญลักษณ์ทั้งหมดบนหน้าจอจะดับลง ยกเว้นไอคอน WiFi และหน้าจอจะทำการแสดงภาพเคลื่อนไหวเป็นเวลาหลายวินาที ขณะที่เครื่องกำลังดึงข้อมูลจากคลาวด์
4. หน้าจอจะแสดงข้อมูลโปรแกรมที่แนะนำโดยอัตโนมัติ หลังจาก 10 วินาที หากการดึงข้อมูลไม่สำเร็จ ไฟ LED ของปุ่มจะดับลง และเครื่องจะส่งสัญญาณเสียงเตือนข้อผิดพลาด จากนั้นโปรแกรมที่เลือกไว้ก่อนหน้านี้จะถูกเรียกคืน
5. กดปุ่มสัมผัส "▷|| เริ่ม/หยุด" เพื่อเริ่มกระบวนการอบแห้ง

ⓘ เมื่อตั้งค่าโปรแกรมเชื่อมต่อออบผ้า ผู้ใช้ยังคงสามารถเปลี่ยนตัวเลือกหรือเลือกโปรแกรมอื่นได้โดยการหมุนปุ่มหรือใช้แอป ในกรณีนี้ ไฟ LED ของปุ่ม ชเชื่อมต่อออบผ้า จะดับลงเพื่อแสดงว่าโปรแกรมที่แนะนำไม่ใช่โปรแกรมปัจจุบันอีกต่อไป โปรแกรมเชื่อมต่อออบผ้าอัตโนมัติสามารถเลือกได้อีกครั้งโดยการกดปุ่มสัมผัสที่เกี่ยวข้องจนกว่าข้อมูลจะพร้อมใช้งานบนคลาวด์

7.7 ▷|| เริ่ม/หยุด

กดปุ่มสัมผัส "▷|| เริ่ม/หยุด" เพื่อเริ่มและหยุดการทำงานของเครื่อง หรือหยุดโปรแกรมที่กำลังทำงาน

7.8 สั่งงานผ่านแอป

การแตะปุ่มสัมผัสนี้ "" อย่างรวดเร็วจะเปิดใช้งานฟังก์ชันสั่งงานผ่านแอป ซึ่งช่วยให้คุณสามารถเริ่ม, หยุดชั่วคราว และหยุดการทำงานของเครื่องจากระยะไกลได้

การเปิดใช้งานสั่งงานผ่านแอป จะทำให้เครื่องเข้าสู่สถานะสแตนด์บาย เพื่อออกจากสถานะนี้ ให้กดปุ่มอีกครั้งและปิดเครื่อง

ⓘ หากประตูเปิดอยู่ ฟังก์ชันสั่งงานผ่านแอป จะถูกปิดการใช้งาน

กดและค้างปุ่มนี้ไว้นานขึ้นเพื่อเปิดใช้งานฟังก์ชันอื่น ๆ

- กดค้างไว้เป็นเวลา 5 วินาทีจนกว่าจะได้ยินเสียงคลิก WiFi จะเปิดและปิด
- กดค้างไว้เป็นเวลา 10 วินาทีจนกว่าจะได้ยินเสียงสองครั้งเพื่อรีเซ็ตข้อมูลรับรองเครือข่าย และข้อความต่อไปนี้จะปรากฏขึ้น: รีเซ็ตข้อมูลรับรองเครือข่ายหรือไม่?

8. ข้อมูลเบื้องต้น

เมื่อคุณเปิดเครื่องครั้งแรก หน้าจอจะแสดงข้อมูลที่เกี่ยวข้องกับเครื่องใช้ หากผู้ใช้ข้ามข้อมูลนี้ในครั้งแรกที่เปิดเครื่อง ข้อมูลจะปรากฏอีกครั้งในครั้งถัดไปที่เปิดเครื่องหลังจากเริ่มต้น หากผู้ใช้กดข้ามเป็นครั้งที่สอง ข้อมูลจะไม่แสดงอีกต่อไป

9. การใช้งานเริ่มต้น

ทุกครั้งที่คุณเปิดเครื่อง หน้าจอเริ่มต้นจะปรากฏบนหน้าจอ เมื่อคุณเปิดเครื่องครั้งแรก หลังจากหน้าจอเริ่มต้น คุณจะได้รับคำแนะนำผ่านขั้นตอนการตั้งค่าเริ่มต้น

9.1 ภาษาและการตั้งค่า

เลื่อนดูรายการภาษาโดยการหมุนปุ่มหมุนเพื่อค้นหาภาษาที่ต้องการ และเลือกโดยการกดปุ่มซอฟต์คีย์ด้านขวา "▢" .

ⓘ โดยการหมุนปุ่มหมุน ภาษาที่เลือกจะปรากฏเป็นตัวหนา

9.2 WiFi และการตั้งค่า

เมื่อเปิดเครื่องครั้งแรก หน้าจอจะแสดงให้เชื่อมต่อเครื่องกับ WiFi หน้าต่างถัดไปจะปรากฏขึ้น:

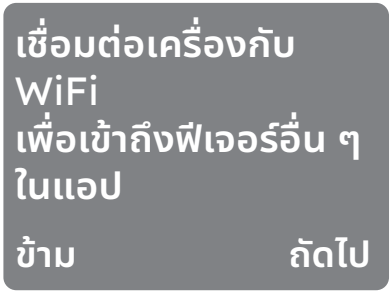

แตะที่ปุ่มซอฟต์คีย์ด้านซ้าย "▢" เพื่อข้ามการดำเนินการนี้และกลับไปยังมุมมองก่อนหน้า
แตะที่ปุ่มซอฟต์คีย์ด้านขวา "▢" เพื่อไปยังขั้นตอนถัดไปและทำตามคำแนะนำ หน้าต่างถัดไปจะปรากฏขึ้น:

ⓘ เพื่อเชื่อมต่อเครื่องกับอุปกรณ์มือถือ ดาวน์โหลดแอปและคุณสมบัติอื่น ๆ อ้างอิงจากบทที่ "WiFi - การตั้งค่าเชื่อมต่อ"

10. WI-FI การตั้งค่าเชื่อมต่อ

ซอฟต์แวร์ในผลิตภัณฑ์นี้ประกอบด้วยส่วนประกอบที่ใช้ซอฟต์แวร์ฟรีและโอเพนซอร์ส Electrolux ขอขอบคุณการสนับสนุนจากชุมชนซอฟต์แวร์โอเพนซอร์สและหุ่นยนต์ในการพัฒนาโครงการนี้ สำหรับการเข้าถึงรหัสต้นฉบับของส่วนประกอบซอฟต์แวร์ฟรีและโอเพนซอร์สที่มีเงื่อนไขใบอนุญาตที่ต้องการเผยแพร่ และเพื่อดูข้อมูลลิขสิทธิ์และเงื่อนไขใบอนุญาตที่เกี่ยวข้อง โปรดเยี่ยมชม: http://electrolux.opensoftwarerepository.com (folder NIUS)"

บทนี้อธิบายวิธีการเชื่อมต่อเครื่องใช้ไฟฟ้าอัจฉริยะกับเครือข่าย Wi-Fi และเชื่อมโยงกับอุปกรณ์มือถือด้วยฟังก์ชันนี้ คุณสามารถรับการแจ้งเตือน ติดตาม และควบคุมเครื่องอบผ้าได้จากอุปกรณ์มือถือของคุณได้

ฟังก์ชัน Wi-Fi ถูกปิดใช้งานเป็นการตั้งค่าเริ่มต้นจากโรงงาน

ในการเชื่อมต่อเครื่องใช้ไฟฟ้าเพื่อเพลิดเพลินกับฟีเจอร์และบริการทั้งหมด คุณจำเป็นต้องมีอุปกรณ์ดังต่อไปนี้:

- เครือข่ายไร้สายที่บ้านที่เปิดการเชื่อมต่ออินเทอร์เน็ต
- อุปกรณ์มือถือที่เชื่อมต่อกับเครือข่ายไร้สาย

Wi-Fi module parameter	
Frequency/ Protocol	Wi-Fi: 2.4 GHz / 802.11 bgn
Max power	Wi-Fi 2.4 GHz: < 20 dBm
Encryption	WPA, WPA2, WEP

คุณจะต้องติดตั้งแอปของเรา สร้างบัญชี และยอมรับข้อกำหนดและเงื่อนไข รวมถึงนโยบายความเป็นส่วนตัวของอีเลคโทรลักซ์ในแอปเพื่อใช้ฟีเจอร์ที่เชื่อมต่อกับเครื่องอบผ้า การเชื่อมต่ออินเทอร์เน็ตและ Wi-Fi จำเป็นสำหรับการใช้ฟีเจอร์ทั้งหมดของแอปและเครื่องอบผ้า ระบบปฏิบัติการขั้นต่ำสำหรับแอปดูได้ที่คำถามที่พบบ่อยของแอป

10.1 รหัส QR

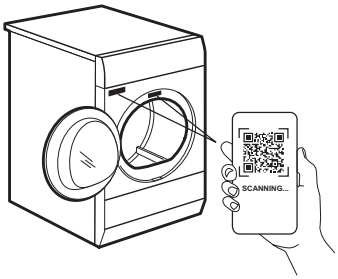

รหัส QR สามารถใช้งานได้สองวิธี:

- สแกนรหัส QR ด้วยแอปกล้องที่ติดตั้งในตัวเพื่อดาวน์โหลดแอปของเราจาก App Store บนอุปกรณ์สมาร์ทของคุณและทำตามขั้นตอนที่กำหนด
- จับคู่กับอุปกรณ์สมาร์ทของคุณเพื่อทำให้กระบวนการง่ายขึ้น สแกนรหัส QR ด้วยเครื่องสแกนรหัส QR ที่ติดตั้งในแอปของเรา

10.2 การติดตั้งแอปของเรา

เมื่อต่อเครื่องอบผ้ากับแอป ให้ยืนใกล้เครื่องพร้อมกับอุปกรณ์สมาร์ทของคุณ

ตรวจสอบให้แน่ใจว่าอุปกรณ์สมาร์ทของคุณเชื่อมต่อกับเครือข่ายไร้สาย

1. ไปที่ App Store/Play Store บนอุปกรณ์สมาร์ทของคุณ หรือสแกนรหัส QR (ดูในบทที่ 'รหัส QR บนแผ่นป้ายข้อมูล').

Download on the App Store GET IT ON Google Play

2. ดาวน์โหลดและติดตั้งแอปของเรา
3. ตรวจสอบให้แน่ใจว่าคุณได้เปิดการเชื่อมต่อ WiFi ในเครื่องอบผ้า หากยังไม่ได้ทำ โปรดไปที่ส่วนด้านล่าง

4. เริ่มต้นแอปพลิเคชัน เลือกประเทศและภาษา และเข้าสู่ระบบด้วยอีเมลและรหัสผ่านของคุณ หากคุณยังไม่มีบัญชี ให้สร้างบัญชีใหม่โดยทำตามคำแนะนำในแอปของเรา

10.3 การตั้งค่าการเชื่อมต่อไร้สายของเครื่องอบผ้า

ดาวน์โหลดและติดตั้งแอปของเราในอุปกรณ์ของคุณ

ⓘ คุณยังสามารถตั้งค่าการเชื่อมต่อไร้สายของเครื่องอบผ้าโดยการกดปุ่มสัมผัส "สั่งงานผ่านแอป" ค้างไว้ประมาณ 5 วินาที

1. แอปของคุณ - แตะที่ "เพิ่มอุปกรณ์" และทำตามคำแนะนำในแอปเพื่อเชื่อมต่อเครื่องใช้
2. กดปุ่ม "⏻ เปิด/ปิด" ค้างไว้เป็นเวลาสองสามวินาทีเพื่อเปิดเครื่อง
3. แตะที่ปุ่ม "☰", หมุนปุ่มหมุนจนกว่าหน้าจอจะแสดง "การตั้งค่าเครื่อง"

4. แตะที่ปุ่มซอฟต์คีย์ด้านขวา ▢ เพื่อเข้าสู่การตั้งค่าเครื่อง
5. หมุนปุ่มหมุนจนกว่าหน้าจอจะแสดง "WiFi".

6. แตะที่ปุ่มซอฟต์คีย์ด้านขวา ▢ เพื่อตั้งค่าการเชื่อมต่อ WiFi โมดูลไร้สายจะเริ่มต้นทำงาน อาจใช้เวลาประมาณ 10 วินาทีจนกว่าจะพร้อมใช้งาน

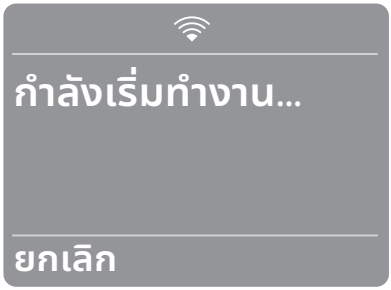

เมื่อโมดูลไร้สายพร้อมใช้งาน หน้าจอถัดไปจะปรากฏขึ้น (พร้อมเชื่อมต่อ):

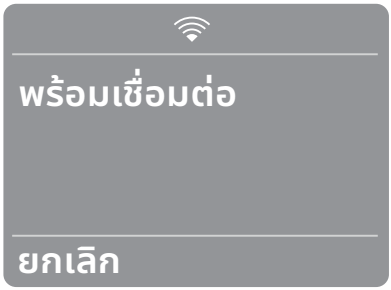

จุดเข้าถึงจะเปิดใช้งานเป็นเวลาประมาณ 5 นาที

7. ตั้งค่าแอปของเราบนอุปกรณ์สมาร์ทของคุณ หากการเชื่อมต่อได้รับการตั้งค่าเรียบร้อยแล้ว หน้าจอต่อไปนี้จะปรากฏขึ้น

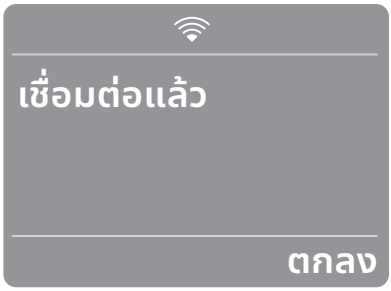

8. กดปุ่มซอฟต์คีย์ด้านขวา "▢" เพื่อกลับไปที่หน้าจอหลัก

ⓘ ทุกครั้งที่คุณเปิดเครื่อง เครื่องจะใช้เวลา 10 วินาทีในการเชื่อมต่อกับเครือข่ายโดยอัตโนมัติ

หลังจากการตั้งค่าการเชื่อมต่อเรียบร้อยแล้ว แตะที่ปุ่มสัมผัส "สั่งงานผ่านแอป" เพื่อใช้งานฟังก์ชันเปิด/ปิดfunction.

ⓘ หากคุณปิดเครื่องแล้วเปิดใหม่อีกครั้ง การเชื่อมต่อไร้สายจะถูกปิดโดยอัตโนมัติ

10.4 รีเซ็ตข้อมูลรับรองเครือข่าย

ⓘ คุณยังสามารถรีเซ็ตข้อมูลรับรองเครือข่ายโดยการกดปุ่มสัมผัส "สั่งงานผ่านแอป" ค้างไว้ประมาณ 10 วินาที

1. กดปุ่ม "⏻ เปิด/ปิด" เพื่อเปิดเครื่อง
2. กดปุ่มสัมผัส "☰", หมุนปุ่มหมุนจนกว่าหน้าจอจะแสดง"การตั้งค่าเครื่อง"

3. แตะที่ปุ่มซอฟต์คีย์ด้านขวา "▢" เพื่อเข้าสู่การตั้งค่าเครื่อง
4. หมุนปุ่มหมุนจนกว่าหน้าจอจะแสดง "WiFi".

5. แตะที่ปุ่มซอฟต์คีย์ด้านขวา "▢" เพื่อแก้ไขการเชื่อมต่อ WiFi
6. หมุนปุ่มหมุนจนกว่าหน้าจอจะแสดงหน้าจอรีเซ็ตเครือข่าย

7. แตะที่ปุ่มซอฟต์คีย์ด้านขวา "▢" หน้าจอถัดไปจะปรากฏขึ้น

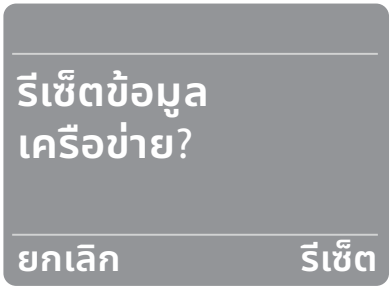

8. แตะที่ปุ่มซอฟต์คีย์ด้านขวา "▢" เป็นการยืนยันตัวเลือกของคุณ

ข้อมูลรับรองเครือข่ายกำลังเริ่มต้นการรีเซ็ต After

หลังจากไม่กี่วินาที หน้าจอถัดไปจะปรากฏขึ้น

10.5 ข้อมูลเครือข่าย

เมื่อแอปถูกติดตั้งและการเชื่อมต่อไร้สายเสร็จสมบูรณ์ คุณสามารถตรวจสอบข้อมูลบางอย่างเกี่ยวกับการเชื่อมต่อและเครือข่ายได้

1. กดปุ่ม "⏻ เปิด/ปิด" เพื่อเปิดเครื่อง
2. กดปุ่มสัมผัส "☰" หมุนปุ่มหมุนจนกว่าหน้าจอจะแสดง"การตั้งค่าเครื่อง".

3. แตะที่ปุ่มซอฟต์คีย์ด้านขวา "▢" เพื่อเข้าสู่การตั้งค่าเครื่อง
4. หมุนปุ่มหมุนจนกว่าหน้าจอจะแสดง "WiFi".

5. แตะที่ปุ่มซอฟต์คีย์ด้านขวา "▢" เพื่อเข้าสู่หน้าจอถัดไป:

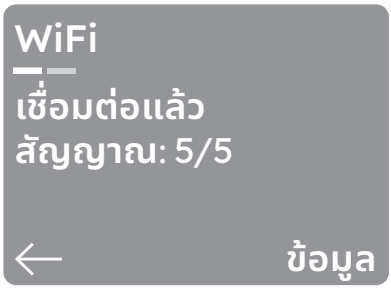

คุณสามารถตรวจสอบ:

- สถานะการเชื่อมต่อ (เช่น กำลังเริ่มต้น..., ไม่เชื่อมต่อ, เชื่อมต่อแล้ว)
- ความแรงของสัญญาณ

6. แตะที่ปุ่มซอฟต์คีย์ด้านขวา "▢" เพื่อเข้าสู่หน้าจอถัดไป:

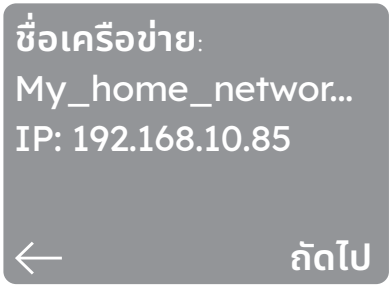

คุณสามารถตรวจสอบ:

- ชื่อเครือข่าย
- ที่อยู่ IP ของเครื่องอบผ้า

7. แตะที่ปุ่มซอฟต์คีย์ด้านขวา "▢" เพื่อเข้าสู่หน้าจอถัดไป

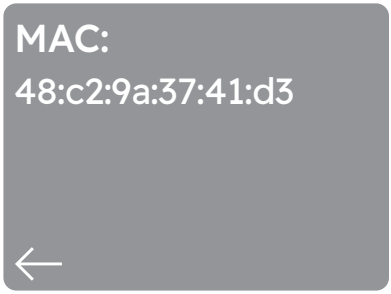

คุณสามารถตรวจสอบ:

- ที่อยู่ MAC ของเครื่องอบผ้า

8. แตะที่ปุ่มซอฟต์คีย์ด้านซ้าย "▢" เพื่อกลับไปสู่เมนูหลัก

10.6 การอัปเดตข้อมูล

ⓘ ในระหว่างการอัปเดต ขอแนะนำม่ให้ปิดหรือถอดปลั๊กเครื่อง

แอปอาจเสนอให้ดาวน์โหลดการอัปเดตฟีเจอร์ใหม่
การอัปเดตจะได้รับการยอมรับผ่านแอปเท่านั้น
หากโปรแกรมกำลังทำงาน แอปจะแจ้งว่าการอัปเดตจะเริ่มต้นเมื่อโปรแกรมสิ้นสุด
ในระหว่างการอัปเดต ข้อความต่อไปนี้จะปรากฏบนหน้าจอ: อย่าปิดเครื่อง
เครื่องจะสามารถใช้งานได้อีกครั้งเมื่อการอัปเดตเสร็จสิ้น โดยจะไม่มีการแจ้งเตือนเกี่ยวกับการอัปเดตที่สำเร็จ
หากเกิดข้อผิดพลาด ข้อความต่อไปนี้จะปรากฏบนหน้าจอ: "การอัปเดตล้มเหลว"
กดปุ่มซอฟต์คีย์ด้านขวา "▢" เพื่อกลับไปใช้งานตามปกติ

10.7 WiFi เปิดตลอดเวลา

ฟังก์ชัน WiFi เปิดตลอดเวลาสามารถเปิดใช้งานได้เฉพาะผ่านแอปของเราเท่านั้น
ฟังก์ชั่นนี้ช่วยให้เครื่องเชื่อมต่อกับเครือข่ายได้ตลอดเวลา แม้ในขณะที่เครื่องปิดอยู่ ดังนั้นคุณจึงสามารถสั่งการครื่องจากระยะไกลได้ตลอดเวลา
ไฟสถานะ "📶" ติดอยู่
สามารถเปิดเครื่องได้โดยการกดปุ่ม "⏻ เปิด/ปิด" หรือผ่านแอป

ⓘ ฟังก์ชัน WiFi เปิดตลอดเวลาอาจมีผลต่อการใช้พลังงานของคุณ ฟังก์ชัน WiFi เปิดตลอดเวลา จะถูกปิดโดยค่าเริ่มต้น

11. โปรแกรมการทำงาน

11.1 ⏻ ข้อมูลโปรแกรม

โดยการหมุนปุ่มหมุนโปรแกรมเพื่อเลือกโปรแกรมที่ต้องการ จะมีความเป็นไปได้ในการแสดงหน้าจอข้อมูลโปรแกรม หากมีข้อมูลเกี่ยวกับโปรแกรม ไอคอน "⏻" ข้อมูลจะปรากฏที่มุมขวาล่าง

- แตะที่ปุ่มซอฟต์คีย์ด้านขวา "▢"

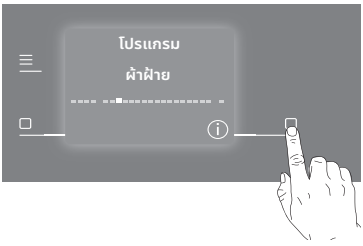

หากมีสองหน้า หน้าจอแรกจะมีปุ่ม "ถัดไป" และหน้าจอที่สองจะมีปุ่ม "ตกลง" ซึ่งจะปิดหน้าจอและกลับไปที่หน้าจอหลัก หากมีเพียงหน้าจอเดียว ปุ่มซอฟต์คีย์ด้านขวา "▢" จะเป็น "ตกลง" จะมีการตั้งเวลาหมดอายุ 5 วินาทีที่ทำให้หน้าจอข้อมูลปิดลงโดยอัตโนมัติ (ตัวจับเวลานี้จะถูกรีเซ็ตหากมีสองหน้าและผู้ใช้กด "ถัดไป")

11.2 ตารางโปรแกรม

โปรแกรม	ความจุ [1]	คุณสมบัติ/ประเภทของผ้า
ผ้าฝ้าย	สูงสุด	โปรแกรมสำหรับผ้าฝ้ายสีขาวและสี ระดับการแห้งที่ตั้งค่าเริ่มต้นคือระดับแห้งพร้อมเก็บ
ผ้าฝ้ายแบบประหยัด	สูงสุด	โปรแกรมสำหรับผ้าฝ้ายที่ออกแบบมาเพื่อการประหยัดพลังงานสูงสุด
อบด่วน 3กก.	3 กก.	อบผ้าอย่างรวดเร็วสำหรับเสื้อผ้าที่ใส่ทุกวันที่ทำจากผ้าฝ้าย ผ้าฝ้ายผสมใยสังเคราะห์ และผ้าใยสังเคราะห์ เหมาะสำหรับเสื้อผ้าเนื้อบางเบา
อบผสม	5 กก.	ออกแบบมาเพื่อการอบแห้งที่ใช้บ่อยสำหรับสิ่งที่คุณซักโดยไม่ต้องคัดแยก อบเสื้อผ้าแห้งอย่างสม่ำเสมอ อย่างเช่น ผ้าฝ้าย ผ้าฝ้ายผสมใยสังเคราะห์ และใยสังเคราะห์
ผ้าใยสังเคราะห์	4 กก.	เสื้อผ้าทั่วไปที่ผสมหลายเส้นใยซึ่งประกอบด้วยใยสังเคราะห์เป็นหลัก เช่น โพลีเอสเตอร์, โพลีอะไมด์ เป็นต้น
ผ้าเนื้อบาง	2 กก.	แนะนำสำหรับผ้าบางประเภทที่ละเอียดอ่อนทั่วไป เช่น วิสคอส เรยอน อะคริลิค และเส้นใยผสม
ผ้ายีนส์	4 กก.	อบแห้งสำหรับยีนส์และเสื้อผ้าผ้าเดนิมอื่นๆ แม้ในส่วนที่หนาเช่น กระเป๋า ตะเข็บ และขอบกางเกง และลดการพับกันของเสื้อผ้า
ผ้าขนสัตว์	1 กก.	อบแห้งเสื้อผ้าขนสัตว์ที่สามารถซักด้วยเครื่องหรือมือได้อย่างอ่อนโยน โดยปรับรอบการหมุนของถังอบที่ความเร็วสูงสุดเพื่อจำลองการอบแบบตากแห้ง ซึ่งได้รับการรับรองจาก The Woolmark Company
ผ้าลินิน	2 กก.	อบแห้งผ้าปูอย่างอ่อนโยนและลดการเกิดรอยยับเพื่อให้รีดได้ง่ายขึ้น แนะนำให้เอาเสื้อผ้าออกทันทีเมื่อรอบอบแห้งเสร็จสิ้น
ผ้าไหม	0.5 กก.	รักษารูปร่างของเสื้อผ้าไหมที่สามารถซักด้วยเครื่องหรือมือได้อย่างละเอียด ลดรอยยับด้วยการใช้ลมอุ่นที่อ่อนโยนและการเคลื่อนไหวที่นุ่มนวล
เครื่องนอน+	4.5 กก.	สามารถอบสูงสุดถึงชุดผ้าปูที่นอน 3 ชุด โดยหนึ่งในนั้นสามารถใช้เป็นชุดเครื่องนอนที่มีขนาดใหญ่ได้
ผ้านวม	3 กก.	ช่วยให้การอบแห้งถึงไส้ในของผ้านวมหรือผ้านวมขนาดใหญ่ หมอน และผ้าห่มทั่วไป
ชุดกีฬา+	4 กก.	อบแห้งเสื้อผ้ากีฬาทั่วไปที่ทำจากใยสังเคราะห์ รวมถึงพอลีเอสเตอร์ การผสมผสานของอีลาสเตน และพอลีอะไมด์
ผ้าเช็ดตัว	5 กก.	ช่วยให้ผ้าขนหนูและเสื้อคลุมอาบน้ำจากผ้าฝ้ายมีความนุ่มนวลมากขึ้นและแห้งได้อย่างเหมาะสม
ขจัดเชื้อโรค	5 กก.	อบและฆ่าเชื้อโรคบนเสื้อผ้าและสิ่งของต่างๆ ของคุณด้วยอุณหภูมิที่สูงกว่า 60°C ตลอดรอบการซัก ช่วยกำจัดแบคทีเรียและไวรัสได้มากกว่า 99.9% [2] หมายเหตุ: ควรใช้รอบการทำงานนี้กับเสื้อผ้าที่เปียกเท่านั้น ไม่เหมาะกับผ้าเนื้อบอบบาง
รีดง่าย	2 กก.	ลดรอยยับบนชุดผ้าฝ้าย ผ้าใยสังเคราะห์ และผ้าผสมที่ผ้าปริมาณน้อย เพื่อให้รีดได้ง่าย มีระดับการอบแห้งสองระดับ: เพื่อรีด ทำให้เสื้อผ้าคงความชื้นเล็กน้อยสำหรับการรีดหรือแขวน ระดับพับเก็บ ที่ทำให้แห้งสนิท
ไอน้ำลดรอยยับและกลิ่น	2 กก.	สำหรับเสื้อผ้าที่แห้งแล้วเท่านั้น เป็นรอบที่มีอุณหภูมิต่ำและสั้นที่ช่วยในการกำจัดกลิ่นจากเสื้อผ้าจำนวนเล็กน้อย เหมาะสำหรับเสื้อผ้าที่แห้งแล้วซึ่งเก็บไว้เป็นเวลานาน

1) ความจุสูงสุดขึ้นอยู่กับรุ่นของเครื่องอบผ้า

2) ผ่านการทดสอบเชื้อ Candida albicans, MS2 Bacteriophage และ Escherichia coli จากการทดสอบภายนอกโดย Swissatest Testmaterialien AG ในปีค.ศ. 2021 (รายงานการทดสอบหมายเลข 20212038)

โปรแกรมไอน้ำ

โปรแกรม	ความจุ	คุณสมบัติ/ประเภทของผ้า
ผ้าฝ้าย	2 กก.	ช่วยในการกำจัดรอยยับจากเสื้อผ้าฝ้าย ระยะเวลาโปรแกรมจะปรับอัตโนมัติเพื่อให้แห้งจนถึงระดับความชื้นที่เหมาะสมสำหรับการใช้ไอน้ำ โดยทั่วไปไม่จำเป็นต้องรีดเสื้อผ้าหลังจากโปรแกรมไอน้ำ ในกรณีนี้ เสื้อผ้าควรถูกแขวนบนไม้แขวนเสื้อหรือพับเก็บ
ผ้าใยสังเคราะห์	2 กก.	ช่วยในการกำจัดรอยยับจากเสื้อผ้าโพลีเอสเตอร์ ระยะเวลาโปรแกรมจะปรับอัตโนมัติเพื่อให้แห้งจนถึงระดับความชื้นที่เหมาะสมสำหรับการใช้ไอน้ำ โดยทั่วไปไม่จำเป็นต้องรีดเสื้อผ้าหลังจากโปรแกรมไอน้ำ ในกรณีนี้ เสื้อผ้าควรถูกแขวนบนไม้แขวนเสื้อหรือพับเก็บ
ไอน้ำลดรอยยับและกลิ่น	2 กก.	สำหรับเสื้อผ้าที่แห้งแล้วเท่านั้น ยังสามารถใช้ในการกำจัดกลิ่นได้ เสื้อผ้าจะนุ่มและสบายมากขึ้น เราขอแนะนำให้หยิบเสื้อผ้าออกและแขวนทันทีหลังจากโปรแกรมเสร็จสิ้น

มาตราฐานรับรองจาก Woolmark Apparel Care - Blue

โปรแกรมการอบแห้งขนสัตว์ของเครื่องนี้ได้ผ่านการทดสอบและได้รับการรับรองจาก The Woolmark Company แล้ว โปรแกรมการอบแห้งนี้เหมาะสำหรับการอบแห้งเสื้อผ้าขนสัตว์ที่มีป้ายระบุว่า 'ซักด้วยมือ' โดยมีข้อกำหนดว่าเสื้อผ้าต้องซักในรอบการซักด้วยมือที่ได้รับการรับรองจาก Woolmark และอบแห้งตามคำแนะนำที่ออกโดยผู้ผลิต **M2140**.

11.3 โปรแกรมจากแอปพลิเคชัน

ฝั่งขวาสุดของรายการโปรแกรม จะมีตำแหน่งเดียวที่สามารถนำไปยังรายการรองที่เรียกว่า "โปรแกรมจากแอปพลิเคชัน"

แตะปุ่มซอฟต์คีย์ด้านขวา "▢" เพื่อเข้าสู่รายการโปรแกรมจากแอปพลิเคชัน ในโปรแกรมนี้ทำงานเช่นเดียวกับโปรแกรมหลัก

เพื่อกลับไปที่รายการหลัก หมุนปุ่มหมุนไปทางซ้ายที่ตำแหน่ง "กลับไปที่รายการหลัก" และกดปุ่มซอฟต์คีย์ด้านซ้าย "▢"

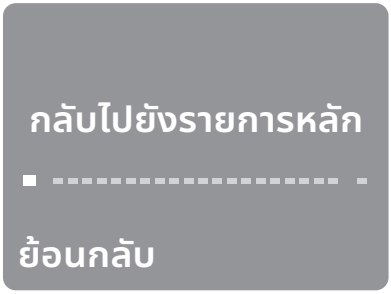

รายการโปรแกรมเสริมเริ่มต้น

แอปของเรามีโปรแกรมแอปพลิเคชันให้เลือกมากมาย เชื่อมต่อเครื่องกับแอปของเราและคุณจะสามารถเลือกโปรแกรมที่เหมาะกับความต้องการของคุณได้มากที่สุด

ⓘ ชื่อโปรแกรมอาจมีการเปลี่ยนแปลงขึ้นอยู่กับความต้องการของตลาด โดยไม่ต้องแจ้งล่วงหน้า แอปจะให้รายละเอียดครบถ้วนของแต่ละโปรแกรม

เสื้อผ้าเด็ก ,ผ้าสำหรับใช้กลางแจ้ง ,ผ้าม่าน ,ลดแบคทีเรีย/ไวรัส ,ชั้นวางอบผ้า ,รองเท้ากีฬา ,เสื้อกันหนาว ,ชุดกีฬา ,ชุดเล่นสกี ,ชุดฟุตบอล/รักบี้ ,อบหมอน ,ขจัดขนสัตว์.

รีเซ็ตรายการโปรแกรมเสริมเป็นค่าเริ่มต้นจากโรงงาน

ด้านขวาสุดของรายการโปรแกรมแอปพลิเคชัน หากผู้ใช้ได้ทำการปรับแต่งรายการโปรแกรมในแอป จะมีตัวเลือกในการรีเซ็ตเป็นรายการเริ่มต้นจากโรงงาน

1. หมุนปุ่มไปด้านขวาสุดของหน้าจอ หน้าจอจะแสดง "หน้าจอรีเซ็ตรายการ"

2. แตะปุ่มซอฟต์คีย์ด้านขวา ▢ หน้าจอจะโชว์ข้อความโต้ตอบที่ขอให้ยกเลิก

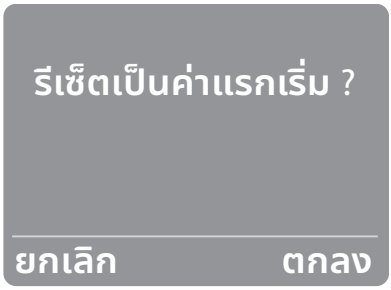

3. แตะปุ่มซอฟต์คีย์ด้านขวา "▢" เพื่อรีเซ็ตรายการโปรแกรมเสริมเป็นค่าเริ่มต้นจากโรงงาน

11.4 โปรแกรมออฟชั่น

โปรแกรม [1]	ระดับความแห้ง			ไอน้ำ	เพิ่มเวลาลดรอยยับ	เงียบพิเศษ	เพิ่มการกลับผ้า	เวลาอบ	ตั้งเวลาจบ
ผ้าฝ้าย	■	■	■	■	■	■	■	■	■
ผ้าฝ้ายแบบประหยัด		■			■				■
อบด่วน 3กก.		■			■				■
อบผสม	■	■			■	■		■	■
ผ้าใยสังเคราะห์	■	■	■	■	■	■	■	■	■
ผ้าเนื้อบาง		■			■				■
ผ้ายีนส์	■	■			■				■
ผ้าขนสัตว์								■	■
ผ้าลินิน		■			■				■
ผ้าไหม		■			■				■
เครื่องนอน+	■	■	■		■		■	■	■
ผ้านวม		■			■				■
ชุดกีฬา+		■			■				■
ผ้าเช็ดตัว		■			■				■
ขจัดเชื้อโรค	■				■				■
รีดง่าย		■	■		■				■
ไอน้ำลดรอยยับและกลิ่น				■	■				■

1) คุณสามารถตั้งค่าตัวเลือก 1 ตัวเลือกหรือหลายตัวเลือกพร้อมกับการตั้งโปรแกรม เปิดหรือปิดใช้งานฟังก์ชั่นโดยกดปุ่มที่เกี่ยวข้อง

12. โปรแกรมออฟชั่น

12.1 ระดับความแห้งสำหรับโปรแกรม Wool

ตัวเลือกที่เหมาะสมสำหรับโปรแกรม Wool ในการปรับระดับความแห้ง

- แตะปุ่มซอฟต์คีย์ด้านซ้าย "▢" เพื่อกำหนดระดับความแห้งที่ต้องการสำหรับโปรแกรม Wool

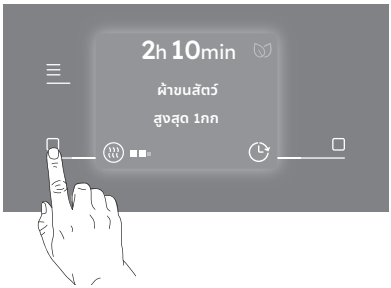

มีระดับความแห้งให้เลือกสามระดับ

- ■ ■ ■ มาตรฐาน
- ■ ■ ■ พิเศษ
- ■ ■ ■ สูงสุด

12.2 เวลาอบ

คุณสามารถตั้งระยะเวลาโปรแกรมได้ตั้งแต่ 10 นาที ถึง 2 ชั่วโมง ระยะเวลาที่ต้องการขึ้นอยู่กับปริมาณผ้าที่อยู่ในเครื่อง

ⓘ เราขอแนะนำให้คุณตั้งระยะเวลาสั้นสำหรับผ้าปริมาณน้อยหรือสำหรับผ้าชิ้นเดียว

คำแนะนำในการอบแห้งแบบตั้งเวลา	
10 นาที	ใช้ลมเย็นเท่านั้น (ไม่ใช้เครื่องทำความร้อน)
20 - 40 นาที	การอบแห้งเพิ่มเติมเพื่อให้ผ้าแห้งมากขึ้นหลังจากรอบการอบแห้งก่อนหน้า
>40 นาที	การอบผ้าชิ้นเล็กแบบเต็มที่สามารถใส่ผ้าได้สูงสุด 4 กก. โดยมีการปั่นที่ดี (>1200 รอบต่อนาที)

เพื่อเปิดใช้งานตัวเลือกนี้

- กดปุ่มสัมผัส "เวลาอบ"

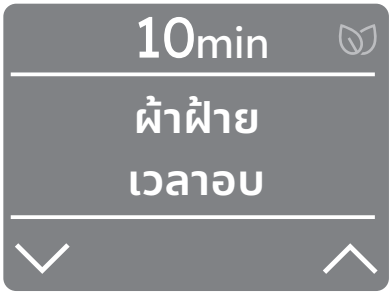

- คุณสามารถเปิดใช้งานตัวเลือกนี้โดยการแตะปุ่มซอฟต์คีย์ด้านขวา "▢" หน้าจอจะแสดงจำนวนนาทีหรือตามชั่วโมงของระยะเวลาในการอบ.

- แตะปุ่มซอฟต์คีย์ด้านขวา "▢" ∧ จะเพิ่มระยะเวลาเป็น 10 นาทีสำหรับแต่ละการกด โดยสูงสุดถึง 2 ชั่วโมง

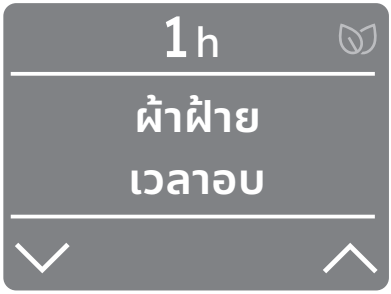

- หากต้องการลดระยะเวลา ให้แตะปุ่มซอฟต์คีย์ด้านซ้าย "▢" ∨ , ระยะเวลาจะลดลง 10 นาทีสำหรับแต่ละการกด

- เมื่อคุณได้เลือกเวลาอบที่ต้องการแล้ว รอประมาณ 3 วินาที คุณจะถูกเปลี่ยนไปยังหน้าจอหลักซึ่งที่ด้านบนของหน้าจอคุณจะสามารถเห็นเวลาการอบได้

เพื่อเอาตัวเลือกเวลาการอบออก ให้เลือกโปรแกรมอื่นโดยการหมุนปุ่มหมุนโปรแกรม หรือ ลดเวลาลงโดยการกดปุ่มัมผัส "เวลาอบ" อีกครั้งและปุ่มซอฟต์คีย์ด้านซ้าย "▢" ﹀ จนกว่าหน้าจอจะแสดงเวลาโปรแกรม

12.3 เพิ่มเวลาลดรอยยับ

ตัวเลือกนี้ขยายระยะเวลาในการป้องกันรอยยับออกไปอีก 90 นาทีที่ปลายสุดของรอบการอบ ซึ่งช่วยลดรอยยับได้ สามารถนำผ้าออกในระหว่างช่วงการป้องกันรอยยับ
ในการเปิดใช้งาน/ปิดการใช้งานตัวเลือกนี้มีวิธีดังนี้ :

โดยการแตะปุ่มซอฟต์คีย์ด้านขวา

ⓘ หากตัวเลือกนี้มีให้สำหรับโปรแกรมที่เลือกบนหน้าจอหลัก

แตะปุ่มซอฟต์คีย์ด้านขวา "▢" และไอคอน "เสื้อ"(ลดรอยยับ) จะเปลี่ยนเป็น"เสื้อ+" (เพิ่มเวลาลดรอยยับ)

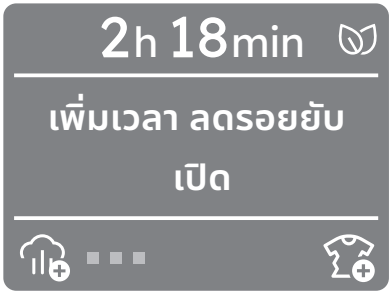

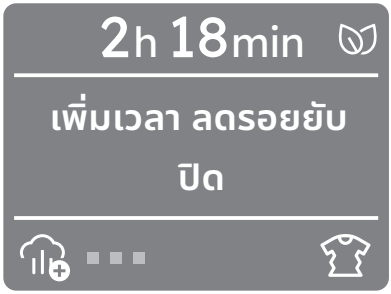

12.4 เพิ่มการกลับผ้า

เพิ่มความถี่ในการหมุนถังเพื่อ ลดการพันกันและการบิดของผ้า เพื่อเพิ่มความสม่ำเสมอในการอบและช่วยลดรอยยับ แนะนำสำหรับผ้าขนาดใหญ่หรือยาว (เช่น ผ้าปูที่นอน, กางเกง, เดรสยาว)
แตะที่เมนู "☰", หมุนปุ่มหมุนจนกว่าหน้าจอจะแสดง "เพิ่มการกลับผ้า"
การเปิดใช้งาน/ปิดการใช้งาน:

- แตะปุ่มซอฟต์คีย์ด้านขวา "▢" และไฟแสดงสถานะที่เกี่ยวข้องจะเปิด/ปิด

12.5 เงียบพิเศษ

เครื่องทำงานด้วยเสียงรบกวนต่ำโดยไม่กระทบต่อคุณภาพการอบ เครื่องทำงานช้าลงพร้อมระยะเวลาในการอบที่ยาวนานขึ้น

แตะที่เมนู "☰", หมุนปุ่มหมุนจนกว่าหน้าจอจะแสดง "เงียบพิเศษ"

การเปิดใช้งาน/ปิดการใช้งาน:

- แตะปุ่มซอฟต์คีย์ด้านขวา "▢" และไฟแสดงสถานะที่เกี่ยวข้องจะเปิด/ปิด

12.6 เตือนเมื่อจบ

เสียงเตือนจะดังที่:

- สิ้นสุดรอบการอบ
- เริ่มต้นและสิ้นสุดของช่วงการป้องกันรอยยับ
- การหยุดชะงักของรอบการอบ

ตัวเลือกเสียงเตือนโดยค่าเริ่มต้นจะเปิดใช้งานเสมอ

แตะที่เมนู "☰", หมุนปุ่มหมุนจนกว่าหน้าจอจะแสดง "เตือนเมื่อจบ"

- แตะปุ่มซอฟต์คีย์ด้านขวา "▢" และไฟแสดงสถานะที่เกี่ยวข้องจะเปิด/ปิด

หากตัวเลือกการเตือนสิ้นสุดถูกปิดใช้งาน หน้าจอจะแสดงไอคอนการเตือนสิ้นสุดปิด "🔕"

ⓘ หากการ"เตือนสิ้นสุดรอบ"ปิด (ดูที่เมนูการตั้งค่าเครื่อง) ตัวเลือกการ"เตือนเมื่อจบ" จะไม่สามารถใช้งานได้

12.7 ตั้งเวลาจบ

ด้วยตัวเลือกนี้ คุณสามารถตั้งเวลาจบตามรอบการอบที่เลือก

การเปิดใช้งาน/ปิดการใช้งาน:

- แตะที่เมนู "☰",หมุนปุ่มหมุนจนกว่าหน้าจอจะแสดง "ตั้งเวลาจบ"

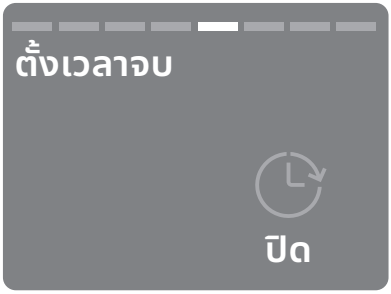

- คุณสามารถเปิดใช้งานตัวเลือกนี้โดยการกดปุ่มซอฟต์คีย์ด้านขวา "▢" หน้าจอจะแสดงชั่วโมงของเวลาในการสิ้นสุด โดยเริ่มจาก 1 ชั่วโมง

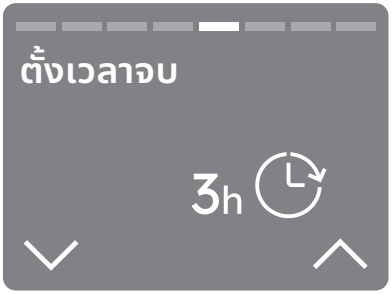

- การกดปุ่มซอฟต์คีย์ด้านขวา "▢" ∧ จะทำให้สามารถเพิ่มเวลาได้ 1 ชั่วโมงสำหรับแต่ละครั้งที่กด โดยสูงสุดถึง 24 ชั่วโมง

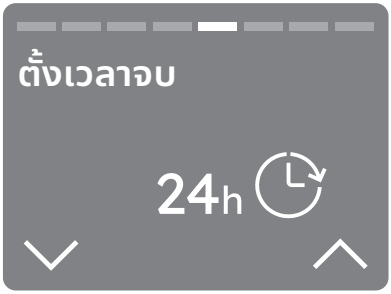

- หากคุณต้องการลดเวลา ให้กดปุ่มซอฟต์คีย์ด้านซ้าย "▢" ∨ , ระยะเวลาจะลดลง 1 ชั่วโมงสำหรับแต่ละครั้งที่กด
- เมื่อคุณเลือกเวลาตามที่ต้องการแล้ว ให้รอ 3 วินาที หรือกดปุ่มเมนู "☰" และคุณจะถูกนำกลับไปที่หน้าจอหลัก ซึ่งที่ด้านบนของหน้าจอคุณจะสามารถเห็นการนับถอยหลัง

ⓘ เครื่องจะรักษาการเลือกตัวเลือกนี้ไว้หลังจากที่คุณปิดเครื่อง

การยกเลิกตัวเลือกตั้งเวลาจบ:

- แตะ ที่เมนู "☰" หมุนปุ่มหมุนไปที่ "ตั้งเวลาจบ"
- ลดเวลาโดยการกดปุ่มซอฟต์คีย์ด้านซ้าย "▢" จนกว่าหน้าจอจะแสดงคำว่า "ปิด"

12.8 ล็อคป้องกันเด็ก

คุณสามารถป้องกันไม่ให้เด็กสัมผัสปุ่มการทำงานของเครื่องเครื่องโดยไม่ได้ตั้งใจ
ในการเปิดใช้งานตัวเลือกนี้:

- แตะที่เมนู "☰", หมุนปุ่มหมุนจนกว่าหน้าจอจะแสดง "ล็อคป้องกันเด็ก"

- คุณสามารถเปิดใช้งานตัวเลือกนี้โดยการแตะปุ่มซอฟต์คีย์ด้านขวา "▢"
- หลังจากที่คุณเปิดใช้งานล็อคเด็กแล้ว ปุ่มสัมผัสทั้งหมดจะถูกปิดการใช้งาน คุณสามารถปิดเครื่องได้โดยใช้ปุ่ม "⏻ เปิด/ปิด"
- ก่อนที่จะกดปุ่มสัมผัส "▷|| เริ่ม/หยุด" เครื่องจะไม่สามารถเริ่มทำงานได้ หน้าเจอจะแสดงไอคอน "🔒".

ⓘ เครื่องจะรักษาการเลือกตัวเลือกนี้ไว้หลังจากที่คุณปิดเครื่อง

ในการปิดการใช้งานตัวเลือกนี้

- กดปุ่มซอฟต์คีย์ด้านขวา "▢" ค้างไว้เป็นเวลา 3 วินาที จะมีการนับถอยหลังแสดงบนหน้าจอที่มุมขวาล่าง

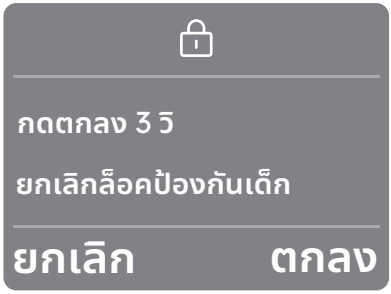

ⓘ เมื่อปิดการใช้งานตัวเลือกแล้ว หน้าจอจะแสดงข้อมูลเหมือนก่อนการเปิดใช้งาน

12.9 ♡ บันทึกเป็นรายการโปรด

วิธีการตั้งค่ารายการโปรด สามารถบันทึกโปรแกรมที่ชื่นชอบได้สูงสุด 3 โปรแกรม

ⓘ โดยค่าเริ่มต้นจะไม่มีโปรแกรมรายการโปรดถูกบันทึกไว้

- แตะที่เมนู "☰", หมุนปุ่มหมุนจนกว่าหน้าจอจะแสดง "บักทึกเป็นรายการโปรด"

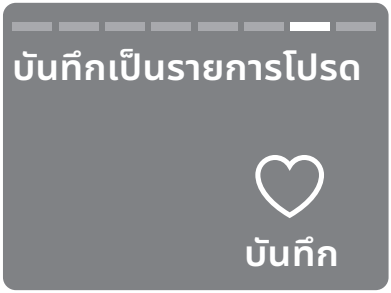

- เลือกหนึ่งในสามช่องว่างโดยการแตะปุ่มซอฟต์คีย์ด้านขวา "▢".

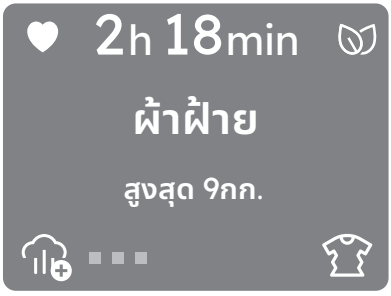

- หลังจากสองวินาที หน้าจอจะแสดงโปรแกรมที่เลือกเป็นโปรแกรมที่ชื่นชอบ ซึ่งสามารถสังเกตได้จากสัญลักษณ์รูปหัวใจ "♡" ที่ด้านบนของหน้าจอ

ⓘ เมื่อคุณต้องการบันทึกโปรแกรมที่ชื่นชอบถัดไป ช่องว่างแรกจะได้รับการระบุโดยอัตโนมัติ

วิธีการแทนที่โปรแกรมที่ชื่นชอบ สามารถแทนที่โปรแกรมที่ชื่นชอบได้ดังนี้:

- หมุนปุ่มหมุนเพื่อเลือกหนึ่งในสามช่องที่ต้องการเขียนทับ
- ยืนยันการเลือกโดยการแตะปุ่มซอฟต์คีย์ด้านขวา "▢"
- หลังจากสองวินาที หน้าจอจะแสดงโปรแกรมที่เลือกเป็นโปรแกรมที่ชื่นชอบ ซึ่งสามารถสังเกตได้จากสัญลักษณ์รูปหัวใจ "♡" ที่ด้านบนของหน้าจอ

ไม่สามารถลบโปรแกรมที่ชื่นชอบจากเครื่องได้

ⓘ เพื่อที่จะลบโปรแกรมที่ชื่นชอบ จำเป็นต้องทำการรีเซ็ตเครื่องใช้กลับไปยังการตั้งค่าโรงงาน หรือใช้แอปพลิเคชัน

วิธีการเข้าถึงโปรแกรมที่บันทึกไว ให้ทำการหมุนปุ่มหมุนไปทางซ้าย

ⓘ หากช่องเหล่านั้นถูกใช้งานแล้ว โปรแกรมที่บันทึกลำดับแรกจะปรากฏขึ้นก่อน จากนั้นจะเป็นลำดับที่สองและลำดับที่สาม

13. การตั้งค่าของเครื่องใช้ไฟฟ้า

ในส่วนนี้จะอธิบายการตั้งค่าหลักของเครื่องใช้ไฟฟ้า

- แตะที่เมนู "☰", หมุนปุ่มหมุนจนกว่าหน้าจอจะแสดง " การตั้งค่าเครื่อง"
- เลือก "แก้ไข" โดยกดปุ่มซอฟต์คีย์ด้านขวา"▢".

13.1 ภาษาและการตั้งค่า

สามารถเปลี่ยนภาษาแสดงผลได้โดยการหมุนปุ่มเพื่อเลื่อนรายการและค้นหาภาษาที่ต้องการ

- เลือกโดยแตะปุ่มซอฟต์คีย์ด้านขวา "▢".
- กลับไปยังรายการก่อนหน้า "←" โดยการกดปุ่มซอฟต์คีย์ทางซ้าย "▢".

ⓘ การเลือกภาษาโดยการหมุนปุ่มหมุน ภาษาที่เลือกจะปรากฏเป็นตัวหนา

13.2 ค่าเริ่มต้นความแห้ง

ด้วยการตั้งค่านี้ คุณสามารถเปลี่ยนระดับความแห้งเริ่มต้นได้

ⓘ การตั้งค่านี้อาจจำเป็นเนื่องจากผลลัพธ์ของความแห้งอาจได้รับผลกระทบจากปัจจัยหลายประการ เช่น ประเภทของน้ำ, แรงดันไฟฟ้า, และอุณหภูมิในสภาพแวดล้อม เป็นต้น.

วิธีการให้ได้การอบแห้งที่สมบูรณ์แบบ:

1. ลองปรับระดับความแห้ง:
   ดูรายละเอียดเกี่ยวกับตัวเลือกระดับความแห้งได้ในหัวข้อ "ปุ่มหมุนและปุ่มกด" ตัวเลือก SmartSelect - ระดับความแห้ง
2. หากคุณต้องการเพิ่มระดับความแห้งของเสื้อผ้าให้ดียิ่งขึ้น คุณสามารถปรับการตั้งค่าความแห้งเริ่มต้นได้ (ดูรายละเอียดด้านล่าง) การปรับนี้จะมีผลต่อโปรแกรมส่วนใหญ่ ยกเว้นโปรแกรม Eco, Wool, Duvet, Down Jacket, Refresh หากมีในเครื่อง

To modify the level:

- แตะปุ่มซอฟต์คีย์ด้านซ้าย "▢" ﹀ เพื่อลดระดับ
- แตะปุ่มซอฟต์คีย์ด้านขวา "▢" ﹀ เพื่อเพิ่มระดับ

มีระดับความแห้งให้เลือก 3 ระดับ

- มาตราฐาน
- พิเศษ
- สูงสุด

หมุนปุ่มเพื่อย้ายไปที่การตั้งค่าถัดไป

13.3 แจ้งเตือนถังน้ำเต็ม

ด้วยการตั้งค่านี้ คุณสามารถเปิดหรือปิดการเตือนถังน้ำเต็มได้

โดยค่าเริ่มต้น ไฟเตือนระดับน้ำในถังจะเปิดอยู่ ซึ่งจะสว่างขึ้นเมื่อโปรแกรมเสร็จสิ้นหรือเมื่อจำเป็นต้องเทน้ำออกจากถัง

- แตะปุ่มซอฟต์คีย์ด้านขวา "▢" เพื่อ เปิด/ปิด การแจ้งเตือนถังน้ำเต็ม

ⓘ หากติดตั้งชุดระบายน้ำ (อุปกรณ์เสริมเพิ่มเติม) เครื่องจะระบายน้ำจากถังน้ำโดยอัตโนมัติ ในกรณีนี้เราขอแนะนำให้ปิดการทำงานของไฟเตือนระดับน้ำในถัง

หมุนปุ่มเพื่อย้ายไปที่การตั้งค่าถัดไป

13.4 บันทึกการใช้งานล่าสุด

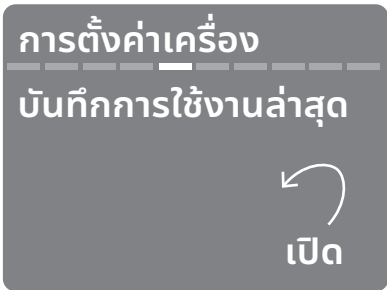

หากการตั้งค่านี้เปิดใช้งาน โปรแกรมและตัวเลือกที่ใช้ล่าสุดจะถูกบันทึกที่จุดเริ่มต้นของรายการโปรแกรม (ในช่องที่ใช้ล่าสุด) ข้าง ๆ โปรแกรมที่บันทึกเป็นรายการโปรด

- แตะปุ่มซอฟต์คีย์ด้านขวา "▢" เพื่อ เปิด/ปิด การบันทึกการใช้งานล่าสุด

หมุนปุ่มเพื่อย้ายไปที่การตั้งค่าถัดไป

13.5 เสียงปุ่มกด

ด้วยการตั้งค่านี้ คุณสามารถปิดเสียงของปุ่มกดต่าง ๆ ได้

เพื่อเปิดหรือปิดเสียง:

- แตะปุ่มซอฟต์คีย์ด้านขวา "▢" เพื่อ เปิด/ปิด เสียงปุ่มกด

หมุนปุ่มเพื่อย้ายไปที่การตั้งค่าถัดไป

ⓘ เสียงของปุ่ม "ⓘ เปิด/ปิด" เครื่อง ไม่สามารถปิดเสียงได้

13.6 เตือนเมื่อสิ้นสุดรอบการทำงาน

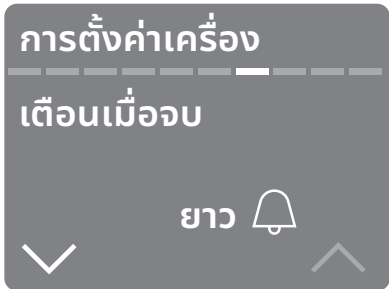

เพื่อเปลี่ยนการตั้งค่าเสียงเตือนเมื่อสิ้นสุดรอบการทำงานแตะปุ่มซอฟต์คีย์ด้านขวา/ซ้าย "▢" ^,v เพื่อเลือกระดับดังนี้:

- ยาว
- กลาง
- สั้น
- ปิด

13.7 ความสว่างหน้าจอ

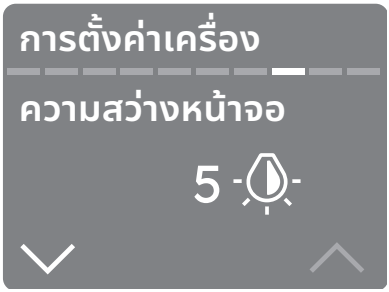

ด้วยการตั้งค่านี้ คุณสามารถปรับความสว่างของหน้าจอได้:

- แตะปุ่มซอฟต์คีย์ด้านซ้าย "▢" ﹀ เพื่อลดความสว่าง
- แตะปุ่มซอฟต์คีย์ด้านขวา "▢" ﹀ เพื่อเพิ่มความสว่าง

หมุนปุ่มเพื่อย้ายไปที่การตั้งค่าถัดไป

ⓘ มีระดับความสว่างให้เลือก 5 ระดับ

13.8 คำแนะนำ

ด้วยตัวเลือกนี้คุณสามารถดูคำอธิบายสั้น ๆ เกี่ยวกับออฟชั่นบางประการ

หมุนปุ่มโปรแกรมและเลือกโดยการแตะที่ปุ่มซอฟต์คีย์ขวา "▢" หนึ่งในตัวเลือกต่อไปนี้:

- บทนำ: ข้อมูลเกี่ยวกับแผงควบคุม, SmartSelect, โปรแกรม ไอน้ำ, เมนู, ปุ่มซอฟต์คีย์ และ สั่งงานผ่านแอป
- WiFi : ข้อมูลเกี่ยวกับการเริ่มใช้งาน

13.9 รีเซ็ตเป็นค่าแรกเริ่ม

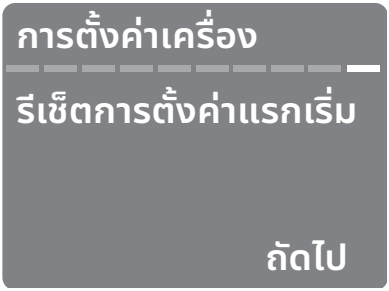

ด้วยการตั้งค่านี้คุณสามารถรีเซ็ตเครื่องใช้ของคุณกลับไปที่การตั้งค่าโรงงาน

1. แตะปุ่มซอฟต์คีย์ด้านขวา "▢"
2. แตะปุ่มซอฟต์คีย์ด้านซ้าย "▢" เพื่อยกเลิก
3. แตะปุ่มซอฟต์คีย์ด้านขวา "▢" เพื่อยืนยันรีเซ็ต

การรีเซ็ตจะใช้เวลาสักครู่

ⓘ การรีเซ็ตเป็นค่าจากโรงงานจะลบตัวเลือกและรายการโปรดที่บันทึกไว้ถาวร

14. ฟังก์ชั่นไอน้ำ

การใช้ไอน้ำช่วยขจัดกลิ่นเหมือนกับการระบายอากาศภายนอก ลดและขจัดรอยยับทำให้เสื้อผ้าสามารถยืดหยุ่นได้มากขึ้น เสื้อผ้าหลังจากการใช้โปรแกรมไอน้ำจะง่ายต่อการรีด **เมื่อสิ้นสุดการทำงานของโปรแกรมไอน้ำ เสื้อผ้าจะออกมาด้วยความชื้นที่เหลืออยู่เหมาะสำหรับการรีด หากไม่รีดเสื้อผ้าทันที ให้แขวนจนกว่าจะแห้งสนิท**

ⓘ ในตอนเริ่มต้น เนื่องจากมีผ้าหลายประเภท ควรใช้ระดับไอน้ำที่ต่ำ เพื่อให้คุณสามารถทำความคุ้นเคยและเลือกใช้ระดับไอน้ำที่เหมาะสมได้ง่ายขึ้น

14.1 วิธีเติมน้ำในภาชนะสำหรับระบบไอน้ำ

ⓘ ใช้น้ำกลั่นหรือน้ำที่ปราศจากแร่ธาตุเท่านั้น เมื่อภาชนะน้ำว่างเปล่า ไฟแสดงสถานะ "" จะติดขึ้นและคุณจะไม่สามารถเริ่มโปรแกรมไอน้ำได้

ⓘ แทงก์น้ำสำหรับระบบไอน้ำจะเติมน้ำโดยอัตโนมัติหากคุณใช้โปรแกรมมาตรฐานและโปรแกรมไอน้ำ หากถังน้ำว่างเปล่า คุณสามารถเติมน้ำได้ด้วยตัวเอง น้ำที่เกิดจากการควบแน่นก็สามารถใช้กับระบบไอน้ำได้เช่นกัน น้ำควบแน่นต้องกรอง เช่น ด้วยการใช้กรองกาแฟ เพื่อล้างเศษผ้าเล็ก ๆ ออก

การเติมน้ำในถังน้ำ:

1. เปิดเครื่องใช้ไฟฟ้า
2. เลือกโปรแกรมที่มีตัวเลือกไอน้ำเพื่อเช็คระดับน้ำ
3. ดึงแทงก์น้ำออกมาและรักษาตำแหน่งให้ขนานกับพื้น

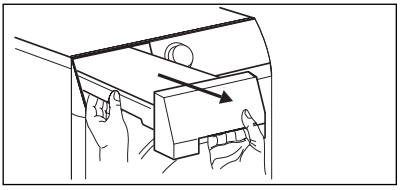

4. เติมน้ำจนถึงระดับ "Max"

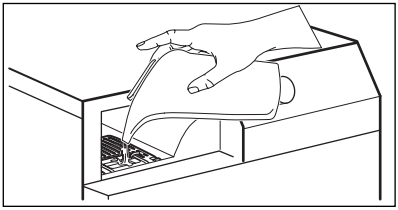

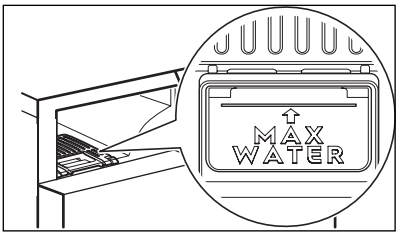

5. ใส่ถังน้ำกลับที่เดิม

ⓘ ไอคอน "" จะแจ้งเตือนคุณเมื่อแทงก์น้ำหมด ในกรณีนี้ ฟังก์ชันไอน้ำไม่สามารถเปิดใช้งานได้

14.2 ระดับไอน้ำ

ตัวเลือกนี้ใช้ในการตั้งค่าระดับไอน้ำที่ต้องการ ขึ้นอยู่กับ: ประเภท, น้ำหนัก และปริมาณของการซัก

ⓘ ตัวเลือกนี้ใช้ได้เฉพาะกับโปรแกรม ผ้าฝ้าย, ผ้าใยสังเคราะห์และไอน้ำลดรอยยับและกลิ่น

- แตะปุ่มซอฟต์คีย์ด้านซ้าย "" เพื่อเลือกระดับ

ทั้งหมดมี 3 ระดับ:

- ■ ■ ■ ต่ำ
- ■ ■ ■ ปานกลาง
- ■ ■ ■ สูงสุด

14.3 ตารางระดับไอน้ำ

โปรแกรม / ชนิดของผ้า	ระดับไอน้ำ	น้ำหนัก
ผ้าฝ้าย	■ ■ ■	0.5 - 1 กก.
	■ ■ ■	1 - 1.5 กก.
	■ ■ ■	1.5 - 2 กก.
ผ้าฝ้าย / เสื้อเชิ้ต	■ ■ ■	1 - 2 items
	■ ■ ■	3 - 4 items
	■ ■ ■	5 items
ผ้าใยสังเคราะห์	■ ■ ■	0.5 - 1 กก.
	■ ■ ■	1 - 1.5 กก.
	■ ■ ■	1.5 - 2 กก.
ผ้าใยสังเคราะห์ / เสื้อเชิ้ต	■ ■ ■	1 - 2 items
	■ ■ ■	3 - 4 items
	■ ■ ■	5 items
Refresh	■ ■ ■	0.5 กก.
	■ ■ ■	1 กก.
	■ ■ ■	2 กก.

15. ก่อนการใช้งาน

15.1 กลิ่นที่ไม่คุ้นเคย

เครื่องใช้ถูกบรรจุอย่างแน่นหนา หลังจากที่คุณแกะบรรจุภัณฑ์ออก อาจมีกลิ่นที่ไม่คุ้นเคย ซึ่งเป็นเรื่องปกติสำหรับผลิตภัณฑ์ใหม่

เครื่องถูกสร้างจากวัสดุหลายประเภทที่รวมกัน อาจทำให้เกิดกลิ่นที่ไม่ปกติได้ เมื่อใช้งานไปสักระยะกลิ่นที่ไม่ปกติจะค่อย ๆ หายไปหลังจากการทำงานหลายรอบ

15.2 เสียงรบกวน

ⓘ เสียงต่าง ๆ อาจได้ยินในช่วงเวลาที่แตกต่างกันระหว่างรอบการทำงานของเครื่องอบผ้า ซึ่งเป็นเสียงที่ปกติในการทำงานของเครื่อง

ขณะคอมเพรสเซอร์ทำงาน

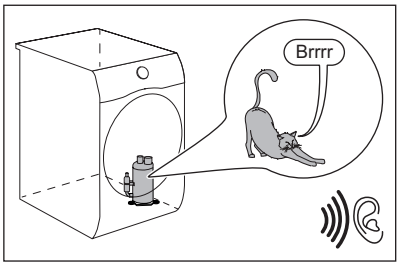

ขณะถังหมุน

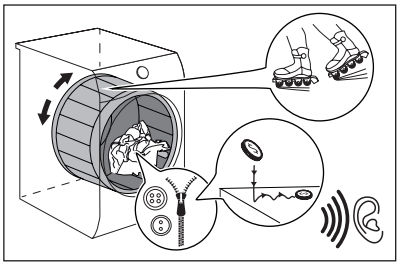

ขณะพัดลมทำงาน

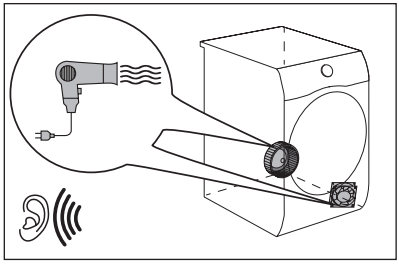

ขณะที่ปั๊มทำการดูดน้ำไปยังแทงก์

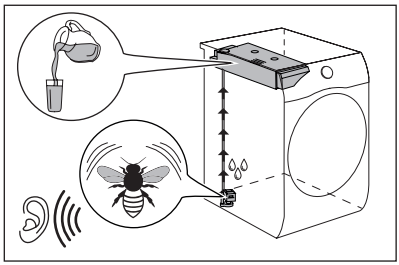

16. การใช้งานทั่วไป

16.1 เริ่มโปรแกรมโดยไม่มีฟังก์ชั่นตั้งเวลาสิ้นสุด

1. เตรียมผ้าและใส่ลงในเครื่องซักผ้า

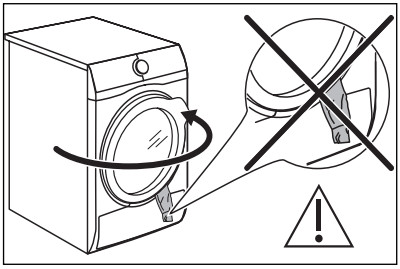

⚠ ข้อควรระวัง!
ตรวจสอบให้แน่ใจว่าเมื่อปิดประตูแล้ว ผ้าไม่ติดอยู่ระหว่างประตูเครื่องซักผ้ากับยางซีล

2. กดปุ่ม "⏻ เปิด/ปิด" เพื่อเปิดเครื่อง

หลังจากไม่กี่วินาที หน้าจอจะแสดงภาพรวมของโปรแกรมพร้อมข้อมูลดังต่อไปนี้:

- **a** บันทึกรายการโปรด
- **b** เวลาการทำงาน
- **c** สถานะ SmartLeaf
- **d** โปรแกรม
- **e** ลดรอยยับ
- **f** ขึ้นอยู่กับโปรแกรม (เช่น. ระดับความแห้ง, ระดับไอน้ำ,)
- **g** น้ำหนัก

3. ตั้งโปรแกรมและตัวเลือกที่ถูกต้องสำหรับประเภทของการอบ

ⓘ เวลาในการอบแห้งจริงจะขึ้นอยู่กับประเภทของการซัก (ปริมาณและองค์ประกอบ) อุณหภูมิในห้อง และความชื้นเริ่มต้นหลังจากขั้นตอนการปั่นของผ้าของคุณ

4. กดปุ่มสัมผัส "▷|| เริ่ม/หยุด"

โปรแกรมเริ่มทำงานและในช่วงไม่กี่นาทีแรกของรอบการทำงาน เครื่องจะประเมินปริมาณผ้าที่โหลดเข้าไปเพื่อปรับระยะเวลาให้เหมาะสมกับปริมาณการอบที่แท้จริงของคุณ

แถบความคืบหน้าบนหน้าจอจะเคลื่อนไปมาเพื่อสื่อสารว่าการประเมินกำลังดำเนินการอยู่ หากมีการคาดการณ์ในโปรแกรมที่เลือก

ⓘ ในกรณีที่น้ำหนักเกินโหลดสูงสุดที่ระบุไว้ ไฟแสดง "น้ำหนักเกิน" จะติดขึ้น ในช่วงเวลา 30 วินาทีนี้ คุณสามารถเปิดประตูและนำเสื้อผ้าที่เกินออกมาได้ หลังจากนำออกแล้ว ให้กดปุ่มสัมผัส "▷|| เริ่ม/หยุด" เพื่อเริ่มโปรแกรมอีกครั้ง หากปริมาณผ้าไม่ลดลง โปรแกรมจะเริ่มทำงานต่อไปในกรณีนี้ จะไม่สามารถรับประกันผลลัพธ์ที่ดีที่สุดได้

หลังจากโปรแกรมทำการประเมินปริมาณผ้าที่โหลดเข้าไปเสร็จแล้ว เครื่องจะเริ่มโปรแกรมที่เลือกและหน้าจอจะแสดงข้อมูลดังต่อไปนี้

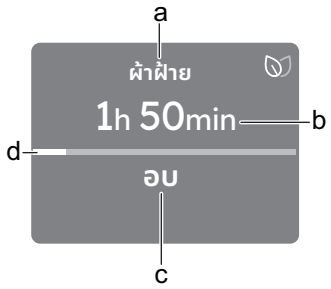

a โปรแกรมการทำงาน

b เวลาคงเหลือ

c ขั้นตอนการทำงาน

d แถบความคืบหน้า

16.2 เริ่มโปรแกรมด้วยฟังก์ชั่นตั้งเวลาจบ

1. ตั้งโปรแกรมและตัวเลือกที่ถูกต้องสำหรับประเภทของการโหลด
2. แตะที่เมนู "☰", หมุนปุ่มหมุนไปที่ "ตั้งเวลาจบ"
3. แตะ"∧" เพิ่มระยะเวลา และแตะ "∨" เพื่อลดเวลาที่ปุ่มซอฟต์คีย์ด้านขวา/ซ้าย "▢"

เมื่อคุณเลือกตัวจับเวลาที่ต้องการแล้ว ให้รอ 5 วินาที หรือแตะที่เมนู "☰" หน้าจอจะกลับไปหน้าหลัก ซึ่งที่ด้านบนของหน้าจอคุณจะสามารถเห็นการนับถอยหลังได้

4. กดปุ่มสัมผัส "▷|| เริ่ม/หยุด"

ถังซักจะเริ่มหมุนเพื่อทำการประเมินระยะเวลา เพื่อหาระยะเวลาสิ้นสุดที่เหมาะสม

5. เครื่องจะเริ่มการนับถอยหลังจนถึงสิ้นสุดโปรแกรม และโปรแกรมจะเริ่มทำงานในเวลาที่เหมาะสมเพื่อให้เสร็จสิ้น

16.3 เปลี่ยนโปรแกรม

1. กดปุ่ม "⏻ เปิด/ปิด"เพื่อปิดเครื่อง
2. กดปุ่ม "⏻ เปิด/ปิด" เพื่อเปิดเครื่อง
3. เลือกโปรแกรม

16.4 โปรแกรมเสร็จสิ้น

เมื่อการทำงานจบลง:

- สัญญาณเสียงเตือนจะทำงานเป็นระยะ
- หน้าจอจะแสดงแถบความก้าวหน้าที่เต็มแล้ว และข้อความจะปรากฏสลับกันว่า: นำผ้าออก

ลดรอยยับ

• สถานะ "▷|| เริ่ม/หยุด" จะทำงาน

เครื่องจะดำเนินการต่อด้วยขั้นตอนป้องกันรอยยับประมาณ 30 นาทีหรือมากกว่านั้น ด้วยการตั้งค่า "เพิ่มเวลาลดรอยยับ" (ดูในหัวข้อ- "เพิ่มเวลาลดรอยยับ").

ขั้นตอนป้องกันรอยยับช่วยลดการยับของผ้า คุณสามารถนำผ้าออกก่อนที่ขั้นตอนป้องกันรอยยับจะเสร็จสมบูรณ์ แต่เราขอแนะนำให้คุณนำผ้าออกเมื่อขั้นตอนนี้ใกล้จะเสร็จสิ้นเพื่อผลลัพธ์ที่ดีกว่า

เมื่อขั้นตอนป้องกันรอยยับเสร็จสมบูรณ์:

• หน้าจอจะแสดงแถบความก้าวหน้าที่เต็มแล้ว และข้อความจะปรากฏสลับกันว่า: นำผ้าออก

ทำความสะอาดไส้กรอง

ระบายน้ำในถัง

• สถานะ "▷|| เริ่ม/หยุด" ดับลง

1. กดปุ่ม "⏻ เปิด/ปิด" เพื่อปิดเครื่อง
2. เปิดประตูเครื่อง
3. นำผ้าออกจากเครื่อง

ⓘ เพื่อรักษาผลลัพธ์การลดรอยยับด้วยไอน้ำ เสื้อผ้าต้องถูกนำออกทีละชิ้นในระหว่างขั้นตอนป้องกันรอยยับ และแขวนทันทีบนไม้แขวนเสื้อเพื่อให้แห้ง (เป็นเวลาอย่างน้อย 5-15 นาที ขึ้นอยู่กับเนื้อผ้าและระดับไอน้ำที่เลือก) ดึงเสื้อผ้าให้เป็นทรง โดยให้ความสนใจกับข้อมือและตะเข็บเป็นพิเศษ

สาเหตุที่เป็นไปได้ของผลลัพธ์การอบแห้งที่ไม่พอใจ:

• การตั้งค่าระดับความแห้งตามค่าเริ่มต้นไม่เพียงพอ ดูในบทที่ตัวเลือก: ระดับความแห้ง - การปรับความชื้นสุดท้ายที่ต้องการ
• อุณหภูมิในห้องต่ำเกินไปหรือสูงเกินไป อุณหภูมิที่เหมาะสมในห้องคือระหว่าง 18°-25°C

ⓘ ควรทำความสะอาดฟิลเตอร์และเทน้ำออกจากแทงก์ทุกครั้งเมื่อโปรแกรมเสร็จสิ้น

16.5 โหมดประหยัดพลังงาน

เพื่อลดการใช้พลังงาน ฟังก์ชันนี้จะทำการปิดเครื่องโดยอัตโนมัติ:

- หลังจาก 5 นาที หากคุณไม่เริ่มโปรแกรม
- หลังจาก 5 นาทีจากการสิ้นสุดโปรแกรมหรือขั้นตอนป้องกันรอยยับ

ⓘ เวลาในการปิดเครื่องจะลดลงเป็น 30 วินาที หากปุ่มหมุนเลือกอยู่ในตำแหน่ง "รีเซ็ต"

ⓘ เมื่อเครื่องเข้าสู่โหมดประหยัดพลังงาน หน้าจอและไอคอนจะปิดลง คุณสามารถเปิดใช้งานอีกครั้งได้โดยการกดปุ่ม "⏻ เปิด/ปิด"

ⓘ หาก WiFi เปิดอยู่และการควบคุมระยะไกลเปิดใช้งาน ไอคอน "⏯" เริ่มต้นระยะไกลจะยังคงปรากฏอยู่แม้ว่าเครื่องจะเข้าสู่โหมดประหยัดพลังงาน

17. คำแนะนำและเคล็ดลับ

17.1 การจัดเตรียมผ้า

เสื้อผ้าที่เพิ่งซักมักจะเป็นก้อนพันกันการอบแห้งผ้าที่เป็นก้อนพันกันนั้นจะมีประสิทธิภาพไม่ดี เพื่อให้อากาศไหลเวียนได้ดีและการอบผ้ามีความสม่ำเสมอแนะนำให้สะบัดผ้าและใส่ในเครื่องอบผ้าทีละชิ้น

เพื่อให้แน่ใจว่ากระบวนการอบแห้งจะดำเนินการอย่างถูกต้อง

- รูดซิป
- รูดปิดตัวยึดคลุมผ้านวม
- อย่าอบแห้งสายเชือกหรือริบบิ้นหลวมอิสระออกมา (เช่น เชือกของผ้ากันเปื้อน) คลายผ้าก่อนเริ่มโปรแกรม
- นำสิ่งของออกจากช่องเก็บหรือกระเป๋า
- หากผ้ามีชั้นบุด้านในจากฝ้าย ให้พลิกกลับด้าน ชั้นผ้าฝ้ายจะต้องหันออกด้านนอก
- ตั้งโปรแกรมการทำงานที่เหมาะสมกับประเภทของผ้าทุกครั้ง
- อย่าใส่ผ้าสีเข้มและสีอ่อนรวมกัน
- ใช้โปรแกรมที่เหมาะสมสำหรับผ้าฝ้าย เสื้อยืด เสื้อถัก เพื่อป้องกันการหดตัว
- อย่าใส่ผ้าเกินเกณฑ์น้ำหนักที่กำหนดในหัวข้อสำหรับโปรแกรมการทำงานหรือจากที่แสดงผลบนหน้าจอ
- อบแห้งเฉพาะผ้าที่สามารถอบแห้งได้เท่านั้น อ่านป้ายผ้า
- อย่าอบแห้งผ้าชิ้นใหญ่และชิ้นเล็กด้วยกัน ผ้าชิ้นเล็กอาจติดค้างอยู่ในผ้าชิ้นใหญ่ และยังคงเปียกอยู่เหมือนเดิม
- สะบัดผ้าและผ้าชิ้นใหญ่ก่อนใส่ลงในเครื่องอบผ้า เพื่อไม่ให้บริเวณที่ผ้าชิ้นขดอยู่ภายในหลังจากการอบแห้ง

ฟังก์ชั่นไอน้ำ

- ห้ามใช้โปรแกรมไอน้ำสำหรับขนสัตว์ที่ไม่เหมาะสำหรับการอบแห้งในเครื่องอบผ้า หนัง ผ้าทอที่มีส่วนประกอบโลหะขนาดใหญ่ ส่วนประกอบไม้หรือพลาสติก ผ้าทอที่มีส่วนประกอบโลหะที่เกิดสนิม เสื้อผ้าที่เคลือบด้วยน้ำมันหรือผ้าฝ้ายที่เคลือบขี้ผึ้ง
- จัดกลุ่มและอบแห้งผ้าที่มีขนาด น้ำหนัก วัสดุ และสีที่คล้ายคลึงกันร่วมกัน
- ห้ามอบแห้งผ้าสีใหม่กับผ้าสีอ่อนร่วมกัน เนื่องจากสีอาจจะตก (ตรวจสอบความคงทนของสีของเนื้อผ้าเมื่อเปียกในพื้นที่ที่ไม่เด่น)
- ห้ามใช้ชุดทำความสะอาดแห้งร่วมกับโปรแกรมไอน้ำ
- ขจัดคราบโดยการซักหรือใช้การกำจัดคราบเฉพาะจุดก่อนการใช้โปรแกรมไอน้ำ
- เพื่อผลลัพธ์การอบแห้งที่ดีที่สุด ให้พลิกสิ่งของที่มีผ้าหลายชั้นกลับด้าน (เช่น สำหรับเสื้อแจ็คเก็ตที่บุด้วยผ้าฝ้าย ชั้นผ้าฝ้ายควรอยู่ด้านนอกสุด)

ป้ายผ้า	คำอธิบาย
	ผ้าเหมาะสำหรับการอบแห้ง
	ผ้าเหมาะสำหรับการอบแห้งที่อุณหภูมิสูงกว่า
	ผ้าเหมาะสำหรับการอบแห้งที่อุณหภูมิต่ำเท่านั้น
	ผ้าไม่เหมาะสำหรับการอบแห้ง

18. การดูแลรักษาและทำความสะอาด

18.1 ตารางการทำความสะอาด

การทำความสะอาดเป็นระยะช่วยยืดอายุการใช้งานของเครื่องของคุณ หากเครื่องไม่ได้ใช้งานเป็นเวลานาน ควรถอดปลั๊กเครื่องออก ตารางการทำความสะอาดเป็นระยะที่แนะนำ:

ทำความสะอาดไส้กรอง	เมื่อมีข้อความแสดงที่หน้าจอ : ทำความสะอาดไส้กรอง
เทน้ำออกจากแทงก์	เมื่อมีข้อความแสดงที่หน้าจอ: ระบายน้ำในถัง
ทำความสะอาดคอนเดนเซอร์	เมื่อมีข้อความแสดงที่หน้าจอ: ล้างคอนเดนเซอร์
ทำความสะอาดไส้กรองระบบไอน้ำ	เมื่อมีข้อความแสดงที่หน้าจอ: ล้างไส้กรองไอน้ำ
ทำความสะอาดถังอบ	ทุก ๆ 2 เดือน
ทำความสะอาดแผงควบคุมและตัวเครื่อง	ทุก ๆ 2 เดือน
ทำความสะอาดช่องระบายอากาศ	ทุก ๆ 2 เดือน

ข้อความถัดไปอธิบายวิธีการทำความสะอาดแต่ละส่วน

18.2 สิ่งของที่ไม่จำเป็น

ⓘ ตรวจสอบให้แน่ใจว่ากระเป๋าเสื้อผ้าไม่มีสิ่งของอยู่ และทุกชิ้นส่วนที่หลวมถูกมัดให้แน่นก่อนเริ่มรอบการอบแห้ง ดูในหัวข้อ "การเตรียมผ้า"

นำสิ่งของที่ไม่เกี่ยวข้องออกจากถังหลังจากรอบการอบแห้ง (เช่น คลิปโลหะ ปุ่ม เหรียญ ฯลฯ)

18.3 ทำความสะอาดไส้กรอง

เมื่อสิ้นสุดแต่ละรอบ ข้อความหรือสัญลักษณ์จะปรากฏขึ้น: ทำความสะอาดไส้กรอง "" และคุณต้องทำความสะอาดไส้กรอง

ⓘ ไส้กรองจะสะสมขนเสื้อผ้าตลอดรอบการอบแห้ง

ⓘ เพื่อให้ได้ผลลัพธ์การอบแห้งที่ดีที่สุด ควรทำความสะอาดไส้กรองอย่างสม่ำเสมอ ไส้กรองที่อุดตันจะทำให้รอบการอบแห้งนานขึ้นและส่งผลให้การใช้พลังงานเพิ่มขึ้น ทำความสะอาดไส้กรองด้วยมือหรือใช้เครื่องดูดฝุ่นหากจำเป็น

⚠ ข้อควรระวัง!

เมื่อทำความสะอาดไส้กรอง ขนเสื้อผ้าควรทิ้งลงถังขยะและไม่ล้างผ่านท่อระบายน้ำเพื่อหลีกเลี่ยงการแพร่กระจายไมโครพลาสติกในระบบน้ำที่ใช้

1. เปิดประตู ดึงไส้กรองขึ้น

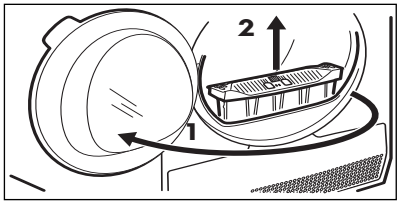

2. กดตัวล็อคเพื่อเปิดไส้กรอง

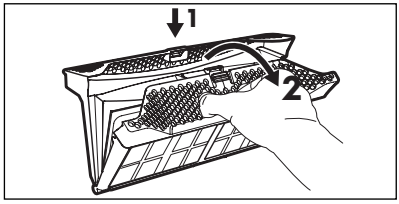

3. เก็บขนเสื้อผ้าด้วยมือจากทั้งสองด้านของไส้กรอง

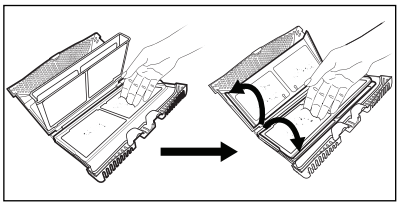

ทิ้งขนเสื้อผ้าในถังขยะ

4. หากจำเป็น ให้ทำความสะอาดไส้กรองด้วยเครื่องดูดฝุ่น
5. หากจำเป็น ให้ทำความสะอาดบริเวณรอบ ๆ รวมไปถึงยางซีล ด้วยเครื่องดูดฝุ่น และใส่ไส้กรองกลับคืนให้เรียบร้อย

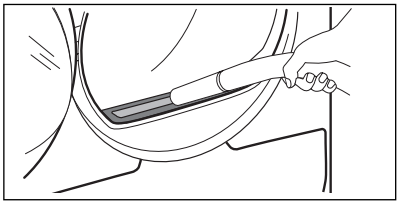

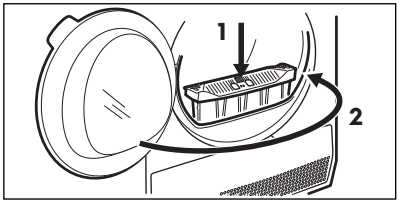

18.4 เติมน้ำใส่แทงก์

เทน้ำที่เกิดจากการควบแน่นออกจากแทงก์ทุกครั้งหลังจากรอบการอบแห้ง

หากแทงก์น้ำควบแน่นเต็ม โปรแกรมจะหยุดทำงานโดยอัตโนมัติ ข้อความหรือสัญลักษณ์จะปรากฏขึ้นบน "⚠" และคุณต้องเทน้ำออกจากถัง

โดยการเติมน้ำใส่แทงก์:

1. ดึงแทงก์น้ำออก โดยถือให้เป็นแนวนอน

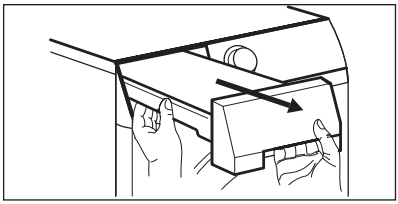

2. ดึงพลาสติกขึ้นและเทน้ำลงในอ่างหรือภาชนะที่เทียบเท่า

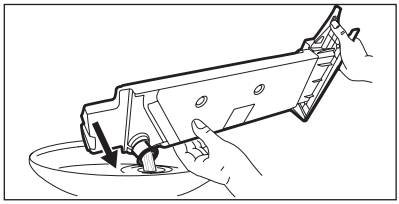

3. ดันพลาสติกลงกลับเข้าที่และใส่แทงก์น้ำกลับตำแหน่งเดิม

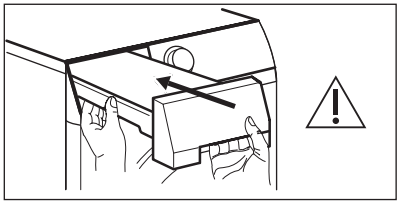

4. กดปุ่มสัมผัส "▷II เริ่ม/หยุด" เพื่อเริ่มการทำงาน

18.5 ทำความสะอาดคอนเดนเซอร์

หากข้อความหรือสัญลักษณ์ว่า: ทำความสะอาดคอนเดนเซอร์ "≡→" ปรากฏขึ้นบนหน้าจอ ให้ตรวจสอบคอนเดนเซอร์และช่องเก็บของ หากสกปรกให้ทำความสะอาด ตรวจสอบอย่างน้อยทุก 6 เดือน

⚠ คำเตือน!

ห้ามสัมผัสพื้นผิวโลหะด้วยมือเปล่า อาจเสี่ยงต่อการบาดเจ็บ สวมถุงมือป้องกัน ทำความสะอาดอย่างระมัดระวังเพื่อหลีกเลี่ยงการทำให้พื้นผิวโลหะเสียหาย

⚠ คำเตือน!

ห้ามใช้เครื่องดูดฝุ่นที่มีหัวแปรงแข็งในการทำความสะอาดขนจากคอนเดนเซอร์ เนื่องจากอาจทำให้ร่องของคอนเดนเซอร์เสียหาย ซึ่งจะส่งผลให้ประสิทธิภาพของเครื่องลดลงและใช้เวลานานในการอบแห้ง

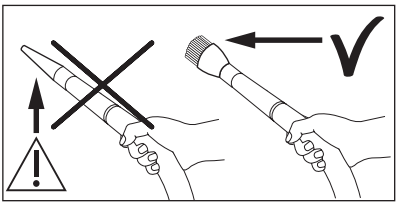

เพื่อตรวจสอบ:

1. เปิดประตู ดึงใส้กรองออก

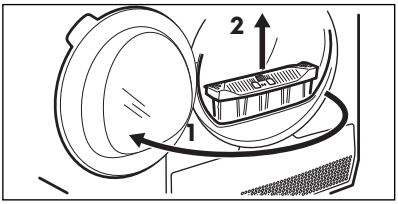

2. เปิดฝาครอบคอนเดนเซอร์

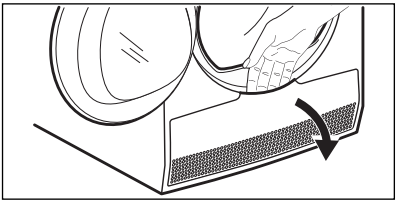

3. หมุนตัวล็อกเพื่อปลดล็อกฝาคอนเดนเซอร์และเปิดฝาคอนเดนเซอร์ออก

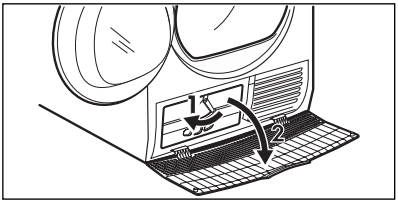

4. หากจำเป็น ให้ขจัดขนออกจากคอนเดนเซอร์และช่องเก็บของ คุณสามารถใช้เครื่องดูดฝุ่นที่มีหัวแปรงแบบนิ่มในการทำความสะอาดได้

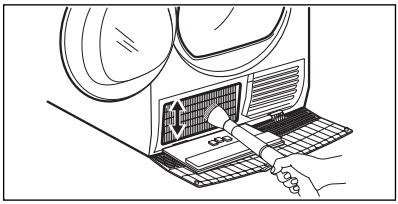

5. ปิดฝาคอนเดนเซอร์

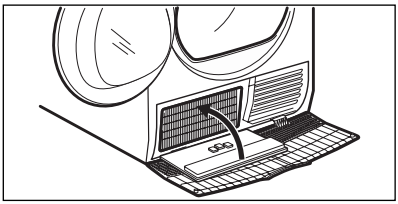

6. หมุนไปที่ตำแหน่งล็อค

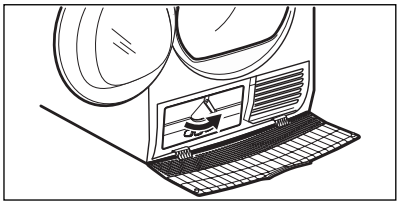

7. ปิดฝาครอบคอนเดนเซอร์ ใส่ใส้กรองกลับคืนและปิดประตู

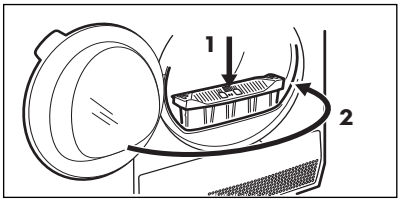

18.6 ทำความสะอาดใส้กรองระบบไอน้ำ

⚠ ข้อควรระวัง!
ห้ามใช้โปรแกรมไอน้ำหากไม่มีใส้กรองระบบไอน้ำ หรือหากใส้กรองเสียหายหรืออุดตัน

หากข้อความหรือสัญลักษณ์ว่า: "ทำความสะอาดไส้กรอง", "" ปรากฏขึ้นบนหน้าจอ คุณต้องทำความสะอาดใส้กรอง
โดยการทำความสะอาดใส้กรอง:

1. ดึงแทงก์น้ำ ในแนวระนาบ

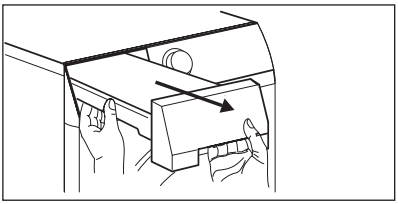

2. ดึงใส้กรอง

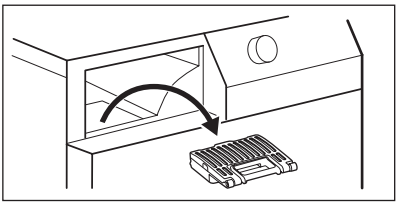

3. เปิดใส้กรอง

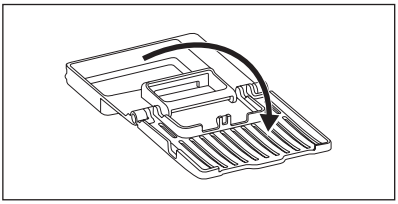

4. ใช้มือในการทำความสะอาดใส้กรอง

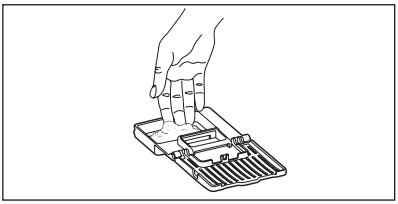

5. ใส่ใส้กรองกลับเข้าไปในช่องของใส้กรอง
6. ใส่แทงก์น้ำกลับคืน

18.7 วิธีการระบายน้ำจากถังระบบไอน้ำ

ⓘ คุณภาพของน้ำในแทงก์อาจเสื่อมลง หากคุณไม่ใช้เครื่องเป็นระยะเวลานาน ควรระบายน้ำออกจากแทงก์

โดยการระบายน้ำ:

1. เปิดประตู
2. เปิดฝาครอบคอนเดนเซอร์

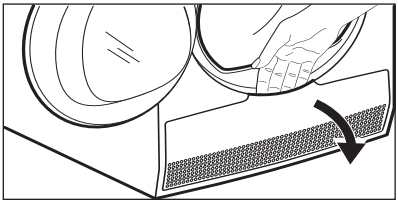

3. ปลดล็อคฝาคอนเดนเซอร์ และเปิดฝาออก

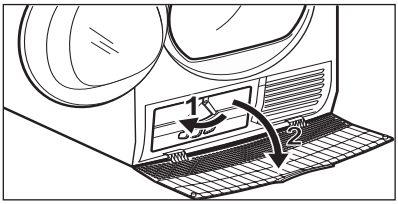

4. หยิบท่อที่วางอยู่ด้านซ้ายของช่องเก็บออก เปิดฝาปิดเพื่อระบายน้ำ

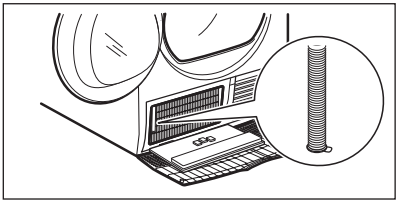

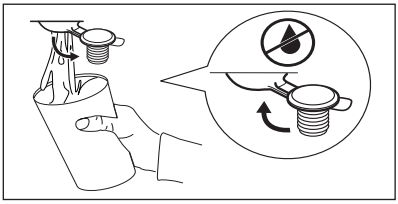

5. ปิดฝาท่อระบายน้ำ
6. ดันท่อกลับเข้าที่
7. ปิดฝาคอนเดนเซอร์
8. ล็อคฝาคอนเดนเซอร์ และปิดฝาครอบกลับคืน

18.8 การทำความสะอาดถัง

⚠ คำเตือน!
ถอดปลั๊กเครื่องออกก่อนทำความสะอาด

ใช้น้ำฟองสบู่แบบอ่อนในการทำความสะอาดพื้นผิวภายในของถัง เช็ดพื้นผิวที่ทำความสะอาดแล้วให้แห้งด้วยผ้านุ่ม

⚠ ข้อควรระวัง!
ห้ามใช้วัสดุขัดถูหรือขนเหล็กในการทำความสะอาดถัง

18.9 ทำความสะอาดแผงควบคุมและช่องเก็บแทงก์น้ำ

ใช้น้ำฟองสบู่แบบอ่อนในการทำความสะอาดแผงควบคุมและช่องเก็บแทงก์น้ำ ใช้ผ้าที่ชุ่มน้ำทำความสะอาด จากนั้นเช็ดพื้นผิวที่ทำความสะอาดแล้วให้แห้งด้วยผ้านุ่ม

⚠ ข้อควรระวัง!
ห้ามใช้สารทำความสะอาดเฟอร์นิเจอร์หรือสารทำความสะอาดที่อาจทำให้เกิดการกัดกร่อน

18.10 ทำความสะอาดช่องระบายอากาศ

ใช้เครื่องดูดฝุ่นในการขจัดขนออกจากช่องระบายอากาศ

19. การแก้ไขปัญหา

⚠ คำเตือน!
โปรดศึกษาบทความด้านความปลอดภัย

19.1 รหัสแจ้งเตือน

เครื่องไม่เริ่มทำงานหรือหยุดระหว่างการทำงาน ก่อนอื่นให้พยายามหาวิธีแก้ไขปัญหา (ดูในตาราง) หากปัญหายังคงอยู่ ให้ติดต่อศูนย์บริการที่ได้รับการรับรอง

⚠ คำเตือน!
ปิดเครื่องก่อนดำเนินการตรวจสอบใด ๆ

ในกรณีที่เกิดปัญหาใหญ่ สัญญาณเสียงจะทำงาน และปุ่มสัมผัส "▷II เริ่ม/หยุด" อาจกระพริบต่อเนื่อง:

ความผิดปกติ	สาเหตุที่เป็นไปได้	วิธีแก้ไข
• โปรแกรมไม่เสร็จสมบูรณ์	• มอเตอร์ของเครื่องทำงานหนักเกินไป ใส่ผ้ามากเกินไปหรือมีผ้าติดอยู่ในถังอบ	• โปรแกรมไม่เสร็จสมบูรณ์ นำผ้าออกจากถังอบ ตั้งโปรแกรมใหม่แล้วเริ่มการอบผ้าใหม่
• เครื่องไม่เริ่มต้นทำงาน	• แหล่งจ่ายไฟหลักไม่เสถียร	• รอจนกว่าแหล่งจ่ายไฟหลักเสถียร จากนั้นกด "เริ่ม" ถ้าเครื่องหยุดรอบการทำงานกลางคันโดนไม่แจ้งความผิดปกติใดๆ ให้กดเริ่มรอบการทำงานใหม่ ถ้ามีคำเตือนแสดงขึ้น ให้ตรวจสอบสภาพของสายไฟ/เต้ารับหรือแหล่งจ่ายไฟหลัก
• เครื่องไม่เริ่มโปรแกรมอบผ้า	• ถังอบอาจว่างเปล่า หรือระบบทำความร้อนไม่สมบูรณ์	• ใส่กล่องเก็บน้ำเข้าไปในระบบทำความร้อน จากนั้นปิดเครื่อง และเปิดเครื่องอีกครั้ง ถ้ารหัสข้อผิดพลาดนี้ยังแสดงขึ้นมาอีก ติดต่อศูนย์บริการอย่างเป็นทางการ
• เครื่องไม่เริ่มต้นทำงาน ***รุ่นที่เชื่อมต่อ**	• อุปกรณ์ภายในชำรุด ไม่มีการสื่อสารระหว่างส่วนประกอบอิเล็กทรอนิกส์ของเครื่อง	• โปรแกรมทำงานไม่เสร็จอย่างถูกต้อง หรือเครื่องหยุดทำงานเร็วเกินไป ปิดเครื่องแล้วเปิดใหม่ ถ้ารหัสข้อผิดพลาดนี้ยังแสดงขึ้นมาอีก ติดต่อศูนย์บริการอย่างเป็นทางการ

หากหน้าจอแสดงรหัสข้อผิดพลาดอื่น ๆ ให้ปิดและเปิดเครื่องอีกครั้ง หากปัญหายังคงอยู่ให้ติดต่อศูนย์บริการที่ได้รับการรับรอง หากมีปัญหาอื่น ๆ กับเครื่องอบผ้า ให้ตรวจสอบตาราง(19.2)เพื่อหาวิธีแก้ไขที่เป็นไปได้.

ปัญหา	วิธีการแก้ปัญหาที่เป็นไปได้
คุณไม่สามารถเปิดการใช้งานเครื่องได้	ตรวจสอบให้แน่ใจว่าเสียบปลั๊กไฟเข้ากับเต้ารับแล้ว
	ตรวจดูฟิวส์ในกล่องฟิวส์ (ของบ้าน)
โปรแกรมไม่เริ่มทำงาน	กดปุ่ม "▷|| เริ่ม/หยุด"
	ตรวจสอบให้แน่ใจว่าได้ปิดฝาเครื่องแล้ว
โปรแกรมไอน้ำไม่เริ่มทำงาน สัญลักษณ์แทงก์น้ำไอน้ำจะติดขึ้น.	เติมน้ำลงในแทงก์
	ทำความสะอาดใส้กรองระบบไอน้ำ
หลังจากโปรแกรมไอน้ำเสร็จสิ้น เสื้อผ้ายังไม่เรียบพอ	ตรวจสอบองค์ประกอบของผ้า
	ตั้งค่าระดับไอน้ำให้สูงขึ้น
	ใส่ผ้าลงในเครื่องน้อยลง หรือใช้เสื้อผ้าที่มีลักษณะเทียบเท่ากัน
	นำเสื้อผ้าออกจากเครื่องทีละชิ้นอย่างรวดเร็วโดยเร็วที่สุดหลังจากเริ่มต้นขั้นตอนการป้องกันการยับ
	แขวนเสื้อผ้าบนไม้แขวนเสื้อและจัดเสื้อผ้าให้เข้ารูป
	รีดเสื้อผ้าที่มีหลายชั้นให้เข้าทรงหลังจากนำออกจากเครื่อง
หลังจากโปรแกรมไอน้ำ มีจุดเปียกบนเสื้อผ้า	เลือกระดับไอน้ำไม่ถูกต้อง ตั้งระดับไอน้ำที่เหมาะสม (ดูคู่มือไอน้ำสำหรับข้อมูลอ้างอิง)
	ทำความสะอาดใส้กรอง (ดูในหัวข้อ "การดูแลรักษาและทำความสะอาด") ก่อนการใช้งานโปรแกรมไอน้ำ
แม้หลังจากการอบแห้งหลายรอบ แทงก์น้ำไอน้ำก็ยังว่างเปล่า	ทำความสะอาดใส้กรองระบบไอน้ำ
ประตูเครื่องปิดไม่ลง	ตรวจสอบให้แน่ใจว่าได้ติดตั้งตัวกรองอย่างถูกต้อง
	ตรวจสอบว่าผ้าไม่ติดค้างระหว่างฝาเครื่องและซีลยาง
เครื่องหยุดทำงานระหว่างการทำงาน	ภาชนะบรรจุน้ำจะต้องว่างเปล่า กดปุ่มสัมผัส "▷|| เริ่ม/หยุด" เพื่อเริ่มโปรแกรมการทำงานอีกครั้ง
	น้ำหนักน้อยเกินไป ให้เพิ่มน้ำหนักผ้าหรือใช้โปรแกรม "เวลาอบ"
รอบการทำงานนานเกินไปหรือผลการอบแห้งไม่น่าพอใจ [1]	ตรวจสอบว่าน้ำหนักของผ้าเหมาะสมกับระยะเวลาการทำงานของโปรแกรม
	ตรวจสอบให้แน่ใจว่าตัวกรองสะอาด
	ผ้าเปียกเกินไป ปั่นผ้าในเครื่องซักผ้าอีกครั้ง
	อุณหภูมิห้องจะต้องสูงกว่า +5°C และต่ำกว่า +35°C อุณหภูมิห้องที่เหมาะสมคือ 18°C ถึง 25°C
	ตั้งโปรแกรม "เวลาอบ (Time Dry)" หรือ "แห้งพิเศษ" [2]

ปัญหา	วิธีการแก้ปัญหาที่เป็นไปได้
เครื่องอบผ้าไม่เชื่อมต่อ	ตรวจสอบว่าอุปกรณ์สมาร์ทของคุณเชื่อมต่อกับเครือข่ายไร้สายหรือไม่ ตรวจสอบเครือข่ายภายในบ้านและเราเตอร์ของคุณ รีสตาร์ทเราเตอร์ ติดต่อผู้ให้บริการเครือข่ายไร้สายของคุณหากมีปัญหาเกี่ยวกับเครือข่ายไร้สาย
	เครื่องอบผ้าและ อุปกรณ์สมาร์ทของคุณไม่เชื่อมต่อกัน
แอปไม่สามารถเชื่อมต่อกับเครื่องอบผ้าได้บ่อยครั้ง	ลองย้ายเราเตอร์ภายในบ้านให้ใกล้กับเครื่องอบผ้าสุดเท่าที่จะทำได้ หรือพิจารณาซื้ออุปกรณ์ขยายสัญญาณไร้สาย
	ปิดไมโครเวฟ หลีกเลี่ยงการใช้ไมโครเวฟและการควบคุมระยะไกลของเครื่องอบผ้าในเวลาเดียวกัน เพราะคลื่นไมโครเวฟจะรบกวนสัญญาณ WiFi

1) หลังเวลาผ่านไปสูงสุด 5 ชั่วโมง โปรแกรมจะหยุดการทำงานอัตโนมัติ
2) บางส่วนอาจยังชื้นอยู่หากเป็นการอบแห้งผ้าชิ้นใหญ่ (เช่น ผ้าปูเตียง)

20. ข้อมูลเพื่อการรักษาสิ่งแวดล้อม

20.1 วัสดุบรรจุภัณฑ์

วัสดุที่มีเครื่องหมาย สามารถนำกลับมาใช้ได้

>PE< = โพลีเอทิลีน

>PS< = โพลีสไตรีน

>PP< = โพลีไพรพิลีน

สัญลักษณ์นี้หมายความว่า วัสดุนี้สามารถนำมารีไซเคิลได้ โดยไม่ต้องทิ้งในภาชนะที่เหมาะสม

20.2 การจัดการเครื่องเก่า

โปรดทิ้งเครื่องซักผ้าเครื่องเก่าของท่าน ในสถานที่ ที่ได้รับอนุญาต เพื่อช่วยรักษาความเป็นระเบียบในบ้านเมือง!

สัญลักษณ์ ที่ตัวผลิตภัณฑ์ หรือบรรจุภัณฑ์ใช้เพื่อแจ้งว่าห้ามทิ้งแบบขยะในครัวเรือนตามปกติ โดยให้นำไปจำหน่ายทิ้ง ณ จุดจัดเก็บที่เหมาะสมเพื่อทำการรีไซเคิลส่วนประกอบทางไฟฟ้าและอุปกรณ์อิเล็กทรอนิกส์

การทิ้งผลิตภัณฑ์นี้อย่างถูกต้อง จะช่วยลดผลกระทบที่มีต่อสภาพแวดล้อมและสุขอนามัย

หากท่านทิ้งผลิตภัณฑ์นี้อย่างไม่ถูกต้องเหมาะสม จะก่อให้เกิดผลเสียต่อสภาพแวดล้อมและสุขอนามัย

สอบถามข้อมูลเพิ่มเติมเกี่ยวกับการรีไซเคิลผลิตภัณฑ์ได้จากหน่วยงานในพื้นที่ ผู้ให้บริการจัดเก็บขยะประจำพื้นที่ของคุณ หรือร้านที่จำหน่ายผลิตภัณฑ์นี้

G0047012-001-A28646712