



EPWE2MEUOG

เครื่องกรองน้ำดื่ม

คู่มือการใช้งาน

คู่มือการใช้งาน

ขอแสดงความยินดี! คุณคือลูกค้าคนสำคัญ ขอบคุณที่เลือกซื้อผลิตภัณฑ์ของอิเล็กทรอนิกส์ที่มีคุณภาพระดับโลก การออกแบบที่ทันสมัยและโดดเด่น รวมถึงเทคโนโลยีขั้นสูงสุด ภายในคู่มือฉบับนี้ คุณจะได้ทราบข้อมูลที่สำคัญทั้งหมดสำหรับการใช้งานเครื่องกรองน้ำดื่มอย่างปลอดภัยและถูกต้อง

กรุณาอ่านคำแนะนำทั้งหมดอย่างละเอียดก่อนใช้งานผลิตภัณฑ์นี้ และเก็บรักษาคู่มือฉบับนี้ไว้สำหรับการอ้างอิงในอนาคต

สิ่งสำคัญ

กรุณาเก็บใบกำกับภาษีซื้อของผลิตภัณฑ์นี้ไว้ด้วยเนื่องจากเป็นเอกสารที่จำเป็นต้องใช้เมื่อขอรับบริการรับประกันสินค้าจากศูนย์บริการที่ได้รับอนุญาตจากอิเล็กทรอนิกส์คุณยังบริการที่ได้รับอนุญาตจากอิเล็กทรอนิกส์จะใช้ฉลากแสดงข้อมูลเพื่อดูข้อมูลต่างๆ ในกรณีที่ต้องซ่อมแซมเครื่องกรองน้ำดื่มของคุณ อย่าลอกฉลากแสดงข้อมูลนี้ออกจากตำแหน่งเดิม

ข้อแนะนำด้านสิ่งแวดล้อม



วัสดุที่ใช้เป็นบรรจุภัณฑ์ที่สามารถนำกลับมาใช้ใหม่ได้ กรุณาคัดแยกบรรจุภัณฑ์ที่เป็นพลาสติก, กระดาษ และกระดาษกล่อง และส่งไปยังบริษัทรีไซเคิล วัสดุเหล่านี้ไม่ควรทิ้งรวมกับขยะ

ในครัวเรือน และควรทิ้งผ่านระบบที่ใช้รีไซเคิลผลิตภัณฑ์ไฟฟ้าและอิเล็กทรอนิกส์ตามข้อบังคับในพื้นที่

สารบัญ

1. ความปลอดภัย	2
2. คำอธิบายผลิตภัณฑ์	3
3. คุณสมบัติเด่น	4
4. วิธีการใช้งาน	4
5. การติดตั้ง	5
6. การทำความสะอาดและการบำรุงรักษา	7
7. การเปลี่ยนไส้กรอง	8
8. การทำความสะอาดถังเก็บน้ำ	8
9. การแก้ไขปัญหา	10
10. ข้อกำหนดทางเทคนิค	11

1. ความปลอดภัย

โปรดอ่านข้อแนะนำทั้งหมดก่อนใช้งานเครื่องนี้ และเก็บรักษาคู่มือการใช้งานนี้ไว้เพื่อใช้อ้างอิงในอนาคต

⚠ ข้อควรระวัง

คำแนะนำเหล่านี้เป็นคำแนะนำเพื่อความปลอดภัยของคุณ คุณต้องอ่านคู่มือการใช้งานฉบับนี้อย่างละเอียดถี่ถ้วนก่อนติดตั้งหรือใช้งานผลิตภัณฑ์นี้

อุปกรณ์นี้ไม่ได้มีไว้สำหรับการใช้งานโดยบุคคล (รวมถึงเด็ก) ที่มีสมรรถภาพทางกายภาพ ทางประสาทสัมผัส หรือความสามารถทางจิตใจไม่สมบูรณ์ หรือขาดประสบการณ์และความรู้ ยกเว้นจะได้รับการดูแลหรือคำแนะนำเกี่ยวกับการใช้งานเครื่องจากผู้รับผิดชอบความปลอดภัยบุคคลเหล่านี้

ห้ามวางเทียนไขหรือธูปที่จุดแล้วไว้บนเครื่องกรองน้ำดื่มโดยเด็ดขาด เพราะอาจเป็นสาเหตุของไฟไหม้

ดูแลเด็กเล็ก

หลังจากนำเครื่องกรองน้ำดื่มออกจากกล่องบรรจุภัณฑ์แล้ว ให้เก็บวัสดุที่ใช้เป็นบรรจุภัณฑ์ให้พ้นมือเด็กเพื่อป้องกันอุบัติเหตุ

อย่าปล่อยให้เด็กนำเครื่องกรองน้ำดื่มมาเล่นเป็นของเล่น แม้จะปิดเครื่องอยู่ก็ตาม

เด็กเล็กควรได้รับการดูแลเพื่อป้องกันไม่ให้เล่นกับผลิตภัณฑ์

ผู้ใช้/ ผู้ติดตั้งเครื่อง

ก่อนทำความสะอาดหรือบำรุงรักษาเครื่องกรองน้ำดื่ม ให้ถอดปลั๊กออกก่อนเสมอ

ห้ามถอดปลั๊กของเครื่องกรองน้ำดื่มโดยการดึงที่สายไฟ เมื่อถอดปลั๊กไฟ ให้จับที่ตัวปลั๊กเสมอและห้ามดึงที่สายไฟ ระวังอย่าให้สายไฟถูกหนีบ, บิด หรือรัด

ถ้าสายไฟมีร่องรอยชำรุดเสียหาย กรุณาติดต่อขอเปลี่ยนใหม่ได้ที่ศูนย์บริการที่ได้รับอนุญาตจากอิเล็กทรอนิกส์เพื่อหลีกเลี่ยงอันตราย

อย่าจับสายไฟขณะมือเปียกเพื่อป้องกันไฟฟ้าช็อต

ห้ามพยายามซ่อมแซมเครื่องกรองน้ำดื่มด้วยตนเอง กรุณาปรึกษาศูนย์บริการอิเล็กทรอนิกส์ทุกครั้ง และใช้ชิ้นส่วนแท้เสมอในการเปลี่ยน ถ้ามีชิ้นส่วนใดเสียหาย คุณสามารถซื้อชิ้นส่วนแท้และอุปกรณ์เสริมสำหรับเปลี่ยนใหม่ได้ที่ศูนย์บริการที่ได้รับอนุญาตจากอิเล็กทรอนิกส์

หมั่นตรวจสอบการต่อท่อน้ำเป็นประจำ ในการใช้งานปกติ แนะนำให้เปลี่ยนท่อน้ำปีละหนึ่งครั้ง

ควรใช้ก่อบูดใหม่ที่มีไฟพร้อมกับเครื่อง ไม่ควรนำก่อบูดเก่ากลับมาใช้ซ้ำ

คำเตือน: เพื่อหลีกเลี่ยงอันตรายจากการติดตั้งเครื่อง ไม่มั่นคง ต้องติดตั้งเครื่องตามข้อแนะนำต่อไปนี้

ผลิตภัณฑ์นี้มีวัตถุประสงค์เพื่อนำไปใช้ในครัวเรือนและ
การใช้งานที่มีลักษณะใกล้เคียงกัน เช่น



- พื้นที่ห้องครัวสำหรับพนักงานในร้านค้า สำนักงาน และพื้นที่ทำงานอื่นๆ
- บ้านไร่และใช้งานโดยแขกผู้เข้าพักในโรงแรม ที่พัก ข้างทาง และสถานที่พักอาศัยอื่นๆ
- ที่พักที่มีก๊อมนและอาหารเข้า
- งานจัดเลี้ยงและการใช้งานที่ไม่ใช่การค้าปลีก

ห้ามเก็บวัตถุที่ระเบิดได้ เช่น กระป๋องสเปรย์ที่มีส่วนผสมของเชื้อเพลิงไว้ภายในเครื่อง
คำเตือน: เมื่อจัดวางตำแหน่งผลิตภัณฑ์นี้ ตรวจสอบ
ให้แน่ใจว่าสายไฟไม่ถูกหนีบหรือชำรุดเสียหาย
คำเตือน: อย่าวางรางปลั๊กไฟหรืออุปกรณ์จ่ายไฟ
เคลื่อนที่ไว้ด้านหลังเครื่อง


⚠ ขีดควรระวัง

ผลิตภัณฑ์นี้ออกแบบมาเพื่อกรองและทำความเย็น
น้ำดื่มตามที่กฎหมายกำหนดไว้ในปัจจุบัน อย่าใช้
ผลิตภัณฑ์นี้เพื่อทำความเย็นเครื่องดื่มประเภทอื่นๆ
หากละเลยไม่ปฏิบัติตามอาจทำให้ผลิตภัณฑ์เสียหาย
และการรับประกันผลิตภัณฑ์ก็เป็นโมฆะได้ เครื่อง
กรองน้ำดื่มนี้ออกแบบมาสำหรับใช้งานภายใน
ครัวเรือนเท่านั้น

2. คำอธิบายผลิตภัณฑ์

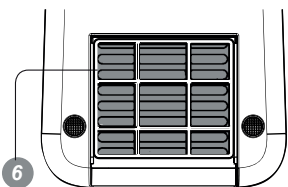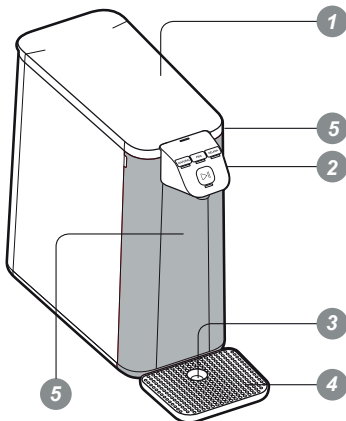


มุมมองใต้เครื่อง

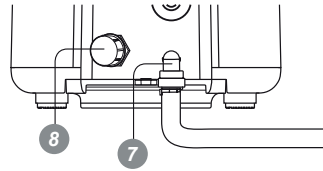

- 1 ฝาไส้กรองและถังเก็บน้ำ
- 2 แผงควบคุม
- 3 ตะแกรงถาดรองน้ำ (ถอดได้)
- 4 ถาดรองน้ำ (ถอดได้)
- 5 แผงด้านหน้าแบบถอดออกได้
- 6 แผ่นกรองอากาศ
- 7 ทางน้ำเข้า
- 8 บ่อนระบายน้ำ

อุปกรณ์เสริม

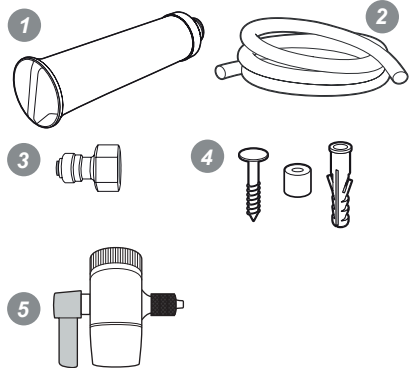

- 1 ไส้กรองแท่งของอีเลคโตรลิกซ์
- 2 ท่อ 1/4"
- 3 ข้อต่อ 3/4"
- 4 สกรูและฟุก (อย่างละ 2 ตัว)
- 5 ข้อต่อ

3. คุณสมบัติเด่น

เครื่องกรองน้ำดื่มมีเสียงการทำงานที่เป็นเอกลักษณ์ ซึ่งเกิดจากพัดลมที่ทำงานอยู่ตลอดเวลา เมื่อเครื่องกรองน้ำดื่มตรวจจับได้ว่าน้ำเย็นแล้ว รอบหมุนของพัดลมจะลดลง แต่ไม่ควรหยุดทำงาน

ฝุ่นที่เกาะสะสมบนตัวผลิตภัณฑ์ก็อาจทำให้เสียงการทำงานดังขึ้น ดังนั้น ขอแนะนำให้ทำความสะอาดแผ่นกรองอากาศตามวิธีการที่อธิบายไว้ในหน้า 9

ผลิตภัณฑ์นี้มีตัวควบคุมแรงดันน้ำซึ่งมีเสียงการทำงานที่เป็นเอกลักษณ์

ระบบกรอง

ตัวไส้กรองแท้ของอีเลคโตรลิกซ์สำหรับเครื่องกรองน้ำดื่มประกอบด้วยวัสดุสองชั้นที่ทำงานหน้าที่กรองน้ำ ตัวไส้กรองมีอายุการใช้งาน 3000 ลิตร หรือ 6 เดือน อย่างไรก็ตามหนึ่งถึงก่อน ภายในช่วงเวลานี้ ตัวไส้กรองแท้ของอีเลคโตรลิกซ์สามารถกรองน้ำได้อย่างมีประสิทธิภาพด้วยการขจัดสิ่งสกปรกและคลอรีนส่วนเกินในน้ำดื่มออก รวมถึงยับยั้งการเจริญเติบโตของจุลินทรีย์ อัตราการไหลของน้ำจะค่อยๆ ลดลงเมื่อไส้กรองเริ่มเต็ม หรือ “หมดอายุ” เมื่อผ่านช่วงเวลานี้ไปแล้ว โฟบบนแผงควบคุมจะสว่างขึ้นเพื่อแจ้งให้ทราบว่าจำเป็นต้องเปลี่ยนไส้กรอง

ขั้นตอนที่หนึ่ง – แผ่นกรอง PP

ขจัดตะกอน เช่น โคลน ทราย สนิม สาหร่าย เชื้อรา รวมถึงสารแขวนลอยของเหล็กและโลหะประเภทอื่นๆ เกสือ เป็นต้น

ขั้นตอนที่สอง – ถ่านกัมมันต์ที่มี Silver Ion


ทำหน้าที่ดูดซับและกำจัดสี กลิ่น คลอรีน คราบไขมัน รวมทั้งก๊าซที่ละลายในน้ำดื่มในปริมาณมาก รวมถึงยับยั้งการเจริญเติบโตของจุลินทรีย์

ระบบทำความเย็น

เครื่องกรองน้ำดื่มรุ่นนี้มีระบบทำความเย็นรวมอยู่ด้วย ซึ่งอุณหภูมิของน้ำที่ทำความเย็นแล้วจะเปลี่ยนไปตามอุณหภูมิห้อง เครื่องอาจใช้เวลาในการทำความเย็นน้ำสูงสุดไม่เกิน 2 ชั่วโมง ทั้งนี้ขึ้นอยู่กับอุณหภูมิภายนอก และปริมาณน้ำที่ใช้ไป ความจุของถังเก็บน้ำเย็นอยู่ที่ประมาณ 800 มล. ถ้าใช้น้ำในถังเก็บน้ำเย็นหมดแล้ว เครื่องอาจใช้เวลาสักครู่เพื่อเติมน้ำและทำน้ำเย็นอีกครั้ง

4. วิธีการใช้งาน

แผงควบคุม

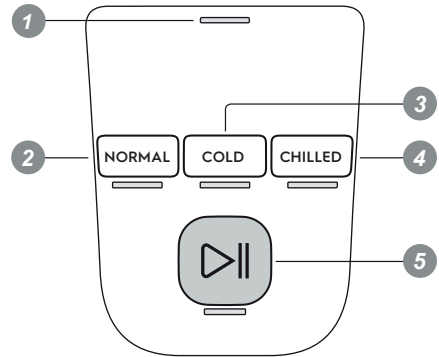

- 1 ไฟแสดงสถานะเตือนให้เปลี่ยนไส้กรองแท้ของอีเลคโตรลิกซ์
- 2 ปุ่ม NORMAL สำหรับเลือกน้ำอุณหภูมิปกติ
- 3 ปุ่ม COLD สำหรับเลือกน้ำเย็น
- 4 ปุ่ม CHILLED สำหรับเลือกน้ำเย็นจัด
- 5 ปุ่มเริ่ม/หยุดการจ่ายน้ำ

การใช้งาน

เมื่อต่อเครื่องเข้ากับแหล่งจ่ายไฟ ไฟ LED ทุกดวงบนแผงควบคุมจะติดสว่างขึ้นนาน 3 วินาที แล้วดับลง การกดน้ำ:

1. เลือกปุ่มอุณหภูมิน้ำที่ต้องการ
2. จากนั้น กดปุ่ม หนึ่งครั้งเพื่อจ่ายน้ำ เมื่อต้องการหยุดจ่ายน้ำ ให้กดปุ่มใดปุ่มหนึ่งบนแผงควบคุม หรืออีกวิธีหนึ่ง กดปุ่ม ค้างไว้จนกว่าจะได้ปริมาณน้ำที่ต้องการ จากนั้นปล่อยปุ่มเพื่อหยุดจ่ายน้ำ เครื่องกรองน้ำดื่มมีคุณสมบัติความปลอดภัย ซึ่งจะหยุดจ่ายน้ำโดยอัตโนมัติหลังจากเวลาผ่านไป 1 นาที

โหมด Sleep: หากเวลาผ่านไป 8 วินาที โดยไม่มีการใช้งานใดๆ แผงควบคุมจะเข้าสู่โหมด Sleep ลดความสว่างของอุณหภูมิน้ำที่ใช้งานครั้งสุดท้าย

หลังจากใช้งาน ไฟ LED ของอุณหภูมิน้ำที่เลือกไว้จะยังคงสว่างค้างๆ เพื่อแสดงโหมดอุณหภูมิน้ำที่ใช้งานครั้งสุดท้าย

โหมดประหยัดพลังงาน: ถ้าคุณต้องการปิดไฟบนแผงควบคุม ให้กดปุ่ม NORMAL และปุ่ม CHILLED พร้อมกันนาน 2 วินาที ในโหมดนี้ไฟบนแผงควบคุมจะดับลงและเครื่องจะอยู่ในโหมด Sleep

5. การติดตั้ง

อีเลคโตรลักซ์ได้จัดเตรียมคู่มือของศูนย์บริการมาตรฐานสูงเพื่อช่วยอำนวยความสะดวกแก่คุณในการติดตั้งเครื่องกรองน้ำดื่ม ถ้าคุณสนใจ กรุณาติดต่อศูนย์บริการที่ได้รับอนุญาตจากอีเลคโตรลักซ์ได้ที่เว็บไซต์ www.electrolux.co.th โดยคุณจำเป็นต้องเสียค่าใช้จ่ายสำหรับบริการติดตั้งนี้ ซึ่งมีให้บริการในศูนย์บริการที่ได้รับอนุญาตจากอีเลคโตรลักซ์ที่เลือก ณ เวลาที่ขอรับบริการนี้

การติดตั้งที่ดำเนินการโดยศูนย์บริการที่ได้รับอนุญาตจากอีเลคโตรลักซ์นี้ไม่รวมบริการเตรียมพื้นที่หรือวัสดุต่างๆ สำหรับการติดตั้ง (เช่น งานก่อสร้าง งานเดินสายไฟ เต้าจ่ายไฟ แบรกเกอร์ตัดไฟ งานเดินสายดิน งานเดินท่อน้ำ เป็นต้น) เนื่องจากบริการและวัสดุเหล่านี้เป็นความรับผิดชอบของลูกค้า

วางเครื่องกรองน้ำดื่มบนพื้นราบและเพื่อระยะห่างขั้นต่ำตามที่แสดงในตารางด้านล่างนี้:

การจัดวางตำแหน่ง	ระยะห่างอย่างน้อย
ด้านซ้าย	5 ซม.
ด้านขวา	5 ซม.
ด้านหลัง	10 ซม.
ด้านบน	22 ซม.

ข้อควรระวัง

ก่อนการติดตั้ง โปรดอ่านข้อมูลด้านล่างนี้
อย่างละเอียดครบถ้วน เพราะข้อมูลเหล่านี้จะช่วยให้คุณดำเนินการติดตั้งเครื่องกรองน้ำดื่มได้อย่างปลอดภัยและถูกวิธี โปรดเก็บรักษาคู่มือการใช้งานนี้ไว้เพื่อใช้อ้างอิงในอนาคต

ตำแหน่งที่จะติดตั้ง

อย่าติดตั้งเครื่องกรองน้ำดื่มในที่ที่โดนแสงแดดโดยตรงหรืออยู่ใกล้กับแหล่งกำเนิดความร้อน เช่น เตาแก๊ส เตาอบ ฯลฯ


ควรติดตั้งผลิตภัณฑ์นี้ไว้ในตำแหน่งที่สามารถทำความสะอาดและบำรุงรักษาได้ง่าย

ต้องให้แน่ใจว่าตำแหน่งที่เลือกนั้นสามารถรองรับน้ำหนักของตัวเครื่องพร้อมกับน้ำได้ (น้ำหนักรวมประมาณ 10 กก.)

อย่าติดตั้งผลิตภัณฑ์นี้ในพื้นที่ปิดหรือตู้


การติดตั้งบนผนัง (ตัวเลือก)

วางทาบกระดาดแม่แบบกับผนังที่ความสูงที่ต้องการ โดยตรวจสอบให้แน่ใจว่าได้ระนาบ จากนั้นเจาะรูโดยใช้เครื่องมือที่เหมาะสม



สอดสหมอตัดผนังสองตัว สวมแหวนสเปเซอร์เข้ากับสกรู แล้วขันสกรูเข้าไปในสมจนกระทั่งแน่น

แขวนขอเกี่ยวที่ด้านหลังเครื่องกรองน้ำดื่มเข้ากับสกรูเพื่อยึดเครื่องกรองน้ำดื่มไว้ ตรวจสอบให้แน่ใจว่าได้ระดับ

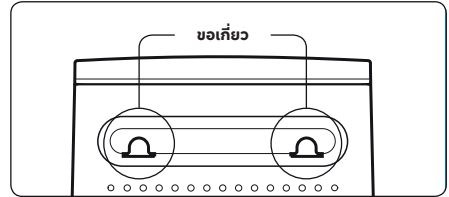


ข้อควรระวัง


เมื่อเลือกติดตั้งเครื่องบนผนัง ไม่แนะนำให้วาง
ภาชนะที่มีน้ำหนักมากกว่า 1 กก. ไว้บนถาดรองน้ำ

คำแนะนำในการติดตั้ง


1. ปิดการจ่ายน้ำในสถานที่ติดตั้งเครื่อง และถ้าจำเป็น ให้ตัดเป้นพ่นเกลียวเข้ากับท่อที่จะต่อกับข้อต่อ 3/4"

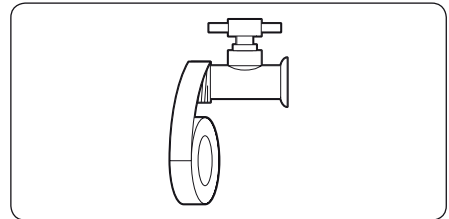

2. ต่อก่อน้ำเข้ากับข้อต่อ 3/4"

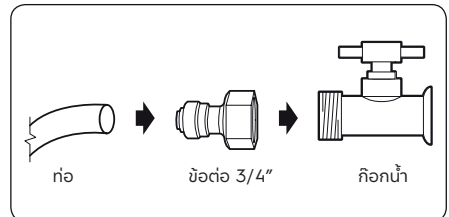


3. สวมท่อน้ำเข้าไปในทางน้ำเข้าของเครื่อง โดยให้
เครื่องหมายกำหนดตำแหน่งตรงกับขอบของข้อต่อ
ตรวจสอบให้แน่ใจว่าท่อน้ำไม่บิดงอและต่อเข้ากับ
ตัวล็อกสีน้ำเงิน

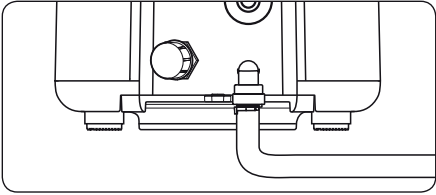


อุปกรณ์เสริม


สามารถติดตั้งเครื่องกรองน้ำดื่มโดยใช้สวิตช์
ก๊อกน้ำได้

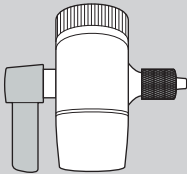


ติดเทปกันความร้อน (Teflon)* เข้ากับสวิตช์ก๊อกน้ำ
จากนั้นติดตั้งสวิตช์ก๊อกน้ำเข้ากับก๊อกน้ำโดยการหมุน
สวิตช์ก๊อกน้ำในทิศทางตามเข็มนาฬิกาจนแน่นหนา
* เทปกันความร้อน (Teflon) ไม่ได้ให้รวมมากับ
ผลิตภัณฑ์

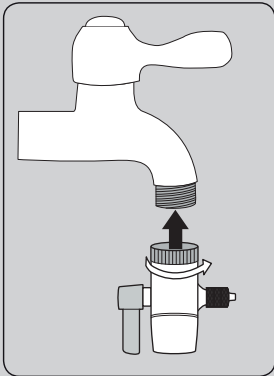


ต่อท่อน้ำของเครื่องกรองน้ำดื่มเข้ากับสวิตช์ก๊อกน้ำ
ที่ถอดน๊อตออกแล้ว โดยสอดท่อน้ำผ่านน๊อต แล้วขัน
น๊อตกลับเข้าที่เดิม







สับสวิตช์ไปที่ตำแหน่งเปิดเพื่อให้น้ำไหลผ่านเข้าไปใน
เครื่องกรองน้ำดื่ม
 เมื่อจำเป็นต้องใช้น้ำจากก๊อกน้ำ ให้สับสวิตช์ไปอีกร่าง
เพื่อให้ไหลผ่านก๊อกน้ำ เมื่อคุณใช้งานก๊อกน้ำเสร็จแล้ว
ขอแนะนำให้สับสวิตช์กลับไปที่ตำแหน่งเปิดเพื่อให้น้ำ
ไหลเข้าไปในถังเก็บน้ำของเครื่องกรองน้ำดื่ม
 (ถังเก็บน้ำเย็นและถังเก็บน้ำร้อน)
 * เพื่อป้องกันการอุดตันเนื่องจากการสะสมตัวของ
แร่ธาตุในน้ำ ขอแนะนำให้ทำความสะอาดและบำรุง
รักษาเครื่องกรองน้ำดื่มเป็นประจำ


4. สอดใส่กรองแท่งของอีเลคโตรลักซ์เข้าไป หมุนตามเข็
มนาฬิกาจนกระทั่งเข้าล็อกหรือได้ยินเสียงคลิก ตรวจสอบ
ให้แน่ใจว่าเครื่องหมาย ELECTROLUX อยู่กลางจอ
แสดงผลด้านหน้า

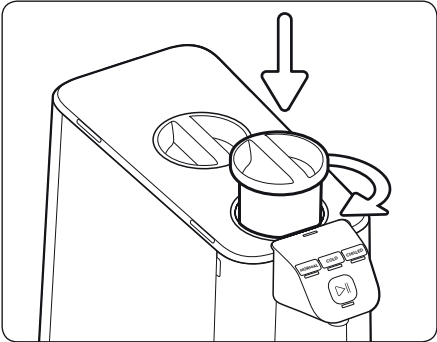

5. เสียบปลั๊กไฟของเครื่องเข้ากับเต้ารับ

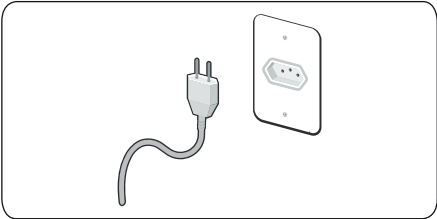

6. กดปุ่ม RESET FILTER ค้างไว้ 3 วินาที จนกว่าไฟแสดงสถานะสีแดงบนแผงควบคุมจะพริบ ไฟเตือนไส้กรองบนแผงด้านหน้าจะพริบ 3 ครั้ง


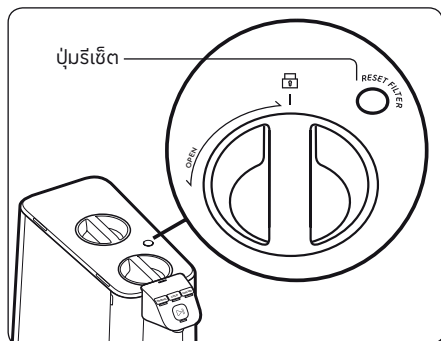


7. เลือกปุ่ม CHILLED แล้วกดปุ่มกลาง  เพื่อเริ่มต้นจ่ายน้ำ รอจนกระทั่งน้ำไหลอย่างต่อเนื่อง

8. ทำความสะอาดถังเก็บน้ำ (โปรดดูหัวข้อ 8) เพื่อสิ้นสุดการทำงานและเริ่มต้นใช้งานเครื่อง

สิ่งสำคัญ

- ดูแลความสะอาดของถาดรองน้ำอยู่เสมอและปราศจากน้ำ
- ตรวจสอบให้แน่ใจว่าสายน้ำเข้าไม่บิดงอและตัวล็อกป้องกันเด็กเชื่อมต่ออย่างถูกต้อง

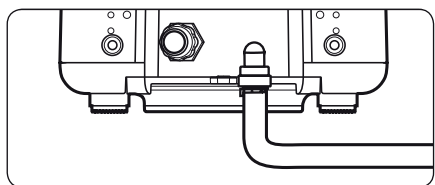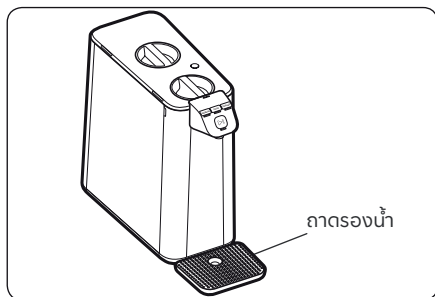

6. การทำความสะอาดและการบำรุงรักษา

ข้อควรระวัง



ห้ามทำความสะอาดเครื่องกรองน้ำดื่มด้วยของเหลวไวไฟ เช่น แอลกอฮอล์ น้ำมันก๊าด น้ำมันเบนซิน ทินเนอร์ สารละลาย สารเคมี หรือผลิตภัณฑ์ที่มีฤทธิ์


กัดกร่อน เช่น น้ำยาทำความสะอาด กรด หรือผลิตภัณฑ์ที่อาจถึงกลิ่นไว้ ต้องถอดปลั๊กไฟของเครื่องกรองน้ำดื่มออกทุกครั้งก่อนทำงานบำรุงรักษาหรือเมื่อจะไม่ใช้งานเป็นเวลานาน

ทำความสะอาดตัวเครื่องกรองน้ำดื่มด้านนอกโดยใช้น้ำผสมน้ำยาทำความสะอาดที่มีฤทธิ์อ่อนๆ


ห้ามเช็ดทำความสะอาดตัวเครื่องกรองน้ำดื่มด้านนอกโดยใช้ผ้านุ่มที่สะอาด

7. การเปลี่ยนไส้กรอง


1. ปิดวาล์วตัดการจ่ายน้ำแล้วถอดปลั๊กไฟออก ถอดกระบอกสารกรองน้ำที่ใช้แล้วออกโดยการหมุนทวนเข็มนาฬิกา

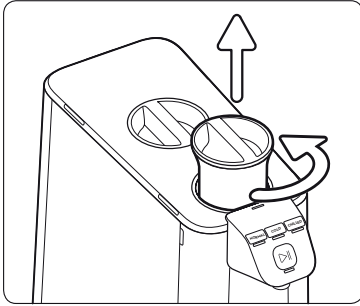

2. สอดกระบอกสารกรองน้ำแบบถาวรอิเล็กทรอนิกส์ตัวใหม่เข้าไป หมุนตามเข็มนาฬิกาจนกระทั่งเข้าล็อกหรือได้ยินเสียงคลิก ตรวจสอบให้แน่ใจว่าเครื่องหมาย ELECTROLUX อยู่กลางจอแสดงผลด้านหลัง

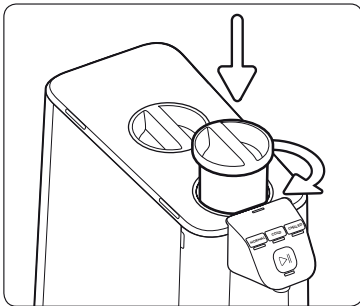

3. กดปุ่ม RESET FILTER ค้างไว้ 3 วินาที จนกว่าไฟแสดงสถานะสีแดงบนแผงควบคุมจะพริบ

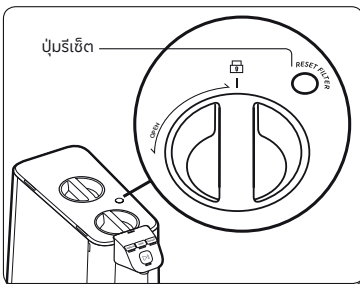


4. เปิดวาล์วตัดการจ่ายน้ำ เลือกปุ่ม COLD เริ่มการจ่ายน้ำ จากนั้นรอจนกระทั่งน้ำเริ่มไหลออกมา กดปุ่มใดปุ่มหนึ่งเพื่อหยุดการไหลของน้ำ ปลดปล่อยให้น้ำไหลออกมาประมาณ 1 ลิตร


ทำความสะอาดถังเก็บน้ำเพื่อสิ้นสุดการบำรุงรักษาและเพื่อให้ได้น้ำที่สะอาด

8. การทำความสะอาดถังเก็บน้ำ


1. สำหรับวิธีการฆ่าเชื้อเครื่อง ให้เปิดฝาทังเก็บน้ำแล้วใส่น้ำ/ผงคลอรีนที่เจือจางแล้ว 1 ช้อนชา ในน้ำ 50 มล. ปิดฝาทังแล้วรอ 30 นาที

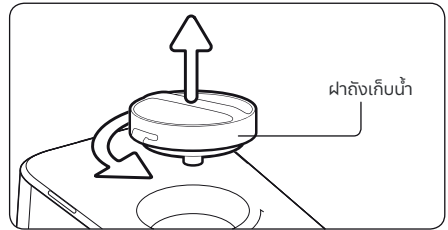


2. หมุนคลายฝาปิดช่องระบายน้ำ ถอดปลั๊กซิลิโคนออกแล้วใช้ภาชนะรองน้ำวางเตรียมไว้ จากนั้นระบายน้ำในถังเก็บน้ำออกให้หมด ใสฝาทังกลับที่เดิม

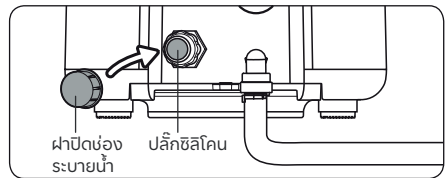


3. หลังจากทำความสะอาดเสร็จแล้ว ถ้าจำเป็นให้ตัดส่วนท่อน้ำที่มี "รอยขีดข่วน" จากการติดตั้งครั้งก่อนออก สำหรับวิธีการถอดท่อน้ำออกจากเครื่อง ให้ดันท่อน้ำเข้าไปด้านในเครื่อง กดที่ขอบของข้อต่อสวมนเร็ว และดึงท่อน้ำออก วัดระยะจากปลายท่อน้ำที่เชื่อมต่อกับเครื่องไป 17 มม. อีกครั้ง แล้วปฏิบัติตามคำแนะนำในการติดตั้งโดยต้องไม่สัมผัสตัวล็อกป้องกันเด็ก

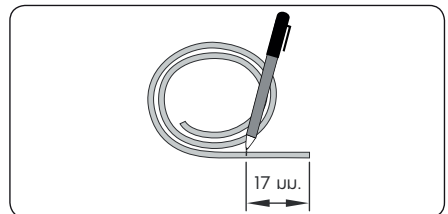

4. สิ่งสำคัญ เมื่อต้องการจบการทำงาน ให้เปิดวาล์วตัดการจ่ายน้ำและปล่อยให้น้ำเย็น (COLD) ไหลออกมา 5 ลิตร

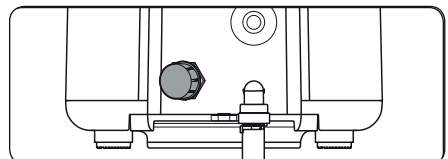

5. เรียบร้อย! ขณะนี้ เครื่องกรองน้ำดื่มอิเล็กทรอนิกส์
ของคุณพร้อมใช้งานแล้ว

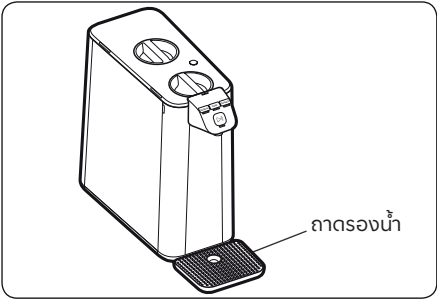


สิ่งสำคัญ

- ทำความสะอาดแผ่นกรองอากาศ และหมั่นทำความสะอาดเป็นประจำ

การทำความสะอาดและการเปลี่ยนแผ่นกรองอากาศ

แผ่นกรองอากาศติดตั้งอยู่ที่ด้านหลังของเครื่อง ควรตรวจสอบสภาพทุก 6 เดือน ถ้ามีฝุ่นหรือสิ่งสกปรกอุดตัน ให้ล้างแผ่นกรองอากาศด้วยน้ำและสบู่ แล้วเช็ดให้แห้งสนิท ถ้าแผ่นกรองอากาศชำรุดเสียหายหรืออีกขาด ให้เปลี่ยนใหม่ กรุณาติดต่อศูนย์บริการที่ได้รับอนุญาตจากอิเล็กทรอนิกส์

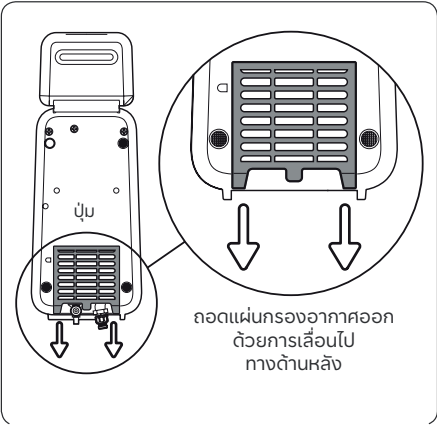

9. การแก้ไขปัญหา

คำแนะนำในการแก้ไขปัญหา

ถ้าเครื่องกรองน้ำดื่มมีปัญหาในการทำงาน ก่อนติดต่อศูนย์บริการที่ได้รับอนุญาต ให้คุณตรวจสอบตามตารางการแก้ไขปัญหาเพื่อดูว่า ปัญหาดังกล่าวสามารถแก้ไขได้ด้วยตนเองอย่างง่าย ๆ หรือไม่ หรือเป็นปัญหาจากการใช้งานเครื่องที่สามารถแก้ไขได้อย่างรวดเร็วหรือไม่

หากวิธีการแก้ไขปัญหานั้นแนะนำไว้ไม่ได้ผล กรุณาติดต่อศูนย์บริการอิเล็กทรอนิกส์ใกล้บ้านคุณ โดยดูรายละเอียดข้อมูลการติดต่อได้จาก www.electrolux.co.th หรือติดต่อศูนย์บริการศูนย์บริการอิเล็กทรอนิกส์

ปัญหา	สาเหตุที่เป็นไปได้	วิธีแก้ไข
ไม่ทำงาน / ไม่เปิดทำงาน	ยังไม่ได้เสียบปลั๊กไฟเข้ากับเต้ารับ เต้ารับชำรุด ไฟดับ เบรกเกอร์ทำงาน หรือฟิวส์ขาด	เสียบปลั๊กไฟเข้ากับเต้ารับ แก้ไขปัญหাতে้ารับ รอให้ไฟฟ้ากลับมาเป็นปกติ ยกเบรกเกอร์ขึ้นหรือเปลี่ยนฟิวส์
มีน้ำหยดลงมา	แรงดันน้ำสูงเกินไป มีอากาศในท่อน้ำ	ปรับแรงดันน้ำให้ไม่เกิน 50 mca (490.5 kPa) ตรวจสอบระบบสูบน้ำ
คุณภาพน้ำต่ำ	ไม่ได้ใช้งานเครื่องกรองน้ำดื่มมานานเกิน 3 วัน มีกลิ่นออกมาจากท่อน้ำของเครื่อง เครื่องกรองน้ำดื่มแสดงสัญญาณเตือนให้เปลี่ยนไส้กรองแก๊ซของอิเล็กทรอนิกส์	จ่ายน้ำออกประมาณ 10 ลิตร ก่อนต้มน้ำตามปกติอีกครั้ง ทำความสะอาดเครื่องตามคำแนะนำในหัวข้อ 8 เปลี่ยนไส้กรองแก๊ซของอิเล็กทรอนิกส์
มีน้ำรั่วซึม	จุดต่อท่อน้ำหลวม	ตรวจสอบให้แน่ใจว่าจุดต่อท่อน้ำของเครื่องกรองน้ำดื่มขันแน่นหนาแล้ว
ไม่มีน้ำไหลออกมา	ไส้ไส้กรองแก๊ซของอิเล็กทรอนิกส์ไม่ถูกต้อง แรงดันน้ำต่ำ ไฟดับ ไส้กรองเต็ม	ไส้ไส้กรองใหม่ให้ถูกต้อง ปรับแรงดันน้ำให้สูงกว่า 4 mca (39 kPa) รอให้ไฟฟ้ากลับมาเป็นปกติ เปลี่ยนไส้กรอง
น้ำไม่เย็น	ไม่มีน้ำเหลืออยู่ในถังเก็บน้ำสำหรับน้ำเย็น	ระบบทำความเย็นของเครื่องกรองน้ำดื่มแบบอิเล็กทรอนิกส์ต้องใช้เวลาเติมน้ำและทำความเย็นไม่เกินสองชั่วโมงครั้ง ถังนี้ขึ้นอยู่กับปัจจัยต่างๆ เช่น อุณหภูมิห้อง อุณหภูมิในที่เข้าเครื่อง และความถี่ในการกดน้ำ
มีเสียงดัง	เครื่องมีเสียงดังหลังจากจ่ายน้ำเย็น	มอเตอร์พัดลมจะทำงานที่ความเร็วสูงหลังจากจ่ายน้ำเย็น เพื่อรักษาอุณหภูมิของน้ำให้คงที่ ผลตกกันนี้ยังมีตัวควบคุมแรงดันน้ำภายในสำหรับควบคุมการไหลของน้ำ

10. ข้อกำหนดทางเทคนิค

รุ่น		EPWE2MEUOG
ความกว้าง (มม.)		160
ความสูง (มม.)		350
ความลึก (มม.)		420
น้ำหนักของเครื่องกรองน้ำดื่ม (กก.)		4.5
แรงดันไฟฟ้า (โวลต์)		100 - 240
กำลังไฟฟ้า (วัตต์)		90
ความถี่ (เฮิร์ตซ์)		50
แรงดันน้ำ (kPa)		39.23 - 392.26 kPa
ระดับการป้องกัน		IPX0 (สำหรับใช้งานในอาคาร)
สี		สีเทา
ประสิทธิภาพการทำความเย็น (ลิตร/ชั่วโมง)*		0.24
ปริมาตรของถังเก็บน้ำเย็น (มล.)		800
แรงดันน้ำขาเข้าสูงสุด (MPa)		0.4
แรงดันน้ำขาเข้าต่ำสุด (MPa)		0.04
ระบบกรอง	อายุการใช้งานของไส้กรองแท้ของโอเลคโตรลิกซ์	3,000 ลิตร หรือ 6 เดือน อย่างใดอย่างหนึ่งถึงก่อน
อุณหภูมิน้ำที่ใช้งาน: ต่ำสุด 4°C / สูงสุด 38°C ความจุภายในสำหรับการทดสอบสารปนเปื้อนจากบรรจุภัณฑ์: 1.2 ลิตร ความจุอ่างอิงสำหรับการทดสอบอนุภาค: 400 ลิตร อัตราการไหลสูงสุด: 60 ลิตร/ชั่วโมง		

ข้อควรทราบ

ผลิตภัณฑ์นี้มีวัตถุประสงค์เพื่อนำไปใช้ในครัวเรือนและการใช้งานที่มีลักษณะใกล้เคียงกัน เช่น:

- พื้นที่ห้องครัวสำหรับพนักงานในร้านค้า สำนักงาน และพื้นที่ทำงานอื่นๆ
- ห้องอาหารในโรงแรม
- บุฟเฟต์ และการใช้งานในลักษณะเดียวกัน ที่ไม่ใช้การขายปลีก

www.electrolux.co.th



บริษัท อีเลคโตรลักซ์ ประเทศไทย จำกัด

+662 725 9000

อาคาร อีเลคโตรลักซ์ 1910 ถนนเพชรบุรีตัดใหม่

แขวงบางกะปิ เขตห้วยขวาง กรุงเทพฯ 10310 ประเทศไทย





EPWE2MEUOG

WATER PURIFIER

USER MANUAL

User Manual

CONGRATULATIONS! You are a valued customer who has just acquired an Electrolux product of world-class quality, featuring a modern and sleek design, as well as the most advanced technology. Within this manual, you will discover all the necessary information to ensure your safety and to properly utilize your Water Purifier. *Please thoroughly read all instructions prior to utilizing the product, and retain this manual for future reference.*

IMPORTANT

Kindly retain the purchase invoice for the appliance, as the warranty service will only be applicable upon presentation to an Authorized Electrolux Service Center.

The identification label will be utilized by the Electrolux Authorized Service Center in the event that your Purifier requires repairs. Refrain from removing the label from its designated location.

Environmental Tips



The packaging material is recyclable. Please separate plastics, paper, and cardboard, and send them to recycling companies.

This equipment cannot be treated as household waste and should be disposed of through a system for recycling electrical and electronic equipment in compliance with local regulations.

Contents

1. Safety	2
2. Appliance Description	3
3. Appliance Features	4
4. How to use	4
5. Installation	5
6. Cleaning and Maintenance	8
7. Filter Replacement	8
8. Tank Cleaning	9
9. Troubleshooting	10
10. Technical Specifications	11

1. Safety

Read all instructions before using the appliance. It is important to keep this instruction manual for future reference.

CAUTION

These instructions are provided for your safety. You MUST carefully read the manual before installing or using the appliance.

This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Never leave candles or incense burning on the appliance, as this may cause fires.

Attention to Children

Prevent accidents. After unpacking the Purifier, keep the packaging material out of reach of children.

Do not allow children to play with the Purifier, even when it is turned off.

Children should be supervised to ensure that they do not play with the appliance.

User/ Installer

Always disconnect the Purifier from the outlet before cleaning or maintaining the product.

Never unplug the Purifier by pulling the power cord. Use the plug.

Do not pinch, twist, or tie the power cord.

If the power cord is damaged, contact Authorized Electrolux Service for replacement to avoid risks.

To prevent electric shock, do not touch the power cord with wet hands.

Never attempt to repair the Purifier. Always consult Authorized Electrolux Service and insist on using original parts for replacement. If there are damaged parts, visit Authorized Electrolux Service to purchase only original parts and accessories for replacement.

Inspect water connections frequently. Under normal usage conditions, the connection hose should be replaced once a year.

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

WARNING: To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.

This appliance is intended to be used in household and similar applications such as – staff kitchen areas in shops, offices and other working environments;
 – farm houses and by clients in hotels, motels and other residential type environments;
 – bed and breakfast type environments;
 – catering and similar non-retail applications.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.



WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.


CAUTION

This appliance has been designed to purify and chill potable water that meets current legislation. Do not use it to chill any other type of beverage, as this could damage the appliance and result in voiding the warranty. This Water Purifier is intended for domestic use.

2. Appliance Description

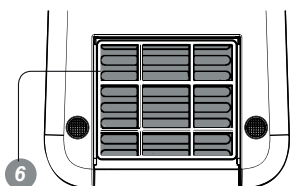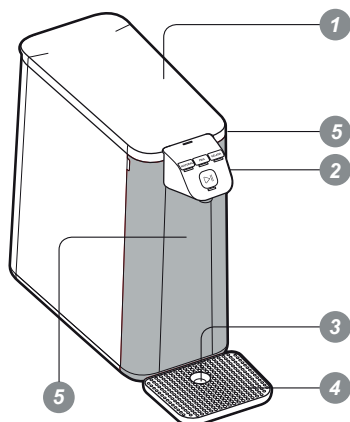


Bottom View

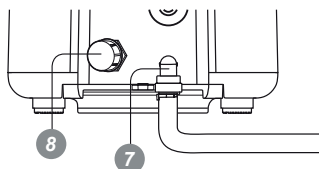

- 1 Filter cap and reservoir
- 2 Control panel
- 3 Drip tray grid (removable)
- 4 Drip tray (removable)
- 5 Removable front panel
- 6 Air filter
- 7 Water inlet
- 8 Drain

Accessories

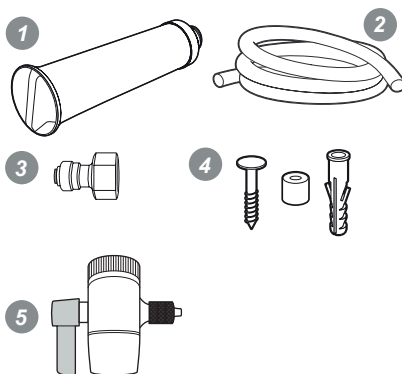

- 1 Original Electrolux Filter
- 2 1/4" Hose
- 3 3/4" Adapter
- 4 Screws and wall plugs (2 pieces each)
- 5 Connector

3. Appliance Features

The Purifier produces a characteristic operating noise, meaning the fan will always remain operational. When it's detected that the water is cold, the fan's rotation should decrease, but it should never turn off completely.

The accumulation of dust on the product might give the impression of louder operational noise. Therefore, it's suggested to clean the air filter as described on page 9.

This product features a pressurizer that emits a characteristic noise when activated.

Filtration System

The Original Electrolux filter cartridge for the purifier consists of two stages of materials that purify the water. The filter cartridge's lifespan is 3000 liters or 6 months, whichever comes first. Within this timeframe, the Original Electrolux filter cartridge ensures water quality by removing impurities and excessive chlorine, while also preventing the growth of microorganisms.

The water flow rate of the product may gradually decrease as the filtering element becomes saturated or "aged". When this period has elapsed, the panel light will light, indicating that it's necessary to replace the filter.

First Stage – PP Filter

Removes sediments such as mud, sand, rust, algae, fungi, and suspended particles of iron and other metals, salt, etc.

Second Stage – Activated Carbon with silver ions


Absorbs and removes color, odors, chlorine, oil, and dissolved gases in large quantities, while also preventing the growth of microorganisms.

Cooling System

These Purifiers utilize a cooling system in which the temperature of the chilled water can vary depending on the room temperature. The time required to reach the minimum temperature can be up to 2 hours, depending on the external temperature and water consumption. The capacity of the chilled water reservoir is approximately 800ml. If this volume is depleted, it will be necessary to wait for the reservoir to refill and for the cooling system to activate again in order to obtain chilled water once more.

4. How to Use

Control Panel

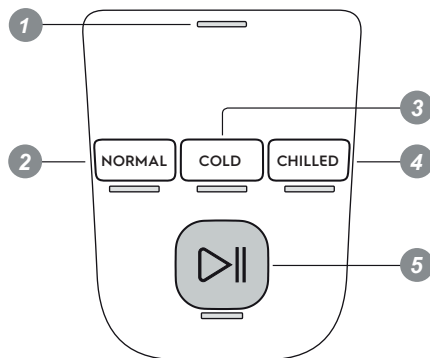

- 1 Indicator for changing the Original Electrolux Filter
- 2 Button to select NORMAL water
- 3 Button to select COLD water
- 4 Button to select CHILLED water
- 5 Button to start/stop the water flow

Operation

When the appliance is connected to the power supply, all the LEDs on the panel will remain lit for 3 seconds and then turn off.

To dispense water:

1. Select the desired temperature button;
2. Then, press the button  once to dispense water. To interrupt the water flow, press any button on the panel. Alternatively, hold down button  until the desired volume is reached, then release it to interrupt the water flow. The purifier has a safety feature that automatically stops the water flow after 1 minute.

Sleep Mode: After 8 seconds of inactivity, the panel will enter Sleep Mode, reducing the brightness of the last activated temperature.

After use, the water selection LED remains dimly lit to indicate the last water selection made.

Energy Saving Mode: If you wish to turn off the panel lights, press the NORMAL and CHILLED buttons simultaneously for 2 seconds. This mode will keep the panel off in sleep mode.

5. Installation

For your convenience, Electrolux has a network of highly qualified Authorized Services to install your Purifier. If you are interested, please contact one of the Authorized Electrolux Services listed on the website www.electrolux.co.th. A installation fee will be charged for this service, which will be provided by the selected Authorized Electrolux Service at the time of the request.

The installation performed by the Authorized Electrolux Service does not include site preparation services or materials for installation (e.g., masonry, electrical wiring, outlet, circuit breaker, grounding, plumbing, etc.), as these are the responsibility of the Consumer.

Place the Purifier on a flat surface and maintain a minimum distance as shown in the table below:

Position	Minimum Distance
Left Side	5 cm
Right Side	5 cm
Rear	10 cm
Top	22 cm

CAUTION

Before starting the installation, carefully read all the information below. They will assist you in carrying out the installation and ensuring that the Purifier is installed correctly and safely. Keep this Manual in an easily accessible place for future reference.

Installation Location

Do not install the Purifier in a place where there is direct sunlight exposure or near sources of heat such as a stove or oven.

The appliance should be installed in an easily accessible location for cleaning and maintenance purposes.

Ensure that the chosen location can support the weight of the appliance with water (approximately 10 kg).

Do not install the appliance inside enclosed niches or cabinets.


Wall Mounting (optional)

Place the paper template on the wall at the desired height, ensuring it is level, and drill holes using suitable equipment.



Insert the two wall anchors, attach the spacers to the screws, and secure the screws into the anchors until fully tightened.

Attach the hooks located on the back of the Purifier onto the screws to ensure proper mounting and verify that the product is level.

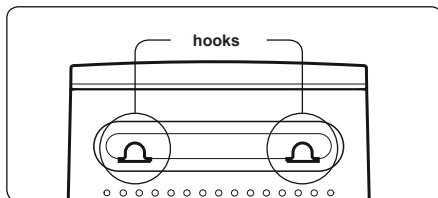


CAUTION


When wall-mounted, it is not recommended to place containers weighing more than 1 kg on the drip tray.

Installation Guide


1. Turn off the water supply at the installation site and apply thread seal tape, if necessary, to the pipe that will receive the $\frac{3}{4}$ " adapter.

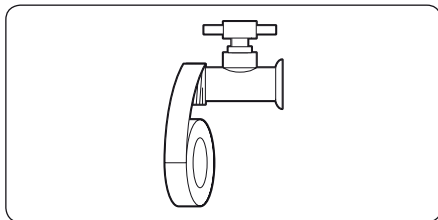

2. Attach the hose to the $\frac{3}{4}$ " adapter.

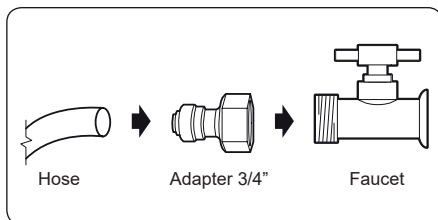


3. Place the hose into the water inlet of the product, ensuring that the mark aligns with the edge of the connector. Make sure the hose is not bent and connect the blue locks.

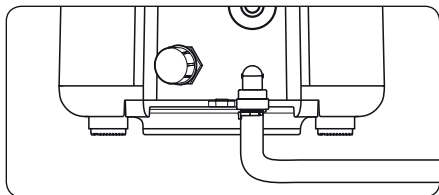


Optional Accessory


The water purifier can also be installed using a splitter.

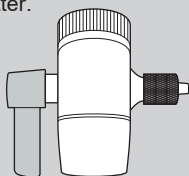


Apply *Teflon tape to splitter then fix the splitter on the end of the faucet by rotating the splitter in clock-wise direction until it is tight and compact
* Teflon tape is not included with the product.

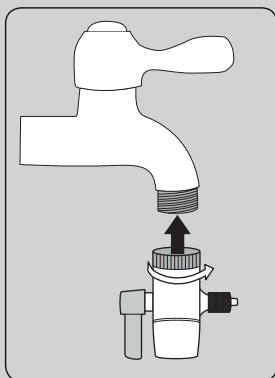

Connect the water purifier hose to the splitter removing the nut and threading it through the hose.



Closed




Open


Keep the switch in open position to let the water pass to the water purifier. When it is needed to use the water from the faucet, rotate the switch in the other direction so as to let the water pass through the faucet. When you are done using the faucet, it is strongly recommended to rotate the switch back to the open position to the water purifier so as to ensure that there is sufficient flow of water into the water purifier tank (cold and hot tank).

*To avoid clogging since accumulation of minerals on the water, it is strongly advised to carry out regular cleaning and maintenance of your water purifier.


4. Insert the Electrolux Original Filter, turning it clockwise until it locks or you hear a click. Ensure that the ELECTROLUX mark is centered on the front display.

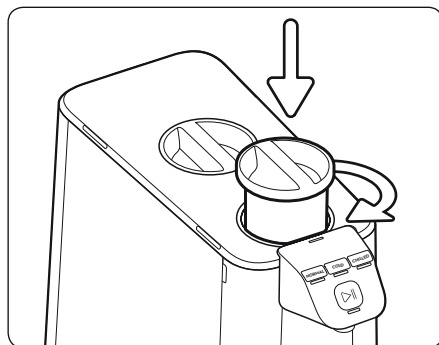

5. Plug the unit into an electrical outlet.

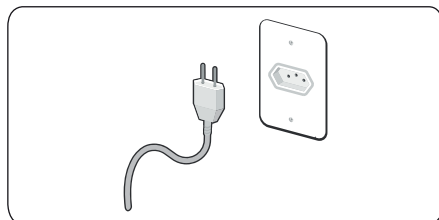

6. Press and hold the RESET FILTER button for 3 seconds until the red light flashes on the panel. The filter alert on the front panel will flash 3 times.


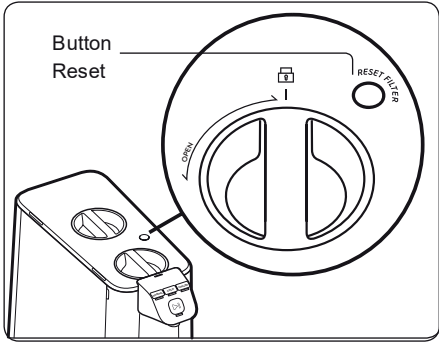


7. Select the CHILLED button and press the central button  to initiate water dispensing. Wait until water flows consistently.

8. Perform tank cleaning (refer to chapter 8) to finish and start using the product.

IMPORTANT

- Keep the drip tray clean and free of water.
- Ensure that the water inlet hose is not bent and that the safety locks are properly connected.

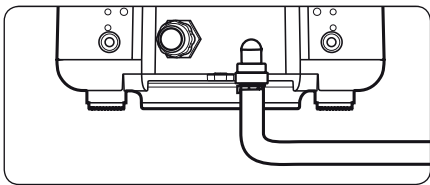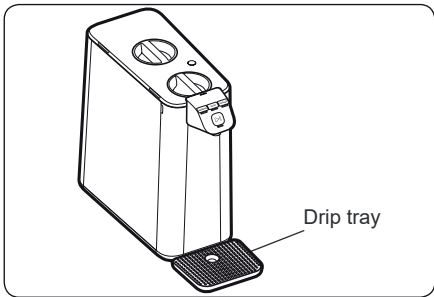

6. Cleaning and Maintenance

CAUTION




Never clean your Purifier with flammable fluids such as alcohol, kerosene, gasoline, thinner, solvents, chemicals, or abrasive products like detergents, acids, or products that may leave an odor. Always unplug your purifier for any maintenance or when leaving it unused for extended periods.

Clean the external part of the Purifier with water and mild detergent.


Regularly wipe the external part of the Purifier with a soft and clean cloth.

7. Filter Replacement


1. Close the water shut-off valve and unplug the appliance. Remove the used water purifier refill by turning it counterclockwise.

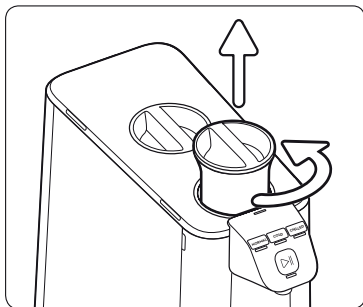

2. Insert the new Electrolux Original Refill, turning it clockwise until it locks or you hear a click. Ensure that the ELECTROLUX mark is centered on the front display.

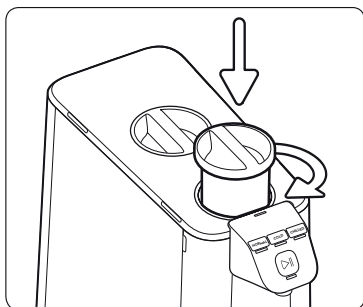


3. Press and hold the RESET FILTER button for 3 seconds until the red light flashes on the panel.

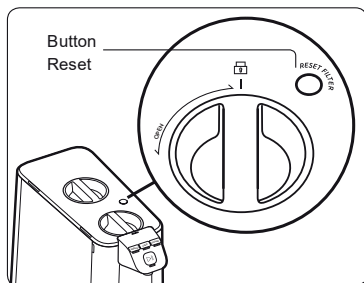


4. Open the water shut-off valve. Select the COLD button, initiate water flow, and wait until water starts flowing. Press any button to stop the flow. Allow approximately 1L of water to flow. To complete the maintenance and ensure purified water, perform tank cleaning.

8. Tank Cleaning


1. To sanitize the appliance, open the tank lid and add 1 teaspoon of diluted chlorine powder/solution in 50ml of water. Close the lid and wait for 30 minutes.

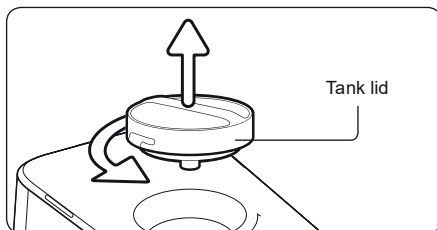


2. Unscrew the drain cap, remove the silicone plug, and, using a container, empty all the water from the tank. Replace the caps.

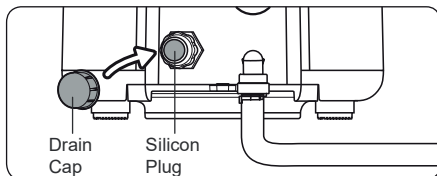


3. After the cleaning procedure, if necessary, trim a portion of the hose to remove the "scratched" section from the previous installation. To remove the hose from the appliance, push it inward, press the edge of the quick connector, and pull the hose. Once again, measure 17mm from the end connected to the appliance and proceed following the installation instructions, making sure to connect the safety locks.

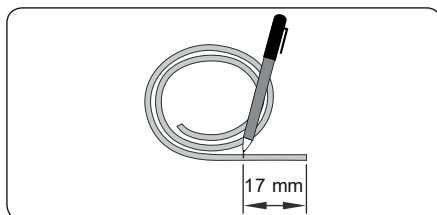

4. **IMPORTANT:** To finish, open the water shut-off valve and let 5L of COLD water flow.

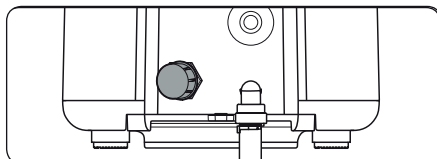

5. Done! Your Electrolux Water Purifier is now ready for use.

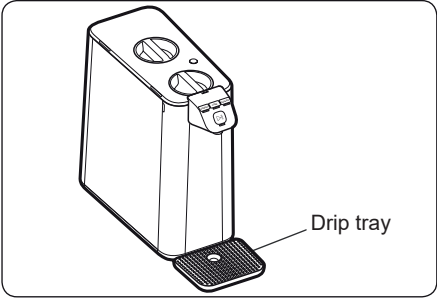


IMPORTANT

- Clean the air filter screen, keeping it consistently clean.

Cleaning and Replacement of the Air Filter

The air filter is located at the bottom of the appliance. It should be checked every 6 months for its condition. If it is clogged with dust or dirt, wash the screen with water and mild soap and then thoroughly dry it. If the air filter is damaged or torn, it should be replaced. Please contact Electrolux Authorized Service.

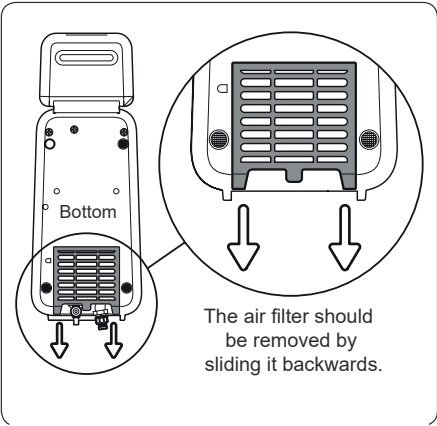

9. Troubleshooting

Troubleshooting Assistance

If your Water Purifier is experiencing any operational issues, before contacting the Authorized Service, please check the troubleshooting table to see if the cause of the problem can be easily resolved or if there might be an error in the appliance's usage that can be corrected quickly.

When the suggested solutions are not sufficient, please get in touch with the nearest Authorized Electrolux Service Center, using the contact details listed on www.electrolux.co.th, or contact the Electrolux Customer Service.

Issues	Probables Causes	Solutions
Does not operate / Does not turn on	Plug not connected to the outlet.	Plug in the appliance to the outlet.
	Faulty outlet.	Correct the electrical outlet issue.
	Power outage, circuit breaker tripped, or blown fuse.	Wait for the power to return, reset the circuit breaker, or replace the fuse.
Water dripping	Water pressure is too high.	Ensure that the water pressure is not above 50 mca (490,5 kPa).
	Air in the pipeline.	Check your plumbing system.
Low water quality	The appliance hasn't been used for more than 3 days.	Remove approximately 10 liters of water before consuming water again.
	Odor coming from the appliance's water pipeline.	Clean the product, according to chapter 8.
	Purifier indicating the need for replacement of the Original Electrolux Filter.	Replace the Original Electrolux Filter.
Water leakage	Loose tubing connection.	Ensure that the water tubing connections of the Purifier are securely fastened.
No water flow	Original Electrolux filter not properly inserted.	Correctly insert the filter.
	Low water pressure.	Ensure that the water pressure is above 4 mca (39 kPa).
	Power outage.	Wait for the power to be restored.
	Saturated filter.	Replace the filter.
Water does not get cold	Water tank for chilled water is empty	The electronic Peltier cooling system has a recovery time of up to two and a half hours, depending on factors such as room temperature, incoming water temperature, and frequency of use.
Noise	The product generates noise after dispensing cold water.	The fan motor operates at a higher speed after dispensing cold water to stabilize the water temperature. The product also has an internal pressurizer that aids in water flow.

10. Technical Specifications

Models		EPWE2MEUOG
Width (mm)		160
Height (mm)		350
Depth (mm)		420
Appliance Weight (kg)		4.5
Voltage (V)		100 - 240
Power (W)		90
Frequency (Hz)		50
Water Pressure (kPa)		39.23 to 392.26 kPa
Protection Class		IPX0 (for indoor use)
Color		Grey
Cooling Capacity (L/h)*		0.24
Cold Water Reservoir Volume (ml)		800
Max. inlet water pressure (MPa)		0.4
Min. inlet water pressure (MPa)		0.04
Filtration System	Original Electrolux Filter lifespan.	3000 liters or 6 months, whichever comes first.
Water usage temperature: minimum 4°C / maximum 38°C. Internal volume of the appliance for extractable tests: 1.2 liters. Reference volume for particulate testing: 400 liters. Maximum flow rate: 60 l/h		

NOTICE

This product is intended for household use and similar applications, such as:

- Kitchen use by staff in shops, offices, and other work environments.
- Half-board environments.
- Buffets and similar applications not intended for retail.

www.electrolux.co.th



Electrolux Thailand Co.,Ltd.
Phone +662 725 9000
1910 Electrolux Building, New Phetchaburi Road,
Bangkapi, Huai Khwang, Bangkok, Thailand, 10310

ANC A28102001

