
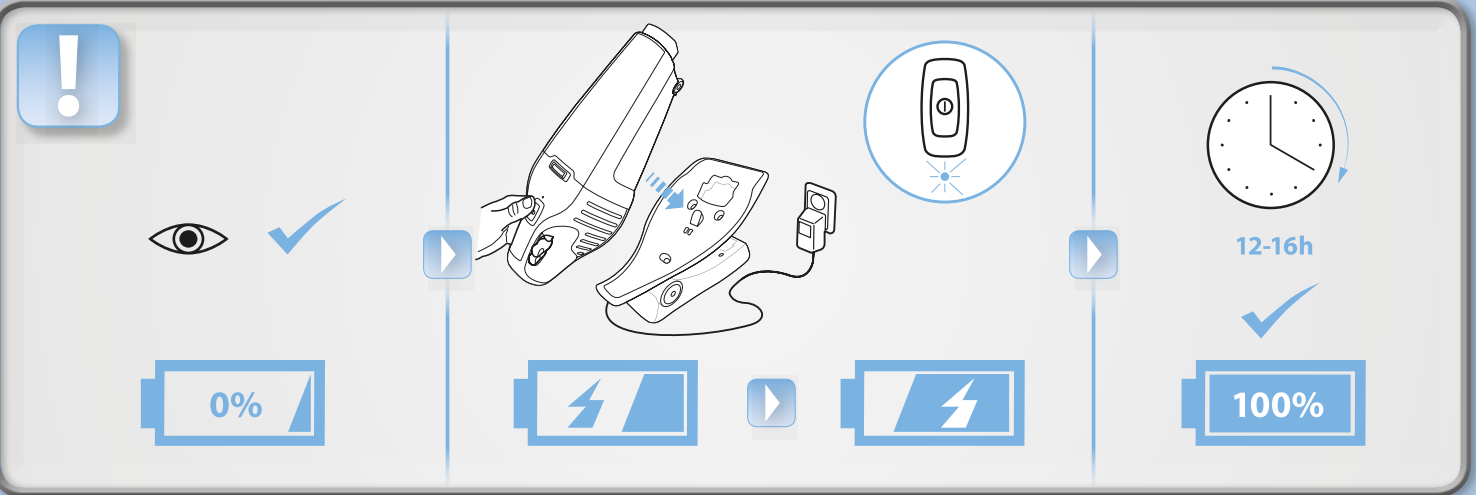
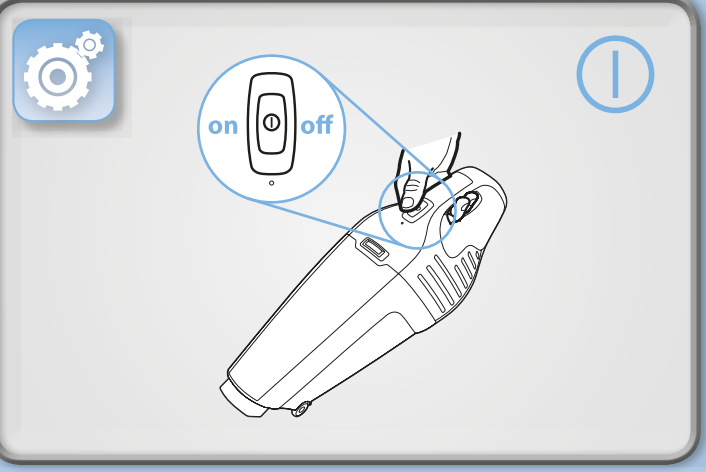
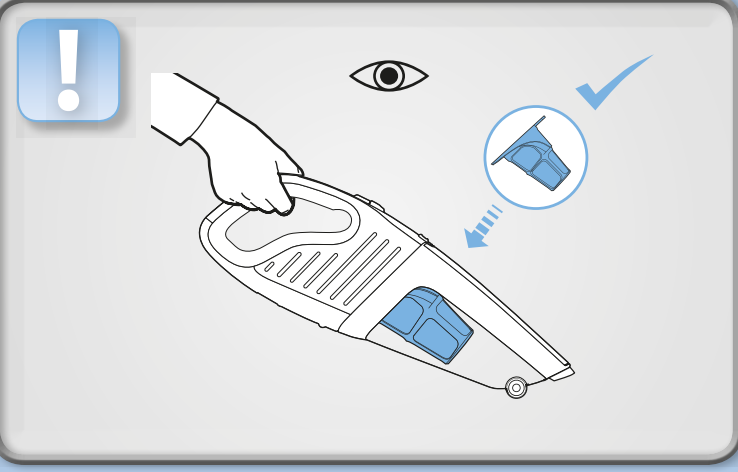
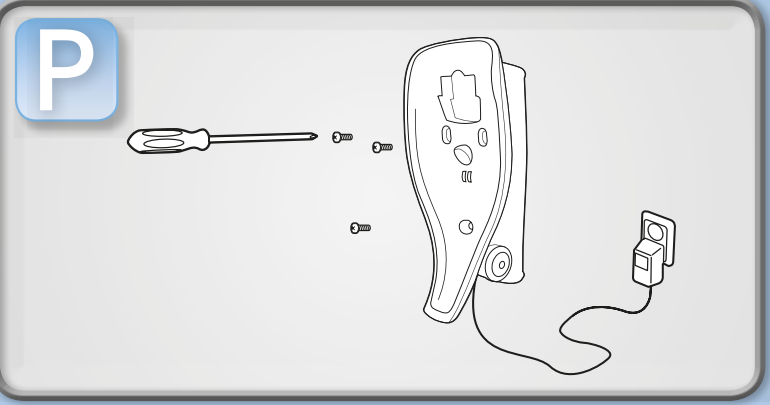
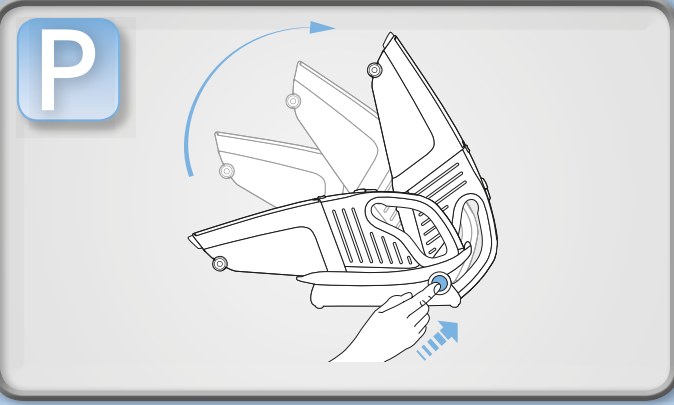


Electrolux rapido[®]
ZB5203SW

CH2010216

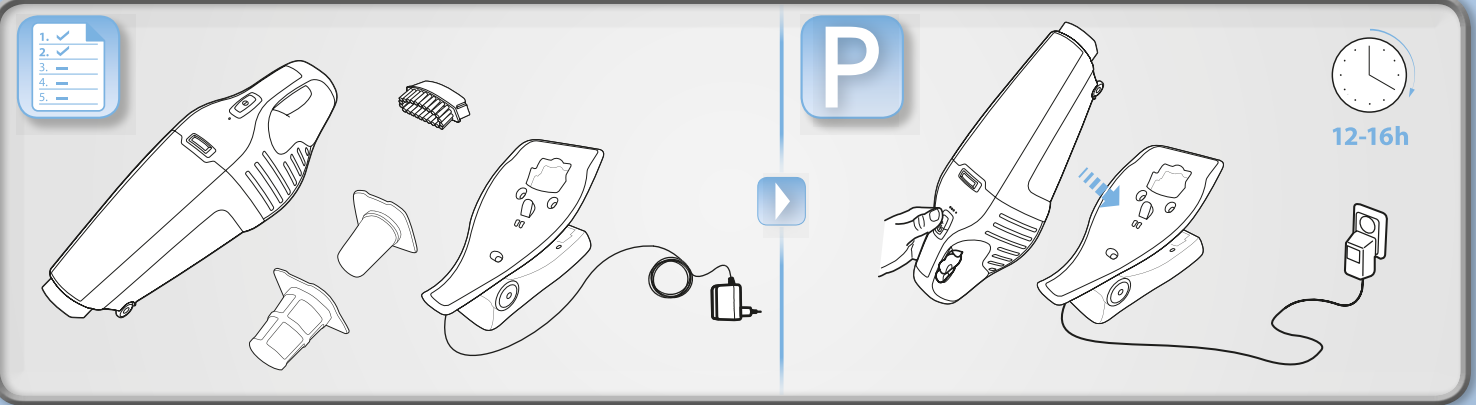

Safety precautions

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Cleaning and maintenance shall not be made by children without supervision.

Batteries must be removed from the appliance before it is scrapped.

The battery is to be disposed off safely.

Only use the charging adapter that was provided with the product.

The product should only be used for normal vacuuming indoors and in a domestic environment. Make sure it is stored indoors and in a dry place.

Packaging material, e.g. plastic bags should not be accessible to children to avoid suffocation.

The power must be shut off before cleaning or maintaining the vacuum cleaner.

คำเตือน

Never use the vacuum cleaner:

- In wet areas.
- Close to flammable gases, etc.
- When the product shows visible signs of damage.
- On sharp objects or fluids.
- On hot or cold cinders, lighted cigarette butts, etc.
- On fine dust, for instance from plaster, concrete, flour,hot or cold ashes.
- Do not leave the vacuum cleaner in direct sunlight.
- Never use the vacuum cleaner without its filters.
- When the wheels are blocked.

คำเตือน

Avoid exposing the vacuum cleaner to strong heat or freezing temperatures: To protect the motor, battery and electronics the product should not be operated in: an ambient temperature below 5 °C or exceeding 35 °C. A humidity level below 20% or exceeding 80% (noncondensing). Storage considerations to protect the battery and electronics; If the product is temporarily stored in a temperature below 5 °C or exceeding 35 °C, let the product cool down or warm up and dry for a few hours before usage. Dew condensation may form inside the product if the unit is moved from a cold to a warm environment.

The battery cells within must not be dismantled, short circuited or placed against a metal surface. Using the vacuum cleaner in the above circumstance may cause serious personal injury or damage to the product. Such injury or damage is not covered by the warranty.

All service or repairs must be carried out by an authorized service centre.

Batteries are components subject to wear and tear due to consumer use and natural degradation.

The cleaner must be taken to an Electrolux authorized service centre for battery replacement.

This warranty does not cover reduction in battery runtime due to battery age or use, as the life of the battery depends upon the nature of use.

Do not use a damaged cord. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped in water, take it to an authorized service centre before using. Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.







คำเตือน



Disposal

NB! Rapido® must not be connected to the charging station while you are removing the batteries.

- Make sure that the batteries are completely discharged.
- Remove the five screws and the bottom of the appliance.
- Carefully lift the vacuum cleaner cover.
- Cut the connecting cables and remove the batteries.

Used batteries should never be disposed of with normal household waste. These should always be taken to a recycling station.

Symbol description			
	List of components of the product		How to charge the product/Charging stand adjustment
	Attention/Charging logic		How to use the product
	How to empty/maintain the product		Product disposal/recycling

	This symbol on the product indicates that this product contains a built-in rechargeable battery which shall not be disposed with normal household waste.
	This symbol on the product or on its packaging indicates that the product may not be treated as household waste. To recycle your product, please take it to an offi cial collection point or to a service center that can remove and recycle the battery and electric parts in a safe and professional way. Follow your country’s rules for the separate collection of electrical products and rechargeable batteries.

ข้อควรระวังเพื่อความปลอดภัย

ผลิตภัณฑ์นี้ไม่ได้มีไว้สำหรับการใช้งานโดยบุคคล (รวมทั้งเด็ก) ที่มีสมรรถภาพทางกายภาพ ทางประสาทสัมผัส หรือความสามารถทางจิตใจ ไม่สมบูรณ์ หรือขาดประสบการณ์และความรู้ ยกเว้นจะได้รับการดูแลหรือคำแนะนำเกี่ยวกับการใช้ผลิตภัณฑ์จากผู้รับผิดชอบความปลอดภัย

บุคคลเหล่านี้

เด็กเล็กควรได้รับการดูแลเพื่อป้องกันไม่ให้เล่นกับผลิตภัณฑ์

ห้ามให้เด็กทำความสะอาดและบำรุงรักษาเครื่องโดยไม่ได้รับการดูแล

ต้องถอดแบตเตอรี่ออกจากอุปกรณ์ก่อนที่จะนำไปกำจัด

ต้องทิ้งแบตเตอรี่ด้วยวิธีการที่ปลอดภัย

ให้ใช้อะแดปเตอร์ชาร์จที่ให้มาพร้อมกับผลิตภัณฑ์เท่านั้น

ผลิตภัณฑ์นี้ใช้สำหรับการดูดฝุ่นปกติทั่วไปภายในบ้าน และควรใช้งานภายในอาคารเท่านั้น ต้องจัดเก็บเครื่องไว้ภายในอาคารและบริเวณที่แห้ง

เก็บวัสดุที่ใช้เป็นบรรจุภัณฑ์ เช่น ถุงพลาสติก ให้พ้นมือเด็กเพื่อป้องกันอันตรายจากการบาดอากาศหายใจ

ต้องปิดแหล่งจ่ายไฟก่อนทำความสะอาดหรือบำรุงรักษาเครื่องดูดฝุ่น

ห้ามใช้งานเครื่องดูดฝุ่น:

- ในบริเวณที่เปียก
- ใกล้กับก๊าซไวไฟ ฯลฯ
- เมื่อผลิตภัณฑ์มีร่องรอยความเสียหายที่สังเกตเห็นได้
- บนวัตถุมีคมหรือของเหลว
- บนถ่านไฟที่ร้อนหรือเย็นแล้ว, ก้นบุหรี่ที่ยังจุดติดไฟอยู่ ฯลฯ
- บริเวณที่มีฝุ่นละอองขนาดเล็กมาก เช่น จากปูนปลาสเตอร์, คอนกรีต, ผนัง, ซีเมนต์ที่ยังร้อนอยู่หรือเย็นแล้ว
- ห้ามปล่อยให้เครื่องดูดฝุ่นสัมผัสแสงแดดโดยตรง
- ห้ามใช้งานเครื่องดูดฝุ่นโดยที่ไม่มีเฟนกรอง
- เมื่อล้อหมุนถูกกีดขวาง

คำเตือน

หลีกเลี่ยงไม่ให้เครื่องดูดฝุ่นสัมผัสกับความร้อนสูงหรืออุณหภูมิยอกาแข็ง: ไม่ควรใช้งานผลิตภัณฑ์ในสภาพแวดล้อมที่มี: อุณหภูมิโดยรอบต่ำกว่า 5°C หรือสูงกว่า 35°C ระดับความชื้นต่ำกว่า 20% หรือสูงกว่า 80% (ไม่มีอน้ำ) เพื่อปกป้องมอเตอร์ แบตเตอรี่ และอุปกรณ์อิเล็กทรอนิกส์ ข้อควรพิจารณาในการจัดเก็บเพื่อป้องกันแบตเตอรี่และอุปกรณ์อิเล็กทรอนิกส์ หากจัดเก็บผลิตภัณฑ์ไว้ชั่วคราวในสภาพแวดล้อมที่มีอุณหภูมิต่ำกว่า 5°C หรือสูงกว่า 35°C ควรปล่อยให้ผลิตภัณฑ์เย็นลงหรืออุ่นขึ้นก่อน และรอให้แห้งสองถึงสามชั่วโมงก่อนใช้งาน หากเคลื่อนย้ายเครื่องจากบริเวณที่ยังเปียกบริเวณที่อุ่น อาจทำให้เกิดการควบแน่นเป็นหยดน้ำภายในผลิตภัณฑ์ ต้องไม่ถอดแยกขลสลับแบตเตอรี่ภายในตัวเครื่องออก ทำให้เกิดการสวิตจอร์ หรือวางบนพื้นผิวโลหะ: การใช้งานเครื่องดูดฝุ่นในสถานการณ์ข้างต้นอาจทำให้เกิดการบาดเจ็บที่รุนแรงหรือทำให้ผลิตภัณฑ์เกิดความเสียหายได้ การบาดเจ็บหรือความเสียหายดังกล่าวไม่ครอบคลุมอยู่ในการรับประกัน

ต้องให้ศูนย์บริการที่ได้รับอนุญาตเป็นผู้ดำเนินการบริการและการซ่อมแซมต่างๆ

แบตเตอรี่เป็นส่วนประกอบที่มีการสึกหรอตามการใช้งานและการเสื่อมสภาพตามธรรมชาติ

ต้องนำเครื่องดูดฝุ่นเข้ารับการเปลี่ยนแบตเตอรี่ที่ศูนย์บริการที่ได้รับอนุญาตจากอิลค์โทรลักซ์

การรับประกัน

การรับประกันนี้ไม่ครอบคลุมถึงระยะเวลาการใช้งานแบตเตอรี่ที่ลดลงเนื่องจากอายุของแบตเตอรี่หรือการใช้งาน เนื่องจากอายุการใช้งานของแบตเตอรี่จะขึ้นอยู่กับลักษณะการใช้งาน ห้ามใช้งานสายไฟที่ชำรุด หากเครื่องดูดฝุ่นไม่ทำงานตามปกติ ตัวเครื่องตกหล่น ได้รับความเสียหาย ถูกทิ้งไว้จนออกอากาศ หรือตกน้ำ ให้นำไปติดต่อที่ศูนย์บริการที่ได้รับอนุญาตก่อนใช้งาน ห้ามถอดปลั๊กโดยดึงที่สายไฟ ในการถอดปลั๊ก ให้จับที่ตัวปลั๊ก ไม่ใช่ที่สายไฟ







การทิ้งผลิตภัณฑ์

หมายเหตุ! ต้องตัดการเชื่อมต่อ Rapido® จากที่ตั้งเครื่องชาร์จในขณะที่ถอดแบตเตอรี่



- ตรวจสอบให้แน่ใจว่าแบตเตอรี่ไม่มีประจุไฟฟ้าหลงเหลืออยู่แล้ว
- ถอดสกรูห้าตัวและผ่าครอบด้านล่างตัวเครื่องออก
- ค่อยๆ ยกผ่าครอบเครื่องดูดฝุ่นขึ้น
- ถอดสายไฟแล้วถอดแบตเตอรี่ออก

ห้ามทิ้งแบตเตอรี่ที่ใช้งานแล้วรวมกับขยะทั่วไปภายในครัวเรือน ให้นำไปที่สถานีรีไซเคิลเสมอ

คำอธิบายสัญลักษณ์

	รายการส่วนประกอบของผลิตภัณฑ์		วิธีการชาร์จผลิตภัณฑ์/การปรับฐานชาร์จไฟ
	ข้อควรระวัง/ลอจิกการชาร์จ		วิธีการใช้งานผลิตภัณฑ์
	วิธีการทำความสะอาด/บำรุงรักษาผลิตภัณฑ์		การทิ้ง/รีไซเคิลผลิตภัณฑ์

การทิ้งผลิตภัณฑ์

	This symbol on the product indicates that this product contains a built-in rechargeable battery which shall not be disposed with normal household waste.
	This symbol on the product or on its packaging indicates that the product may not be treated as household waste. To recycle your product, please take it to an offi cial collection point or to a service center that can remove and recycle the battery and electric parts in a safe and professional way. Follow your country’s rules for the separate collection of electrical products and rechargeable batteries.